

add xovis alarm signal 2.png

add xovis alarm signal 2.png

- Datei
- Dateiversionen
- Dateiverwendung
- Metadaten



The screenshot shows the Wanzl configuration interface for adding a Xovis alarm signal. The interface is divided into several sections, each with a red box and a number indicating a specific configuration step:


- GateSignalXovis**: The main configuration section for the alarm signal.
- Name**: The name of the alarm signal, set to "XOVIS-Alarm".
- Enabled**: A toggle switch to enable or disable the alarm signal.
- Count Max**: The maximum count for the alarm signal, set to 0.
- Gate side**: The gate side, set to "NotSet".
- Policy do open**: The policy for opening the gate, set to 0.
- Open gate, ignore locked**: A toggle switch to enable or disable the "Open gate, ignore locked" option.
- Open gate speed, %**: The open gate speed, set to 100.
- Open gate angle, %**: The open gate angle, set to 100.
- Open gate timeout, ms**: The open gate timeout, set to 2000.
- Re-open gate delay, ms**: The re-open gate delay, set to 1800.
- Policy do close**: The policy for closing the gate, set to 0.
- Close gate speed, %**: The close gate speed, set to 100.
- Protect from soft close, Soft Alarm delay, ms**: The protect from soft close, set to 0.
- Soft Alarm Type**: The soft alarm type, set to "Unauthorized Access".
- Soft close was forbidden, Alarm delay, ms**: The soft close was forbidden, set to 60000.
- Close was forbidden, Alarm Type**: The close was forbidden, set to "Unauthorized Access".
- Protect from force close**: A toggle switch to enable or disable the "Protect from force close" option.
- Force close was forbidden, Alarm delay, ms**: The force close was forbidden, set to 1200.
- Delay to start closing the gate, ms (0 - 10000)**: The delay to start closing the gate, set to 0.
- Reject open**: The reject open, set to 0.
- Ignore reject open delay, after gate closed, ms**: The ignore reject open delay, set to 0.
- Alarm**: The alarm type, set to "2".
- Alarm Type**: The alarm type, set to "Unauthorized Access".
- Alarm delay, ms**: The alarm delay, set to 400.
- Action**: The action, set to 0.
- Action Type**: The action type, set to "NoAction".
- Counter**: The counter, set to 0.
- List of zones ("Gate side" and "Counter" must be set)**: The list of zones, set to "AlarmZone".
- List of lines ("Gate side" and "Counter" must be set)**: The list of lines, set to "AlarmZone".
- Camera XOVIS**: The camera, set to "XOVIS Camera".

Größe dieser Vorschau: 256 × 599 Pixel. Weitere Auflösungen: 102 × 240 Pixel | 1.131 × 2.647 Pixel.
Originaldatei (1.131 × 2.647 Pixel, Dateigröße: 107 KB, MIME-Typ: image/png)

Dateiversionen

Klicken Sie auf einen Zeitpunkt, um diese Version zu laden.

add xovis alarm signal 2.png

	Version vom	Vorschaubild	Maße	Benutzer	Kommentar
aktuell	13:22, 14. Mär. 20		1.131 × 2.647 (107 KB)	Anmelden (Diskussion Beiträge)	

- Du kannst diese Datei nicht überschreiben.

Dateiverwendung

Die folgenden 2 Seiten verwenden diese Datei:

- [Gate ~ FMCU ~ Benutzerhandbuch](#)
- [Gate ~ FMCU ~ Benutzerhandbuch/en](#)

Metadaten

Diese Datei enthält weitere Informationen, die in der Regel von der Digitalkamera oder dem verwendeten Scanner stammen. Durch nachträgliche Bearbeitung der Originaldatei können einige Details verändert worden sein.

Horizontale Auflösung	37,8 dpc
Vertikale Auflösung	37,8 dpc