

## People Counter Dashboard

<b>Inhaltsverzeichnis</b>	
1 Prepare KBOX A-330-RPI .....	1
1.1 Download image .....	1
1.2 Copy image to the Micro SD Card .....	1
2 Setup XOVIS cameras .....	2
2.1 Add XOVIS cameras .....	2
2.2 Change camera credentials .....	3
2.3 Delete API cameras. ....	3
2.4 Additional field designations. ....	3
3 Setup Areas .....	4
3.1 Add Areas .....	4
3.2 Delete Areas .....	6
4 Setup Relay Controllers .....	7
4.1 Add Relay Controllers .....	7
4.2 Delete Relay Controllers .....	8
5 Setup Output Signals of Relay Controller .....	8
5.1 Add Output Signals .....	8
5.2 Delete Output Signals .....	9
6 Upload files to the server .....	10
6.1 Add Files .....	10
6.2 Show uploaded image files. ....	10
6.3 Delete Files .....	11
7 Users .....	11
7.1 Add a user .....	11
7.2 Change user credentials .....	12
7.3 Delete a user .....	12
8 Change browser configuration .....	13
8.1 Reload browser configuration .....	13

### Prepare KBOX A-330-RPI

#### Download image

Version	Download Link
1.3.0.1	<a href="http://nas0.dnsalias.com:5000/sharing/wZzteL0s7">http://nas0.dnsalias.com:5000/sharing/wZzteL0s7</a>

#### Copy image to the Micro SD Card

1. Download an image from the table above
2. Extract an archive
3. Use utility **HDDRawCopy1.10Portable** from the archive to copy the image on the Micro SD Card

 
## Setup XOVIS cameras

### Add XOVIS cameras


1. To add a new XOVIS camera, you firstly need to select the \*Devices\*/ \*Geräte\* tab.




2. Click on the \*Add\*/ \*Hinzufügen\* button.




3. Here you should specify the camera URL.

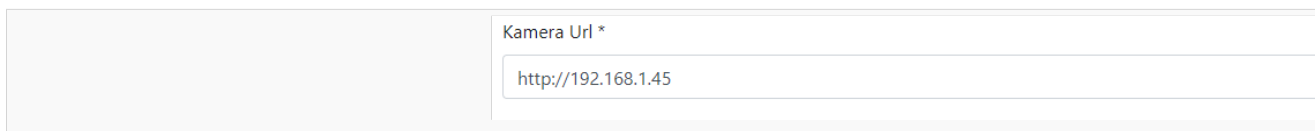The screenshot shows a form field labeled 'Kamera Url \*' with the text 'http://192.168.1.45' entered inside.


4. Specify a login to access the camera.

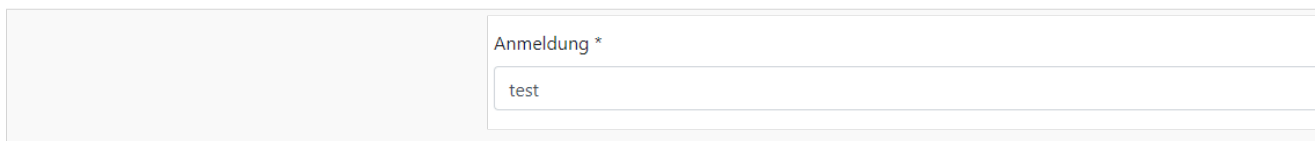The screenshot shows a form field labeled 'Anmeldung \*' with the text 'test' entered inside.


5. Specify a password to access the camera.

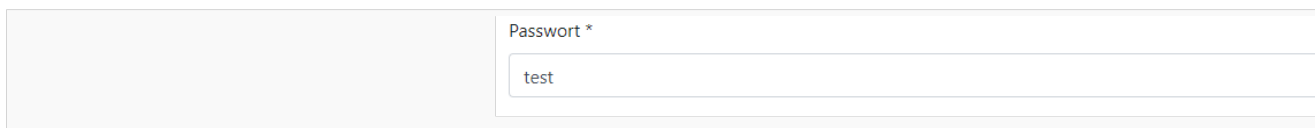The screenshot shows a form field labeled 'Passwort \*' with the text 'test' entered inside.

6. In this field specify the URL of your server (this field will be used for PUSH notification configuration on the camera side).

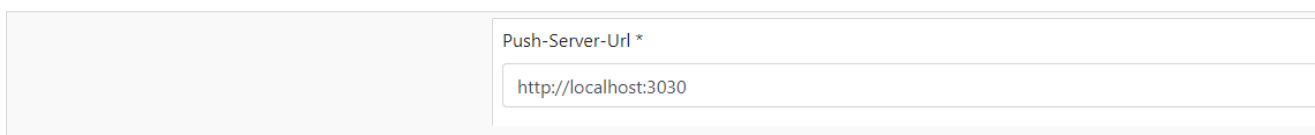
The screenshot shows a form field labeled 'Push-Server-Url \*' with the text 'http://localhost:3030' entered inside.

7. Save it.

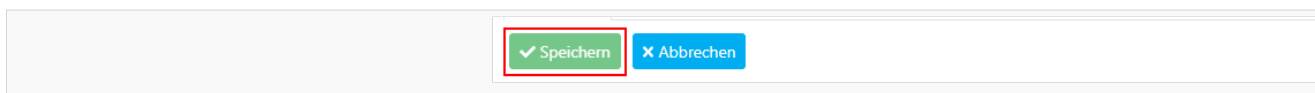The screenshot shows two buttons: a green button with a checkmark and the text 'Speichern' (highlighted with a red box), and a blue button with an 'X' icon and the text 'Abbrechen'.


## Change camera credentials

1. If you want to change camera data just click on the camera list area.

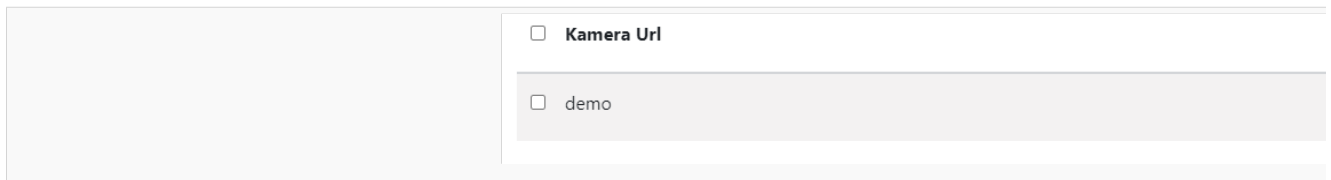

A screenshot of a camera list area. On the right side, there is a header "Kamera Url" with a checkbox. Below it, there is a list item "demo" with a checkbox. The list item is highlighted with a grey background.


2 Then click on the \*Edit\*/ \*Bearbeiten\* button.

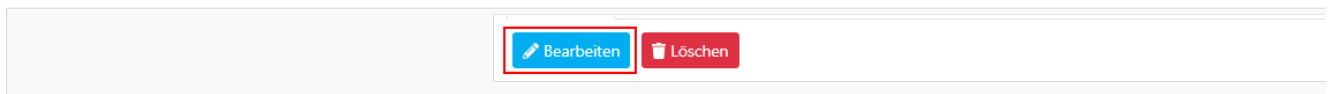

A screenshot of a camera list area. At the bottom right, there are two buttons: "Bearbeiten" (Edit) with a pencil icon and "Löschen" (Delete) with a trash icon. The "Bearbeiten" button is highlighted with a red border.

3. After that you can change camera data.

4. And save changes.

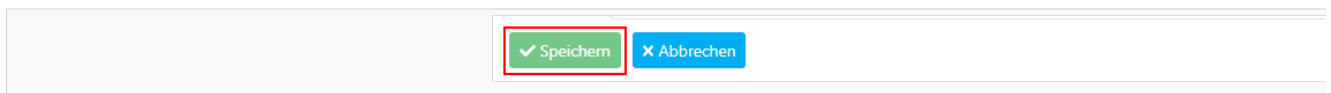


A screenshot of a camera list area. At the bottom right, there are two buttons: "Speichern" (Save) with a checkmark icon and "Abbrechen" (Cancel) with an 'x' icon. The "Speichern" button is highlighted with a red border.

## Delete API cameras.

### HINWEIS


Be careful! Do not remove cameras that are used.

1. To remove unwanted cameras, mark them.

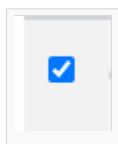

A screenshot of a camera list area. A checkbox is checked, indicated by a blue checkmark.


2. \*Be careful! Do not remove the cameras that are used.\* Click on the \*Delete\*/ \*Löschen\* button.

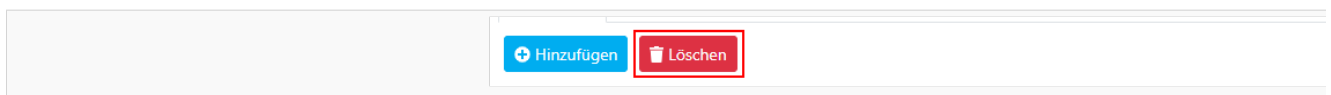

A screenshot of a camera list area. At the bottom right, there are two buttons: "Hinzufügen" (Add) with a plus icon and "Löschen" (Delete) with a trash icon. The "Löschen" button is highlighted with a red border.

## Additional field designations.

The status icon shows the connection to the camera. If it is green then the connection exists, if it is red then no connection exists.

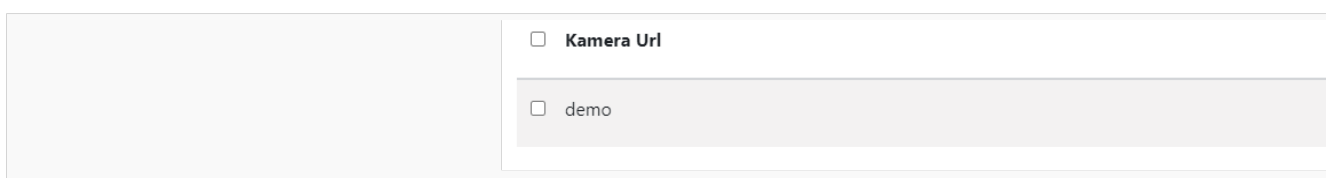

A screenshot of a camera list area. On the right side, there is a header "Kamera Url" with a checkbox. Below it, there is a list item "demo" with a checkbox.

The status connection you can see also if you just click on the camera list area.

Status
keine Verbindung

This field shows the connection error.

Verbundene Fehlermeldung
unknown url type: 'demo/api/info'


MAC camera address. It is automatically filled in by the server.

MAC
ff:ff:ff:ff:ff:ff

## Setup Areas

### Add Areas

1. Add a new area, you firstly need to go to **Settings/Einstellungen**
2. Select the **Areas/Bereiche** tab
3. And Then click on the **Add/Hinzufügen** button

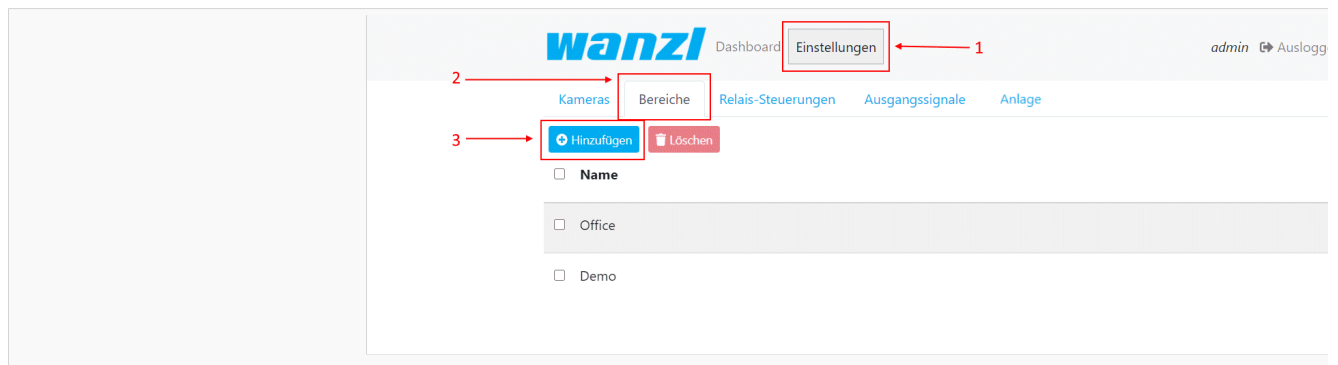

The screenshot shows the Wanzl dashboard interface. At the top, there is a navigation bar with the 'Einstellungen' tab highlighted. Below this, there are several tabs: 'Kameras', 'Bereiche', 'Relais-Steuerungen', 'Ausgangssignale', and 'Anlage'. The 'Bereiche' tab is selected. Below the tabs, there are two buttons: 'Hinzufügen' (Add) and 'Löschen' (Delete). Below these buttons, there is a form with a 'Name' field containing the text 'Office' and a 'Demo' checkbox.

4. Enter here the name of the area


5. Here you should specify a unique name without spaces and starts with a lowercase letter. This is a service field. For example: If you specified the name "Test", you can specify a unique name "test"

6. Here you can select a theme for the area display. For example:



7. Here you can choose the background for the "Basic" theme. If you want to add an image, you should upload it up to the server. More details on the link upload files

8. This field can be used in case if you want to specify an Offset for counter(for example when people are already in the area, but camera's counter is zero)

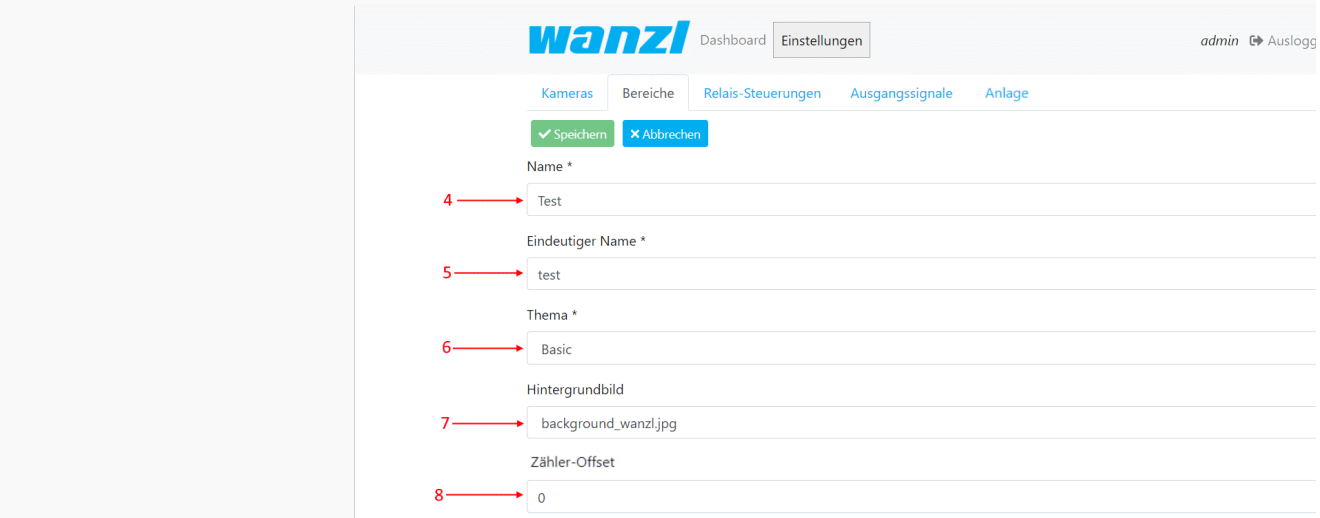


The image shows a screenshot of the 'wanzi' settings page. The page has a header with the 'wanzi' logo, 'Dashboard', and 'Einstellungen' (Settings) tabs. The user is logged in as 'admin' and can click 'Auslogg' (Logout). Below the header are navigation tabs for 'Kameras', 'Bereiche', 'Relais-Steuerungen', 'Ausgangssignale', and 'Anlage'. There are two buttons: 'Speichern' (Save) and 'Abbrechen' (Cancel). The form contains several fields, each with a red arrow pointing to it and a number: 4 points to the 'Name' field with the value 'Test'; 5 points to the 'Eindeutiger Name' (Unique Name) field with the value 'test'; 6 points to the 'Thema' (Theme) field with the value 'Basic'; 7 points to the 'Hintergrundbild' (Background image) field with the value 'background\_wanzl.jpg'; and 8 points to the 'Zähler-Offset' (Counter offset) field with the value '0'.

9. Click on the **Add/Hinzufügen** button to add a camera

10. Select the camera that was added earlier. If you do not know how to add a camera to click on this link setup XOVIS cameras

11. Choose the detect type

12. Enter the name line

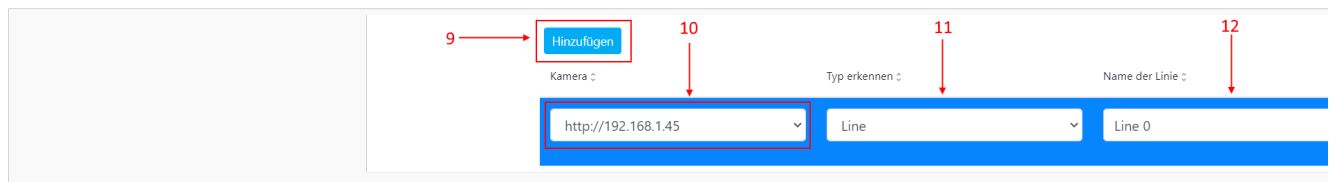


The screenshot shows a form with the following fields and annotations:

- 9: A red arrow points to the 'Hinzufügen' button.
- 10: A red arrow points to the 'Kamera' dropdown menu, which contains the value 'http://192.168.1.45'.
- 11: A red arrow points to the 'Typ erkennen' dropdown menu, which contains the value 'Line'.
- 12: A red arrow points to the 'Name der Linie' text input field, which contains the value 'Line 0'.

13. Here we specify the maximum capacity of the number of people

14. Here you can specify the schedule restart counter time. If you need to specify more than 2 values, be sure to separate them with a semicolon

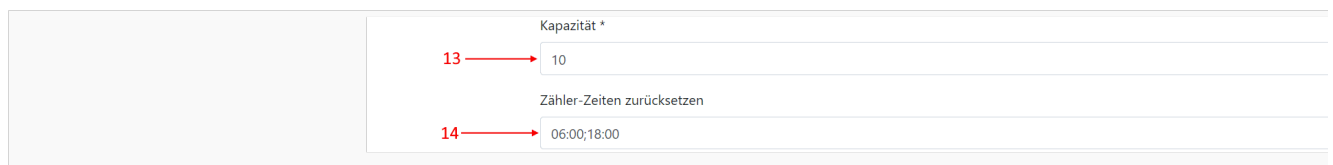

The screenshot shows a form with the following fields and annotations:


- 13: A red arrow points to the 'Kapazität \*' text input field, which contains the value '10'.
- 14: A red arrow points to the 'Zähler-Zeiten zurücksetzen' text input field, which contains the value '06:00;18:00'.

If you need to change the text translation on Area by interval:

15. To add the ability to select a language, click the **Add/Hinzufügen** button as many times as you need the languages

16. Choose a language


17. Enter the language switching interval in seconds

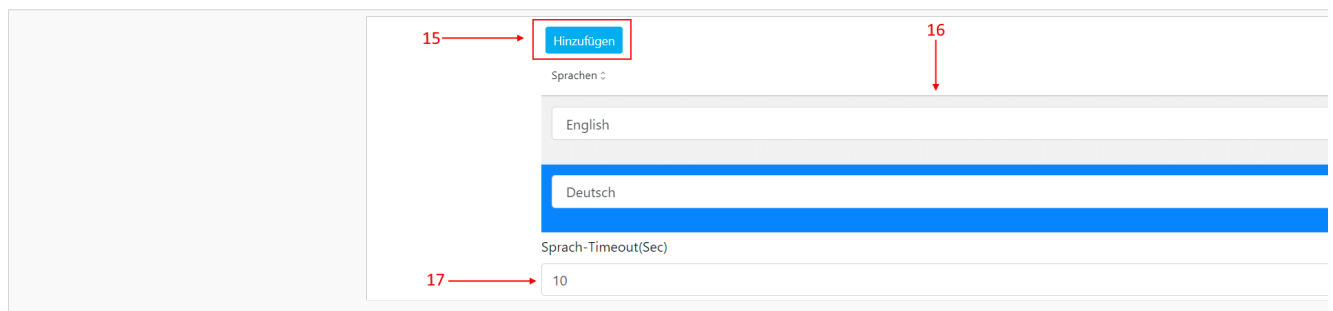

The screenshot shows a form with the following fields and annotations:

- 15: A red arrow points to the 'Hinzufügen' button.
- 16: A red arrow points to the 'Sprachen' dropdown menu, which has 'Deutsch' selected.
- 17: A red arrow points to the 'Sprach-Timeout(Sec)' text input field, which contains the value '10'.

18. And save it

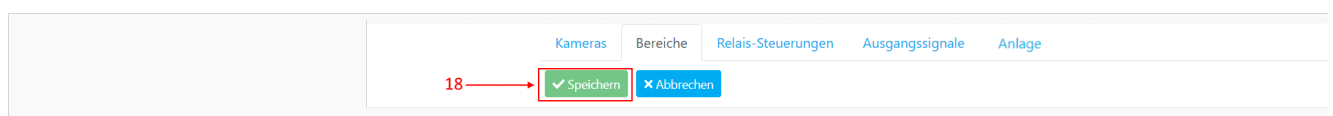

The screenshot shows a navigation bar with the following elements:


- Buttons: 'Kameras', 'Bereiche', 'Relais-Steuerungen', 'Ausgangssignale', 'Anlage'.
- 18: A red arrow points to the 'Speichern' button, which has a green checkmark icon.
- Next to 'Speichern' is the 'Abbrechen' button.

## Delete Areas



Be careful! Do not remove areas that are used.


1. To remove Areas, select them
2. And then click on the **Delete/Löschen** button

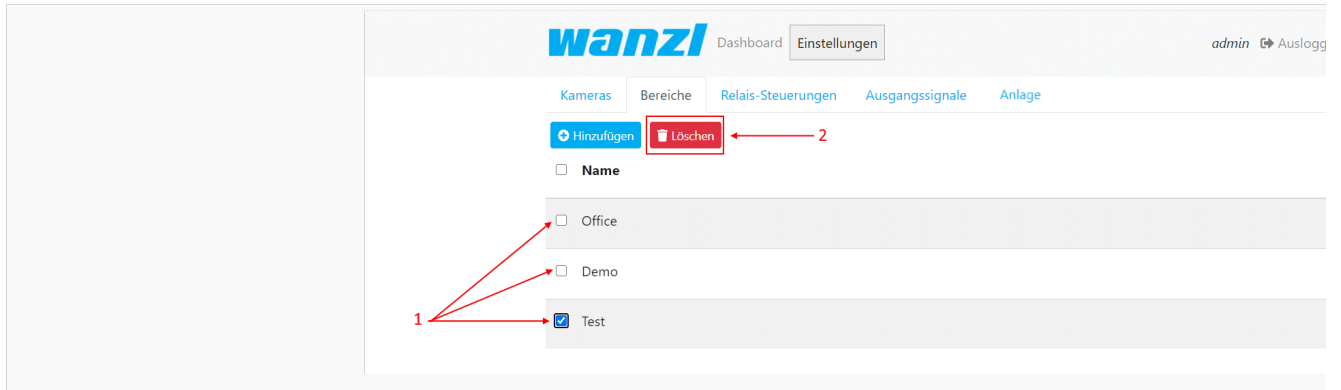

## Setup Relay Controllers


### Add Relay Controllers

1. To add a new relay controller, you firstly need to select the Settings tab
2. Select the **Relay Controllers/Relais-Steuerungen** tab
3. And then click on the **Add/Hinzufügen** button

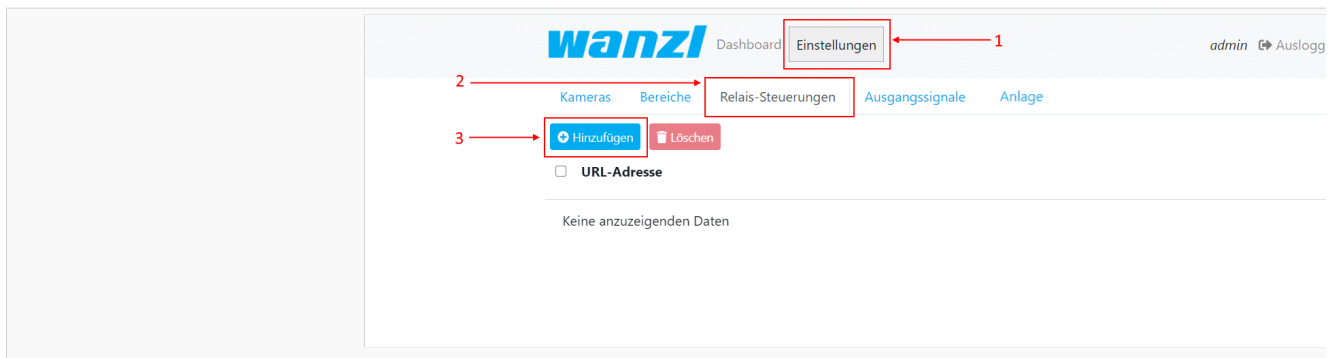

4. Here you should specify the relay controller URL
5. Select the type of relay controller communication protocol

## 6. And Save it

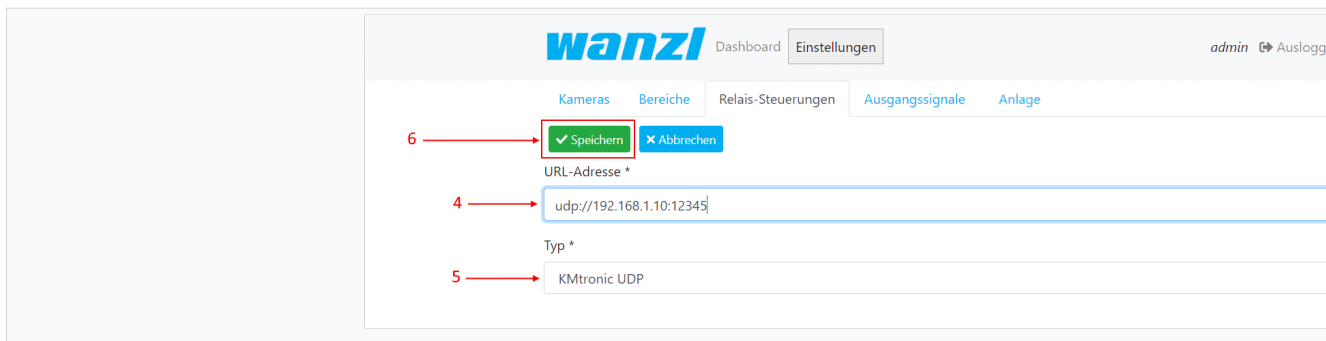

Dashboard Einstellungen admin Auslogg

Kameras Bereiche Relais-Steuerungen **Ausgangssignale** Anlage

6

4 URL-Adresse \*  
udp://192.168.1.10:12345

5 Typ \*  
KMtronic UDP


## Delete Relay Controllers

### HINWEIS

Be careful! Do not remove a relay controllers that are used.

1. To remove relay controllers, select them

2. **Be careful! Do not remove Relay Controllers that are used/Achtung! Entfernen Sie nicht die verwendeten Relaissteuerungen.** Click on the **Delete/Löschen** button

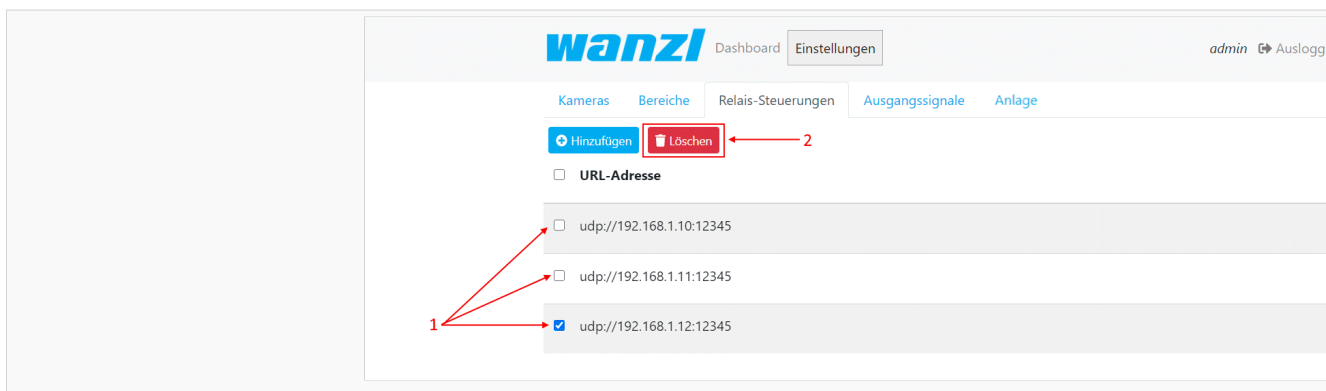

Dashboard Einstellungen admin Auslogg

Kameras Bereiche Relais-Steuerungen **Ausgangssignale** Anlage

2

URL-Adresse

udp://192.168.1.10:12345 1

udp://192.168.1.11:12345

udp://192.168.1.12:12345

## Setup Output Signals of Relay Controller


### Add Output Signals

1. To add a new relay controller, you firstly need to select the Settings tab

2. Select the **Output Signals/Ausgangssignale** tab



3. And Then to click on the **Add/Hinzufügen** button

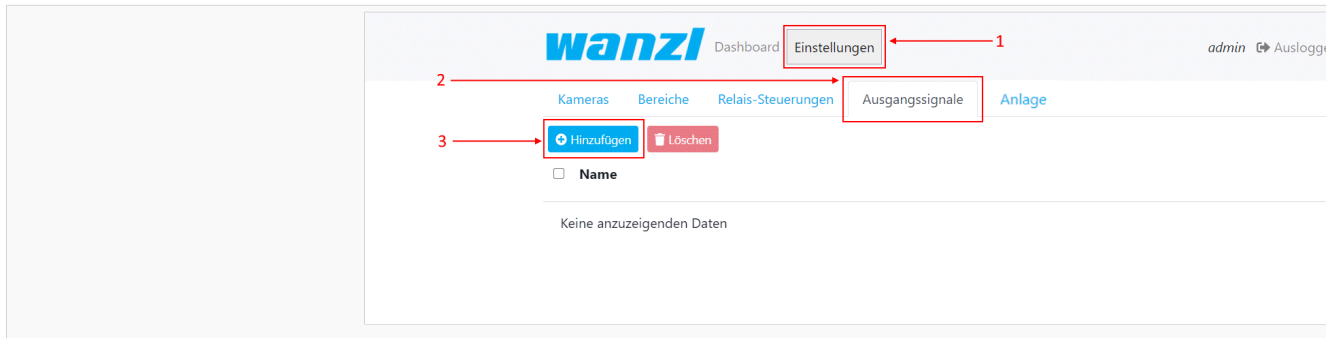

4. Enter here the name of the output signal

5. Here you should select an area

6. Here you should choose the relay controller URL


7. Insert the command of a high level of the relay controller

8. Insert the command of a low level of the relay controller

9. Here you can specify transition delay time

10. This field is necessary to specify the condition of relay triggering

11. Save it

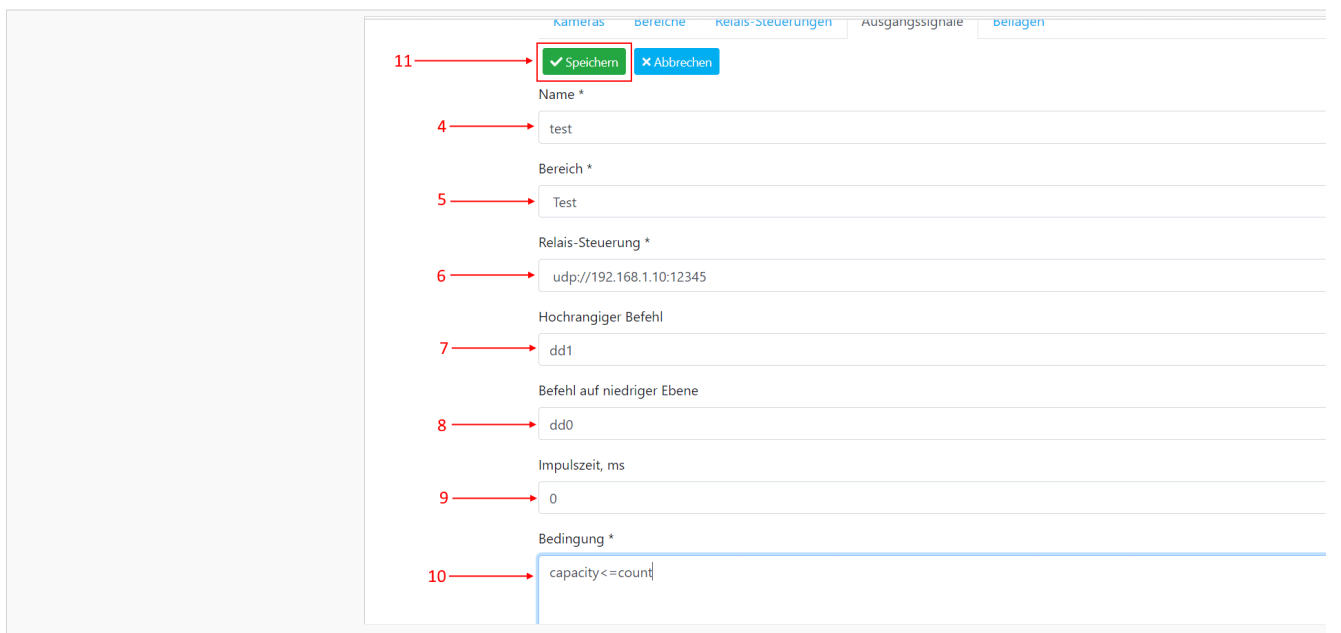


## Delete Output Signals

### HINWEIS

Be careful! Do not remove output signals that are used.


1. To remove output signals, select them
2. Click on the **Delete/Löschen** button

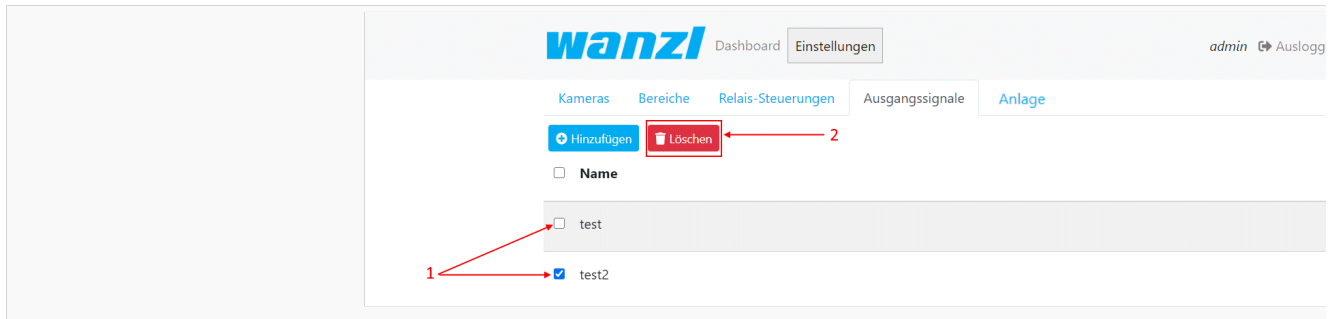

## Upload files to the server


### Add Files

1. Add a new area, you firstly need to go to **Settings/Einstellungen**
2. Select the **Assets/Anlage** tab
3. And then click on the **Add/Hinzufügen** button and select a file on your file system. If a file is uploaded to the server, you can see it in the file list

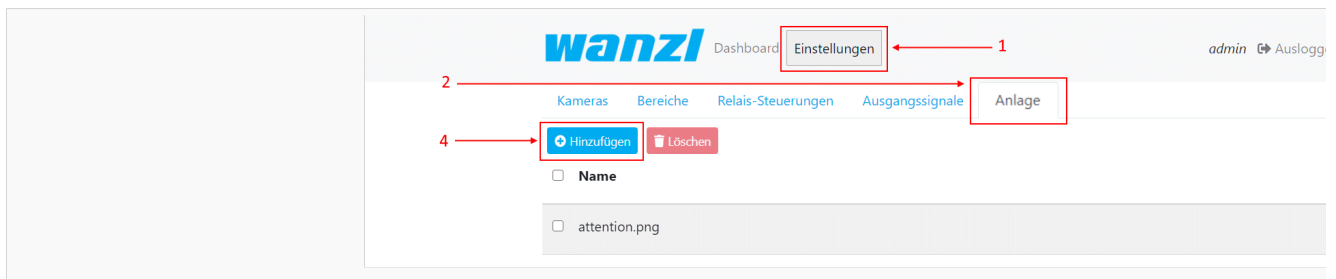

### Show uploaded image files.

- 1 If you want to see image files just click on the file list area

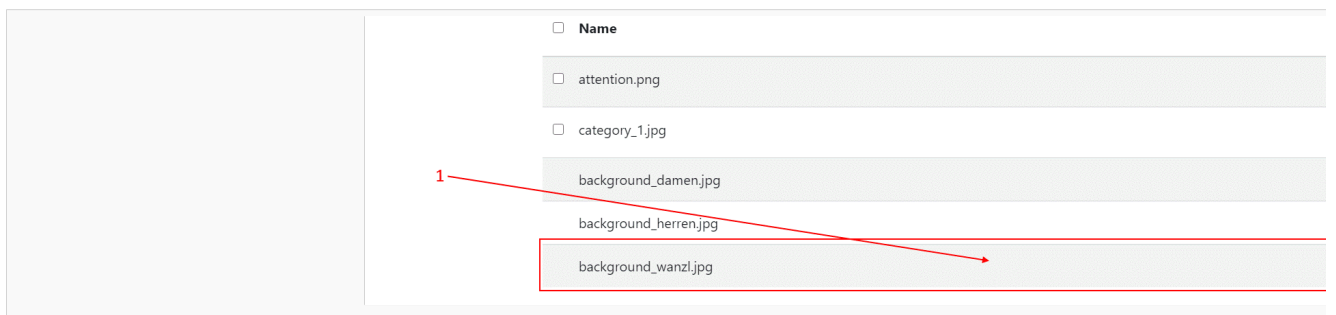


## Delete Files

### HINWEIS

Be careful! Do not remove files that are used.


1. To remove files from the server, select them. Preset files can't be deleted
2. Be careful! Do not remove files that are used. And then click on the **Delete/Löschen** button

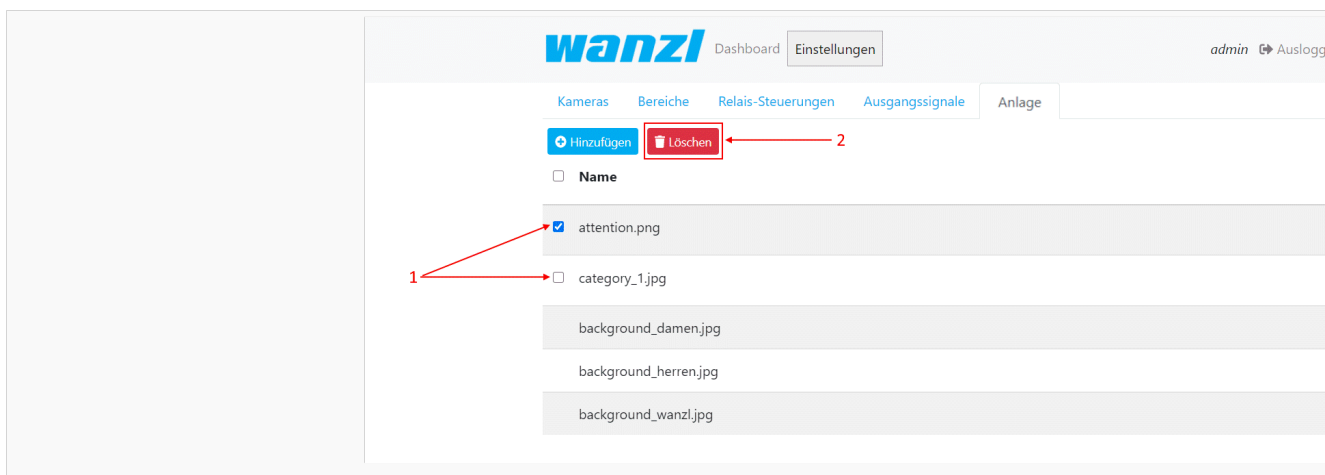

## Users


### Add a user

1. To add a new user, you firstly need to select the **Settings/Einstellungen** tab
2. Click on the **User/Benutzer** tab
3. Then click on the **Add/Hinzufügen** button

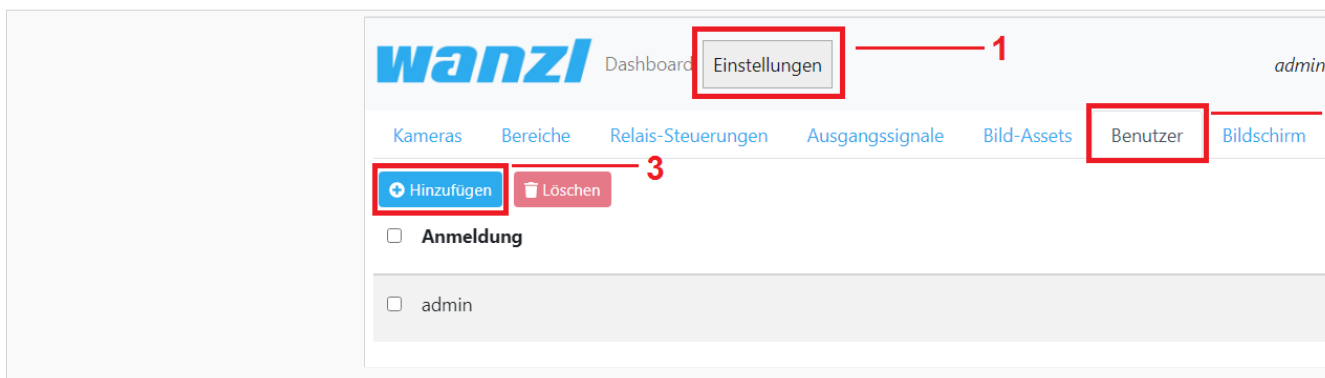

4. In this field you should specify **Login/Anmeldung** for a new user
5. In this field you should specify **Password/Passwort** for a new user

6. Click on the **Save/Speichern** button to complete the adding of new user

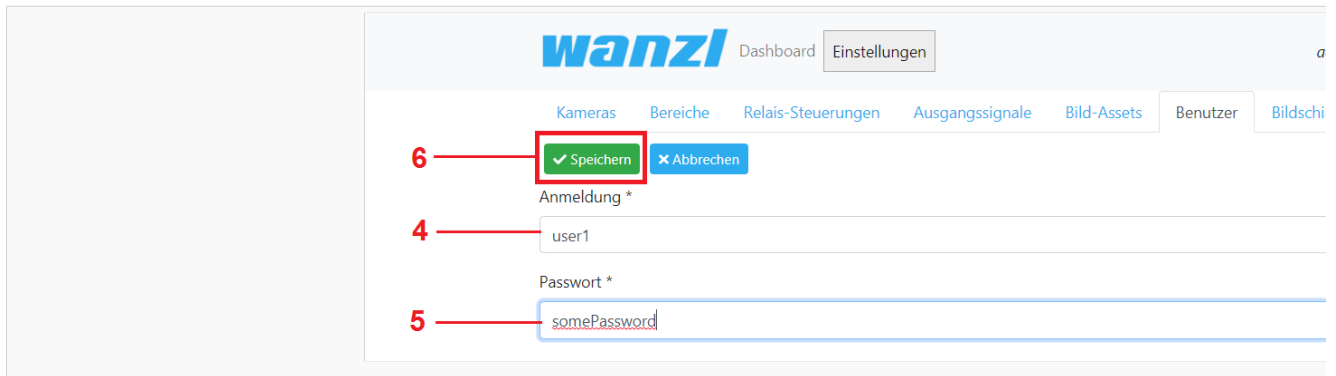


## Change user credentials


1. If you want to change user data just click on the user list area




2 Then click on the **Edit/Hinzufügen** button

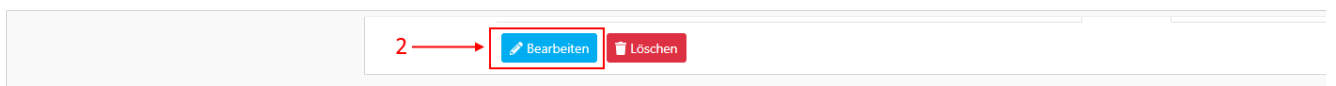

3. After that you can change user data

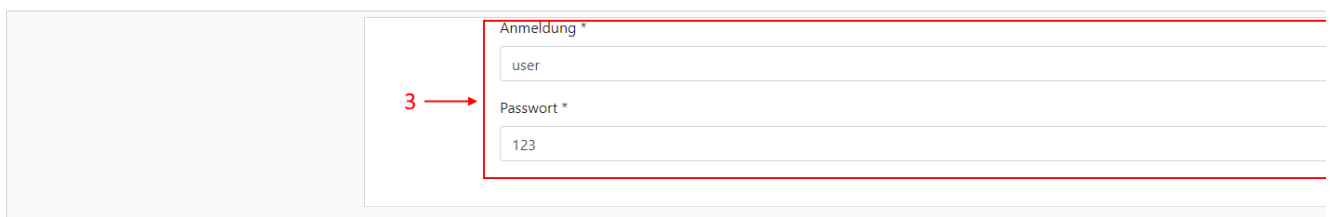

4. And save the changes

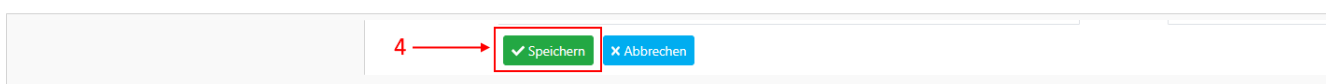


## Delete a user



Be careful! Do not remove users that are used.

1. To remove user, select them. Preset files can't be deleted
2. And then click on the **Delete/Löschen** button

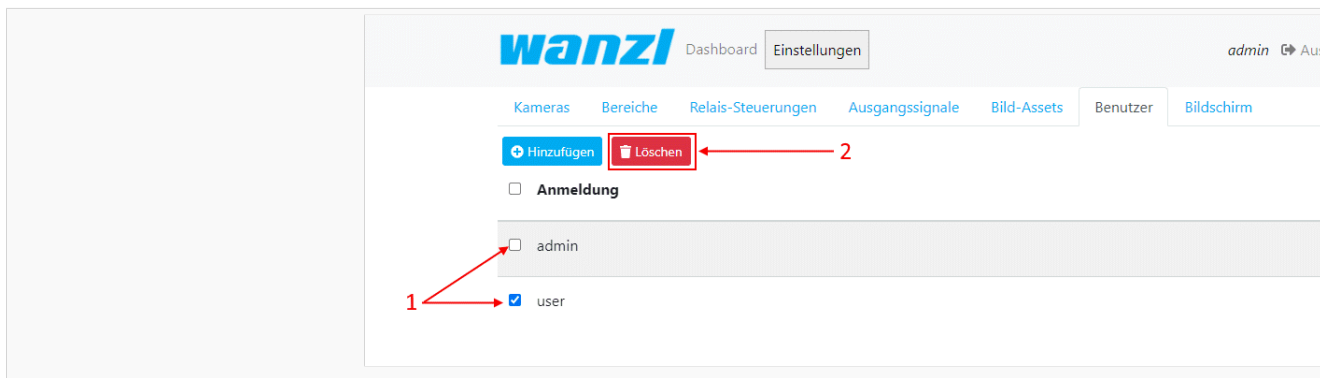

## Change browser configuration

### Reload browser configuration

1. To display, you firstly need to go to **Settings/Einstellungen**
2. Select the **Display/Bildschirm** tab
3. Enter the display URL
4. Then click on the **Reload** button

