

Gate ~ FMCU ~ management dashboard/en



 
Inhaltsverzeichnis

1 General	2
2 Headline	2
3 Menu items	2
3.1 Gates	2
3.1.1 Set up a new Gate	3
3.1.2 Edit existing Gate	5
3.1.3 Remove Gate	7
4 Administration	8
4.1 User	8
4.1.1 Set up new User	9
4.1.2 Edit existing User	10
4.1.2.1 Event Notifications	10
4.1.2.2 Locations & Positions Tab	10
4.1.2.3 Groups Tab	10
4.1.2.4 Permissions Tab	10
4.2 Groups	11
4.2.1 Set up new Group	11
4.2.2 Edit existing Group	12
4.2.2.1 Users Tab	12
4.2.2.2 Permissions Tab	12
4.3 Positions	12
4.3.1 Set up new Position	12
4.3.2 Edit existing Position	12
4.4 Locations	13
4.4.1 Set up new Location	13
4.4.2 Edit existing Location	13
4.5 Locations & Positions	13
4.6 Configuration	13
5 Events	14
5.1 Events	14
5.2 Event Definitions	14
5.3 Event definition Groups	15
5.3.1 Create a new Event definition Group	15
5.4 Event Subscriptions	16
5.5 Notifications	16
6 Cards	17
6.1 Cards	17
6.2 Edit Cards	17
7 Statistics	18

General

The Wanzl Access Manager offers a central dashboard for access controls in a homogeneous interface, displays the corresponding states and supports the user in the administration of these components. The Wanzl Access Manager is a leading platform for monitoring and managing access controls of security areas.

Headline




Number	Function
1	Button Management Dashboard
2	Administration
3	Events Button
4	Cards Button
5	Statistics Button
6	Logged in User
7	Log out Button
8	Languages menu
9	Adjust the display to entire width of the screen

Menu items

Gates


```
https://<dns-name or ip-address>/gates
```

In this view, all access controls are shown in an intuitive interface. There are grouping options in two categories. First of all, you can group by **Location**. You can then combine different **Positions** within the location. Individual gates can be added using the "**New**" menu item.

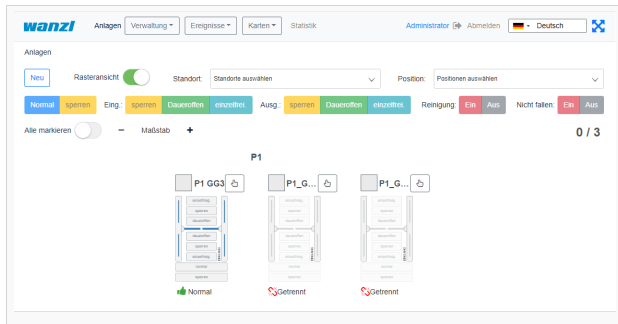


Set up a new Gate

In this view you create a **New** gate. The fields **Names**, **Displayed Name** and **Position** of the Gate must be verified with values. Then click on Attachments.

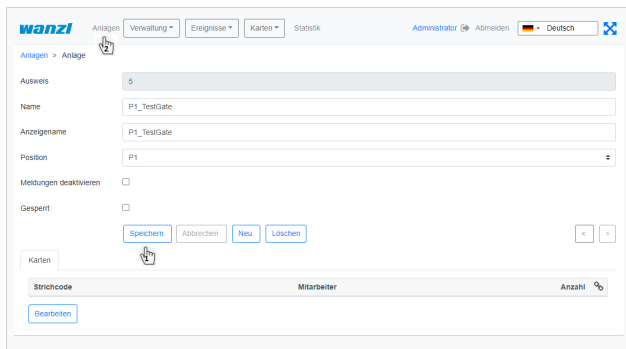


You can now see in the view that you have created a **NEW** gate, in this case the fourth gate in this view.

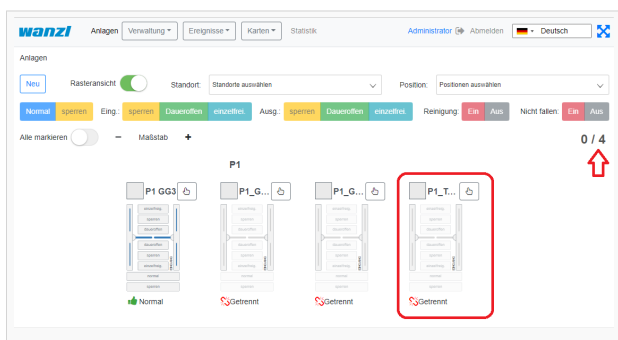

In the next step you connect the gate to the server.

<https://<IP-Adresse des Dashboards>>

To do this, check on the **General** tab that the correct gate name has been entered.

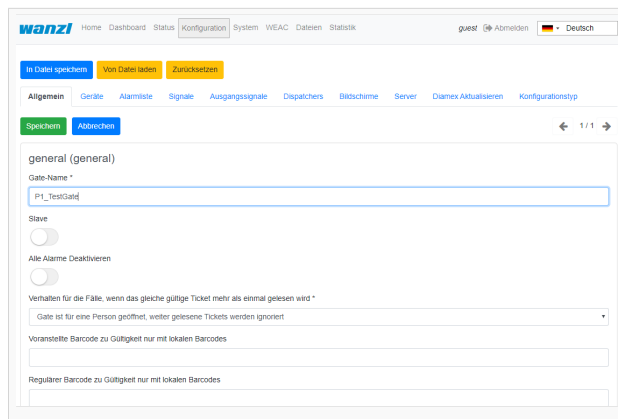

The screenshot shows the 'general' configuration page for a gate. The 'Gate-Name' field is filled with 'P1_testGate'. Below it, there are several toggle switches: 'Slave' (disabled), 'Alle Alarme Deaktivieren' (disabled), and a dropdown menu for 'Verhalten für die Fälle, wenn das gleiche gültige Ticket mehr als einmal gelesen wird'. The dropdown is set to 'Gate ist für eine Person geöffnet, weiter gelesene Tickets werden ignoriert'. There are also two empty text input fields for 'Vorandehlte Barcode zu Gültigkeit nur mit lokalen Barcodes' and 'Regulärer Barcode zu Gültigkeit nur mit lokalen Barcodes'.

Then check the following points on the **Server** tab.

Server#0 (server)- must be set to remote.

Activated slide-switch is activated.

Your server should be entered under Name*.

Your URL should be entered under URL*.

Gate should be entered under Username*.


Your password should be entered under Password*.

Save at the end.




The screenshot shows the 'Server #0 (server)' configuration page. The 'Form' dropdown is set to 'Fern'. The 'Aktiviert' toggle is checked. Below it, there are two more toggle switches: 'Schleuse' (disabled) and 'URL des Gates (z.B. http://localhost:6888)' (empty). There is a text input field for 'Pause nach Verbindungsausfall, Sekunden' with the value '5'. The 'Name' field contains 'Server #0'. The 'URL' field contains 'https:// ihre URL.de'. The 'Benutzername' field contains 'gate'. The 'Passwort' field contains 'ihr Passwort'. The 'Statistisch synchronisierte Messenggröße' field contains '100'.


In the next step, please click on System in the top bar.

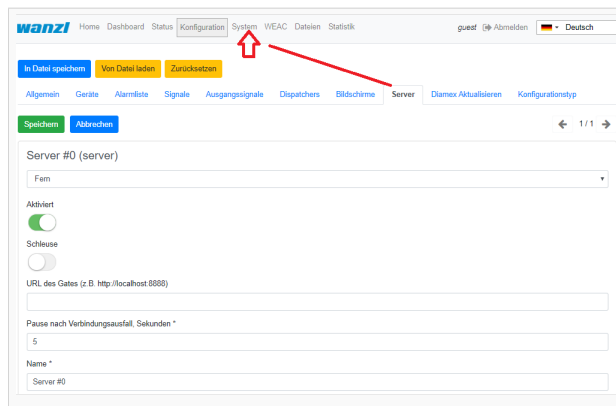

You will now see the following display, here please press restart once. Now your new gate should be connected.

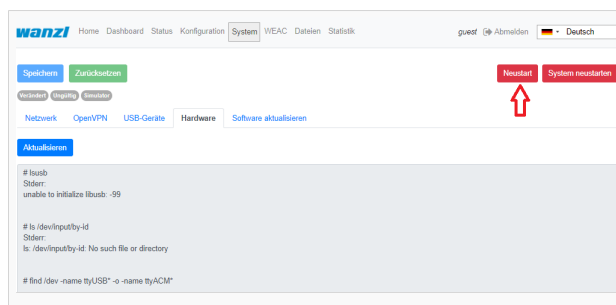

Finally, you can check the connection in the **Status** tab. **CONNECTED** must now appear under State.

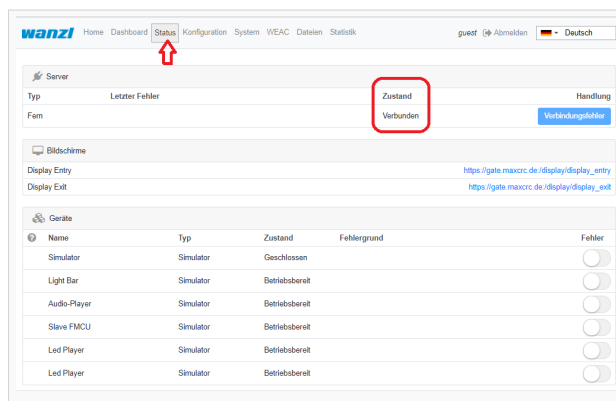


Edit existing Gate

<https://<dns-name or ip-address>/gates>


Gate ~ FMCU ~ management dashboard/en

You are in the same view as where you would create a new gate.


Please move the slide switch "Grid view" to the left.

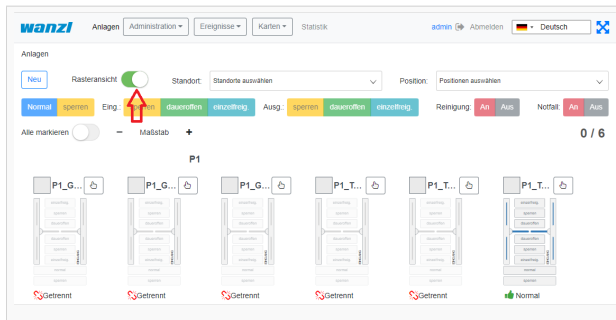

In the view click on the name of the gate which you want to edit (in the example P1_TestGate2).

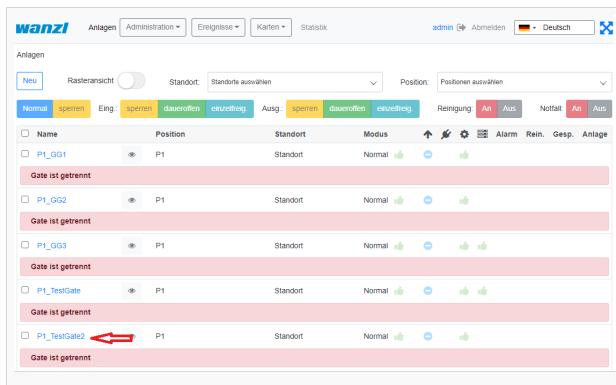

In this view, please press the "Edit" function.

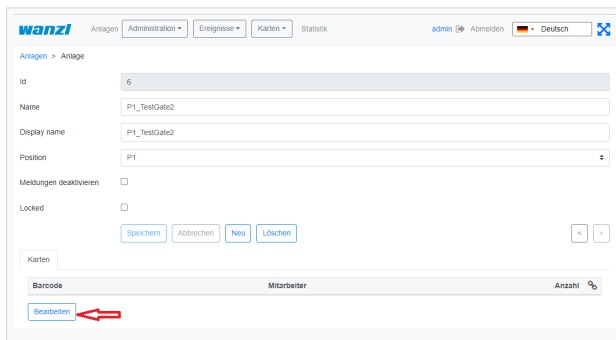

You can now edit the gate in this view.



Remove Gate

`https://<dns-name or ip-address>/gates`

You are in the same view as where you would create a new gate.

Please move the slide switch "Grid view" to the left.




In the view click on the name of the gate which you want to delete (in the example P1_TestGate6).




In this view, please press the "Delete" function.




To be on the safe side, you will now be asked again whether you really want to delete the element? Please confirm this.

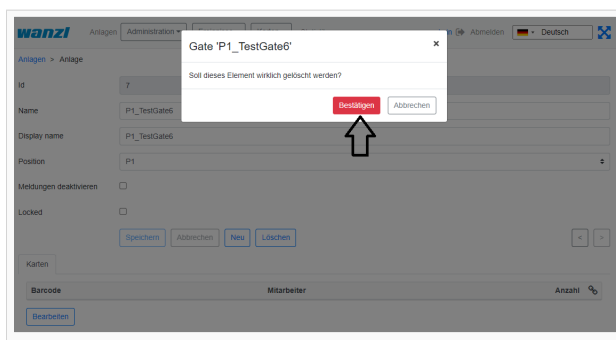

After deleting, you will automatically be shown the next gate (here in the example P1_TestGate2). Please click on attachments here.

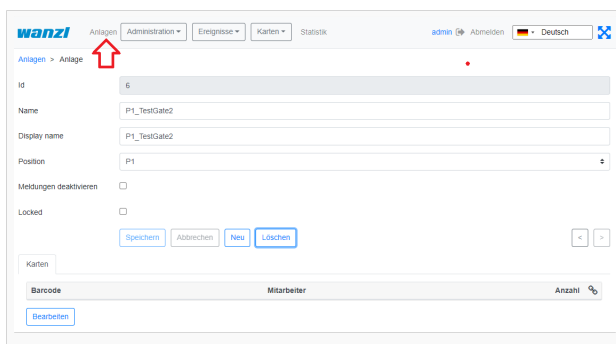

You will then see in the grid view that Gate P1_TestGate6 is missing and has been successfully deleted.

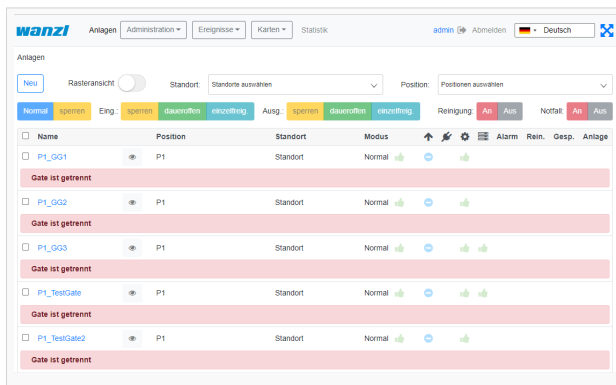

Administration

User

`https://<dns-name or ip-address>/users`

Auf dieser Seite sehen Sie eine Übersicht aller Benutzer


 Anlagen
 Administration ▾
Ereignisse ▾
Karten ▾
Statistik

 Abmelden

 Deutsch
 

Benutzer

1 Neu

Standort: Standorte auswählen **2** ▾

Position: Positionen auswählen **3** ▾

Benutzername
Vorname
Nachname
Standorte & Positionen
Gruppen
Super.
Gesp.
Löschen

Nummer	Funktion
1	Neuen Benutzer anlegen
2	Benutzer nach Standort filtern
3	Benutzer nach Position filtern

Set up new User

Klicken Sie unter [Benutzer](#) auf den Button **Neu**

`https://<dns-name or ip-address>/new-user`

[Benutzer](#) > Neuer Benutzer

Id

Benutzername

Passwort

Bestätige das Passwort

Email

Vorname

Nachname

Info

Superuser

Locked

Meldungen deaktivieren

[Ereignisbenachrichtigungen](#)
[Standorte & Positionen](#)
[Gruppen](#)
[Berechtigungen](#)

Name	Info	Kategorie	Ausgewählt
Feldname	Beschreibung		
Id	Automatisch generierte eindeutige Nummer des Benutzers		

Benutzername*	Benutzername des Benutzers für die Anmeldung
Passwort*	Passwort des Benutzers für die Anmeldung
Email	Email Adresse des Benutzers zum Versand von Log Nachrichten
Vorname	Vorname des Benutzers
Nachname	Nachname des Benutzers
Info	Beschreibung des Benutzers
Superuser	Die höchsten Rechte werden dem Benutzer vergeben
Locked	Die Anmeldung des Benutzers ist gesperrt
Meldungen deaktivieren	Der Benutzer erhält keine Benachrichtigungen im FMCU Management Dashboard

* Unbedingt erforderliche Felder Durch den Button **Speichern** wird der neue Benutzer angelegt.

Edit existing User

Klicken Sie unter [Benutzer](#) auf den zu bearbeitenden Benutzer

Event Notifications

Unter diesem Reiter können die Benachrichtigungen ausgewählt werden welcher der Benutzer erhalten soll.
Hinweis: Ist die Checkbox **Meldungen deaktivieren** gesetzt werden unabhängig von diesen Einstellungen keine Benachrichtigungen angezeigt.

Locations & Positions Tab

Man kann unterschiedliche Standorte in Länder und Städte festlegen. Über das Berechtigungsmodell lassen sich separate Zugriffsrechte für jeden Standort definieren.

Groups Tab

Unter diesem Reiter können Sie die Gruppenmitgliedschaften des Benutzers anpassen.

Permissions Tab

Unter diesem Reiter werden die Berechtigungen des Benutzers angezeigt
Durch den Button **Speichern** werden alle Änderungen angewendet.

Groups

<https://<dns-name or ip-address>/groups>

Auf dieser Seite sehen Sie eine Übersicht aller Gruppen

 Anlagen Administration ▾ Ereignisse ▾ Karten ▾ Statistik admin  Abmelden  Deutsch 

Gruppen

[Neu](#)

Name	Info	Löschen
manager		
user		
gate		
alarm_notifications		

Set up new Group

<https://<dns-name or ip-address>/new-group>

Klicken Sie unter [Gruppen](#) auf den Button **Neu**

 Anlagen Administration ▾ Ereignisse ▾ Karten ▾ Statistik admin  Abmelden  Deutsch 

[Gruppen](#) > [Neu Gruppe](#)

Id

Name

Info

[Speichern](#) [Abbrechen](#) [Neu](#) [Löschen](#) [<](#) [>](#)

[Benutzer](#) [Berechtigungen](#)

Benutzername	Email	Vorname	Nachname	Info
--------------	-------	---------	----------	------

[Bearbeiten](#)

Feldname	Beschreibung
----------	--------------

Id	Automatisch generierte eindeutige Nummer der Gruppe
Name	Name der Gruppe
Info	Beschreibung der Gruppe

* Unbedingt erforderliche Felder

Durch den Button **Speichern** wird die neue Gruppe angelegt.

Edit existing Group

Klicken Sie unter [Gruppen](#) auf die zu bearbeitende Gruppe

Users Tab

Unter diesem Reiter können Sie die Mitglieder der Gruppe anpassen.

Permissions Tab

Unter diesem Reiter werden die Berechtigungen angezeigt welche den Mitgliedern der Gruppe vererbt werden.

Durch den Button **Speichern** werden alle Änderungen angewendet.

Positions

```
https://<dns-name or ip-address>/cities
```

On this page you can see an overview of all positions

Set up new Position

```
https://<dns-name or ip-address>/new-city
```

Under [Positions](#) click on the button **New** Enter the name of the position and assign the position to a location using the dropdown field. Click on the **Save** button to create the position

Edit existing Position

Under [Positions](#) click to edit the position
Here you can edit the position name and location

Locations

```
https://<dns-name or ip-address>/countries
```

Auf dieser Seite sehen Sie eine Übersicht aller Standorte

Set up new Location

```
https://<dns-name or ip-address>/new-country
```

Klicken Sie unter [Standorte](#) auf den Button **Neu**

Feldname	Beschreibung
Id	Automatisch generierte eindeutige Nummer des Standorts
Name*	Name des Standorts
Code*	Ländercode des Standorts
Info	Beschreibung des Standorts

* Unbedingt erforderliche Felder

Klicken Sie auf den Button **Speichern** um die Position anzulegen

Edit existing Location

Under [Location](#) Under Location, click the location you want to edit

Hier können Sie die den Namen, den Code sowie die Info des Standorts bearbeiten

Locations & Positions

```
https://<dns-name or ip-address>/locations
```

Here you can see an overview of all positions and their assigned locations

Configuration


```
https://<dns-name or ip-address>/configurations
```

Events

Events

<https://<dns-name or ip-address>/events>

In this view, the events of all access controls are shown in an intuitive list view. There are filtering options and a name search for the events.

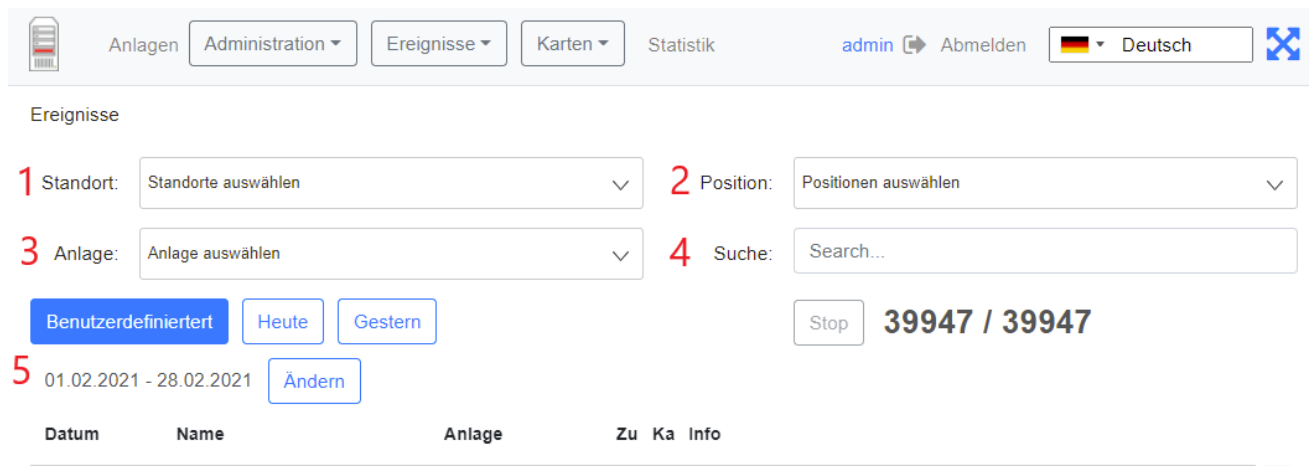

The screenshot shows the 'Events' management interface. At the top, there is a navigation bar with tabs for 'Anlagen', 'Administration', 'Ereignisse', and 'Karten', along with a 'Statistik' link. On the right, there is a user profile 'admin', a language dropdown set to 'Deutsch', and a 'Abmelden' button. Below the navigation, the 'Ereignisse' section contains several filters: 1. 'Standort' (Location) dropdown, 2. 'Position' dropdown, 3. 'Anlage' (Factory) dropdown, 4. 'Suche' (Search) input field, 5. 'Datum' (Date) range from '01.02.2021' to '28.02.2021' with an 'Ändern' button. There are also buttons for 'Benutzerdefiniert', 'Heute', and 'Gestern', and a 'Stop' button next to a counter '39947 / 39947'. At the bottom, a table header is visible with columns: 'Datum', 'Name', 'Anlage', 'Zu', 'Ka', and 'Info'.

The following filters can be set:

1. Location
2. Position
3. Factory
4. Search by Event name
5. Time Period

Event Definitions

<https://<dns-name or ip-address>/event-definitions>

In this view, all events that the FMCU contains are listed and their event definition groups, supported states and categories are assigned.





The screenshot shows the 'Event Definitions' management interface. It has a similar navigation bar to the 'Events' page. Below the navigation, the 'Ereignisdefinitionen' section contains a table with the following columns: 'Name', 'Ereignisdefinitionsgruppen', 'Unterstützte Zustände', and 'Kategorie'.

Event definition Groups


`https://<dns-name or ip-address>/event-definition-groups`

All event definition groups are listed under this tab.


Anlagen
Administration ▾
Ereignisse ▾
Karten ▾
Statistik
admin
Abmelden
Deutsch




Ereignisdefinitionsgruppen

Neu

Name	Ereignisse	Info	Löschen
Alarm events	ServerGateDevicesFailed ServerGateAllDevicesOperational GateUnauthorizedAccess GateStateFireAlarm GateDoorIsBeeingBroken		

Create a new Event definition Group

Click [Event defenition groups](#) on the Button **New**


Anlagen
Administration ▾
Ereignisse ▾
Karten ▾
Statistik
admin
Abmelden
Deutsch


Ereignisdefinitionsgruppen > New Event Definition Group

Id

Name

Info

Ereignisdefinitionen

Name	Info	Kategorie	Ausgewählt
Fieldname	Description		
ID	Automatically generated unique group number		
Name	Name of the group		
Info	Group description		


* Absolutely required fields

Under the **Event definition** tab select the event definitions that are to be assigned to the group.

Event Subscriptions

<https://<dns-name or ip-address>/event-subscriptions>

There is the possibility to link groups of alarm messages with groups of users. As a result, only group members are notified of alarm messages that are also grouped,

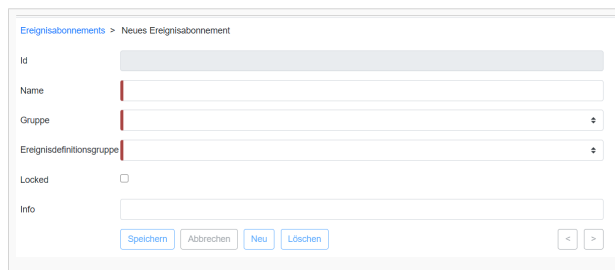


Fieldname	Description
ID	internal value
Group	Summary of users
Ereignisdefinitionsgruppe	Event definition group
Locked	Notifications deactivated/activated
Info	Description field

Notifications

<https://<dns-name or ip-address>/notifications>

Sent notifications are displayed in this overview. You can adjust the view accordingly using a date filter.

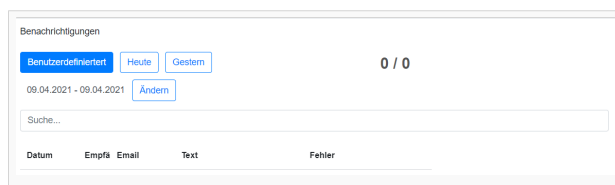


Cards

Cards

<https://<dns-name or ip-address>/cards>

This view shows an overview of the RFID cards in the system with the gates enabled for access.

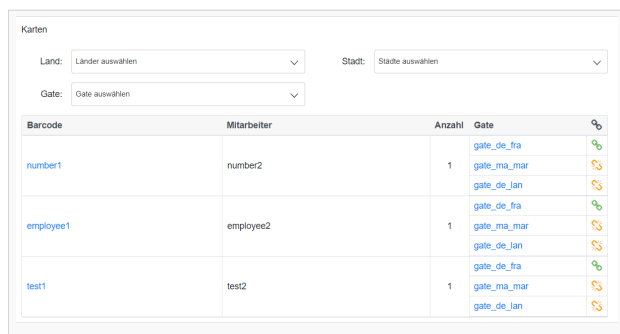


Barcode	Mitarbeiter	Anzahl	Gate
number1	number2	1	gale_de_fra gale_ma_mar gale_de_lan
employee1	employee2	1	gale_de_fra gale_ma_mar gale_de_lan
test1	test2	1	gale_de_fra gale_ma_mar gale_de_lan

Edit Cards

<https://<dns-name or ip-address>/cards-edit>

In this view, cards can be added / removed and authorizations for individual gates can be defined.

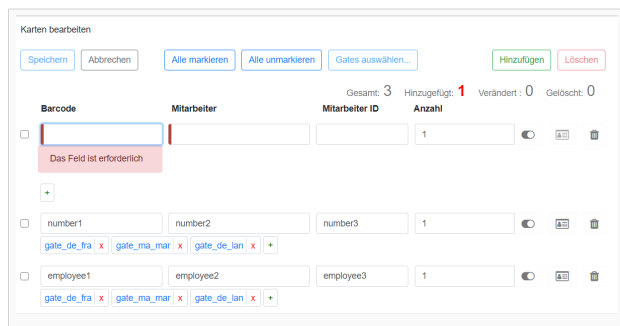


Barcode	Mitarbeiter	Mitarbeiter ID	Anzahl	Gate
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
number1	number2	number3	1	<input type="checkbox"/> gale_de_fra x gale_ma_mar x gale_de_lan x +
employee1	employee2	employee3	1	<input type="checkbox"/> gale_de_fra x gale_ma_mar x gale_de_lan x +

Field	Description
Barcode	Card content that is captured by the reader
Employee	Description field
Employee ID	Description field
Quantity	Number of accesses for this card

Statistics

In this view, all activities for the assigned access controls are shown. You can adjust the view with date filters. It is possible to group the screen output, e.g. only to evaluate the number per day or month. Finally, the data can be exported in Excel format or CSV-format.

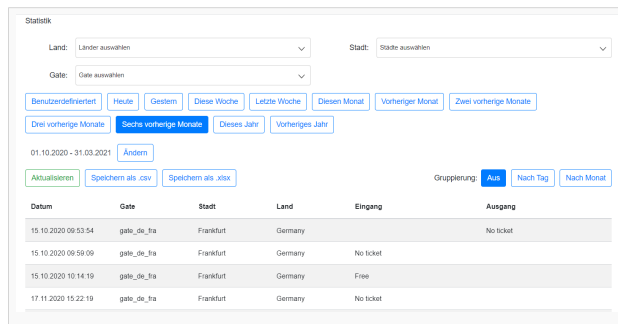

The screenshot shows a web interface for statistics. It includes dropdown menus for 'Land' (Country) and 'Stadt' (City), and a dropdown for 'Gate'. Below these are buttons for time-based filters: 'Benutzerdefiniert', 'Heute', 'Gestern', 'Diese Woche', 'Letzte Woche', 'Diesen Monat', 'Vorheriger Monat', 'Zwei vorherige Monate', 'Drei vorherige Monate', 'Sechs vorherige Monate', 'Dieses Jahr', and 'Vorheriges Jahr'. A date range '01.10.2020 - 31.03.2021' is shown with an 'Ändern' button. There are also buttons for 'Aktualisieren', 'Speichern als .csv', and 'Speichern als .xlsx'. A 'Gruppierung' section has buttons for 'Aus', 'Nach Tag', and 'Nach Monat'. The main data table has columns for 'Datum', 'Gate', 'Stadt', 'Land', 'Eingang', and 'Ausgang'.

Datum	Gate	Stadt	Land	Eingang	Ausgang
15.10.2020 09:53:54	gate_de_Ita	Frankfurt	Germany		No ticket
15.10.2020 09:59:09	gate_de_Ita	Frankfurt	Germany	No ticket	
15.10.2020 10:14:19	gate_de_Ita	Frankfurt	Germany	Free	
17.11.2020 15:22:19	gate_de_Ita	Frankfurt	Germany	No ticket	