

## Gate ~ FMCU ~ management dashboard/en

---

### Inhaltsverzeichnis

1 General .....	2
2 Sign Up .....	2
3 Headline .....	2
4 Menu items .....	3
4.1 Facilities .....	3
4.1.1 Gate-View .....	5
4.1.2 Set up a new Gate .....	6
4.1.3 Edit existing Gate .....	9
4.1.4 Remove Gate .....	9
5 Administration .....	10
5.1 User .....	10
5.1.1 Set up new User .....	10
5.1.2 Edit existing User .....	10
5.1.2.1 Event Notifications .....	11
5.1.2.2 Locations & Positions Tab .....	11
5.1.2.3 Groups Tab .....	11
5.1.2.4 Permissions Tab .....	11
5.2 Groups .....	11
5.2.1 Set up new Group .....	12
5.2.2 Edit existing Group .....	12
5.2.2.1 Users Tab .....	12
5.2.2.2 Permissions Tab .....	12
5.3 Positions .....	13
5.3.1 Set up new Position .....	13
5.3.2 Edit existing Position .....	13
5.4 Locations .....	13
5.4.1 Set up new Location .....	13
5.4.2 Edit existing Location .....	14
5.5 Locations & Positions .....	14
5.6 Configuration .....	14
6 Events .....	14
6.1 Events .....	14
6.2 Event Definitions .....	15
6.3 Event definition Groups .....	15
6.3.1 Create a new Event definition Group .....	15
6.4 Event Subscriptions .....	16
6.5 Notifications .....	17
7 Cards .....	17
7.1 Cards .....	17

7.2 Edit Cards .....	17
8 Statistics .....	18

## General

---

The Wanzl Access Manager offers a central dashboard for access controls in a homogeneous interface, displays the corresponding states and supports the user in the administration of these components. The Wanzl Access Manager is a leading platform for monitoring and managing access controls of security areas.

## Sign Up

---

Please enter the login information provided by support here to log in to the central dashboard.

## Headline

---

Number	Function
1	Button Management Dashboard
2	Administration
3	Events Button
4	Cards Button
5	Statistics Button
6	Logged in User
7	Log out Button
8	Languages menu
9	Adjust the display to entire width of the screen

 
## Menu items

### Facilities

`https://<dns-name or ip-address>/gates`

In this view, all access controls are displayed in an intuitive interface. There are grouping options in two categories. First, you can group by **Location**. Within the location you can then summarize different **Locations**. Individual gates can be added via the menu item **"New"**.


When the light view is off, the access controls are shown in the list.

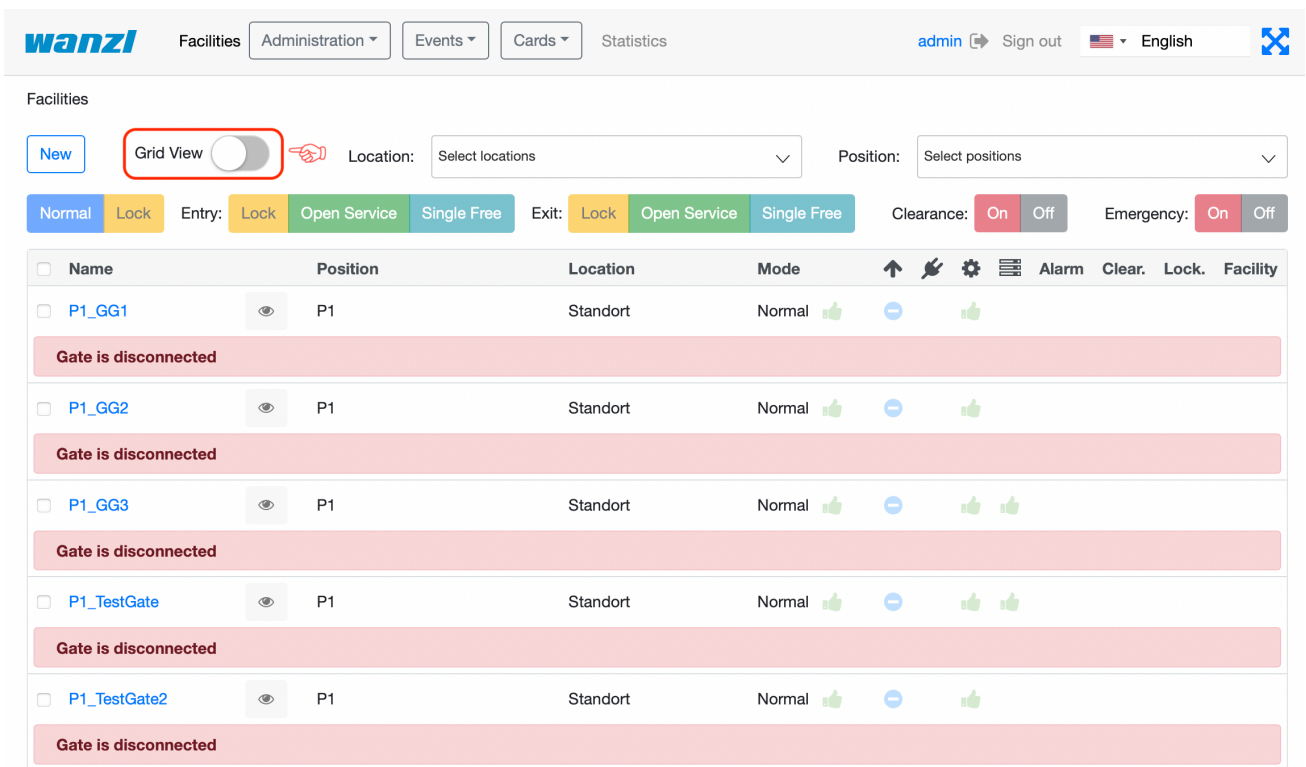









When one or more facilities are selected with the control,










the facilities can be controlled with the following buttons:




Symbol	Description	Note
	change to normal state, lock the doors in both directions	








			open the door permanently or open it for a single person	towards the entrance
			open the door permanently or open it for a single person	toward the exit
			Turn the <b>Cleaning</b> mode on and off	cleaning
			Toggle <b>Emergency Open</b> mode on and off	Emergency

The Gate display contains the following controls:

Symbol	Description	Note
	choose the gate	to activate the buttons above ( <b>Normal, Lock Out</b> , etc.)
<b>P1_GG1</b>	Navigate to the <b>Facilities</b> page	
	Navigate to the page <b>Gate-View</b>	
	change to Normal state	
	lock the doors in both directions	
	open the door in the direction of entrance/exit for a single person	
	lock the door in the direction of entrance/exit	
	permanently open the door in the direction of entrance/exit	


The symbols under the gate convey various information about it:

Symbol	Description	Note
	No connection to the gate	
	The gate is in the Normal state	
	The gate is in the Locked state	

	The gate is in the fire alarm state	
	The gate is in the emergency open state	
	The cleaning mode is active	
	Alarm is active at the gate	
	The gate is permanently open	
	One or more devices at the gate have failed	
	Current selected configuration of the gate	Only if there are two or more configurations at the gate

## Gate-View

 In this view, you can observe the state of each gate, control the gate, and apply the gate's configurations (if there are two or more).

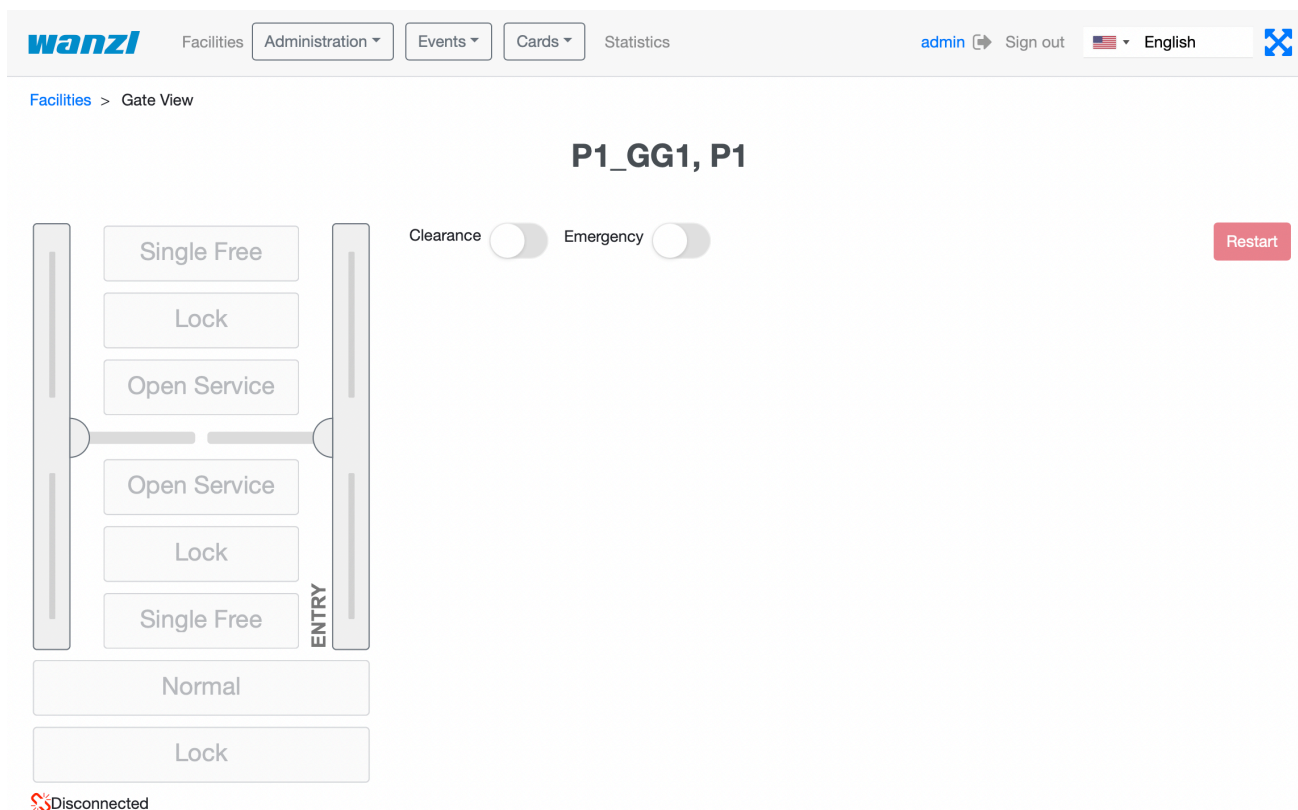

The screenshot shows the 'wanzi' management dashboard. The navigation bar includes 'Facilities', 'Administration', 'Events', 'Cards', and 'Statistics'. The user is logged in as 'admin' and the language is set to 'English'. The main content area is titled 'P1\_GG1, P1' and displays a gate control interface. The interface features a central gate diagram with the word 'ENTRY' written vertically on the right side. To the left of the gate are several control buttons: 'Single Free', 'Lock', 'Open Service', 'Open Service', 'Lock', and 'Single Free'. Below the gate diagram are two more buttons: 'Normal' and 'Lock'. To the right of the gate diagram are two toggle switches for 'Clearance' and 'Emergency', both currently turned off. A red 'Restart' button is located in the top right corner of the control area. At the bottom left, there is a red 'Disconnected' status indicator.


These buttons allow you to perform various actions:

Symbol	Description	Note
--------	-------------	------


<p>Clearance <input type="checkbox"/></p>	Turn cleaning mode on and off	
<p>Emergency <input type="checkbox"/></p>	Manually switch the emergency open state on and off	
<p>Restart</p>	Restart the gate	
<p>Konfiguration: <input type="text" value="kein freier Austritt"/></p>	Choose a new configuration of the gate from the combo box	Only if there are two or more configurations at the gate
<p>Anwenden</p>	Apply the new configuration	
<p>Abbrechen</p>	Do without the new configuration	


## Set up a new Gate

 Please click the button **New**

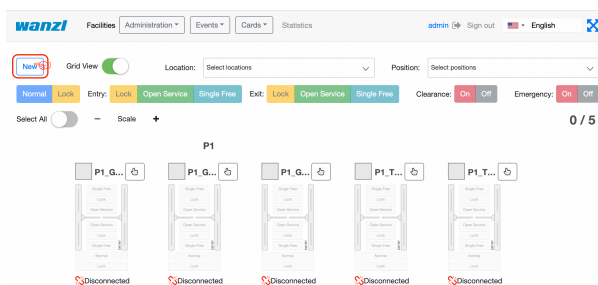


  In this view you create a **New** gate. The fields **Names**, **Displayed Name** and **Position** of the Gate must be verified with values. Press Save then click on Facilities.

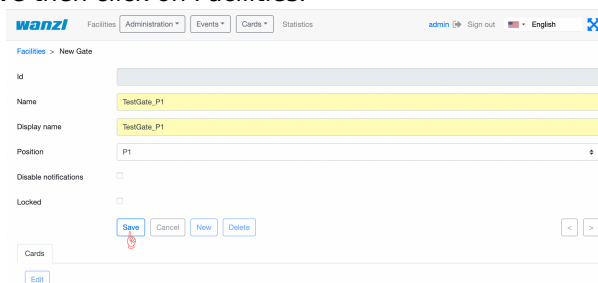

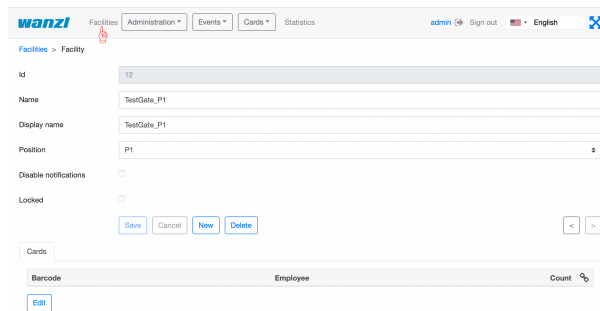

 
You can now see in the view that you have created a **NEW** gate, in this case the sixth gate in this view.

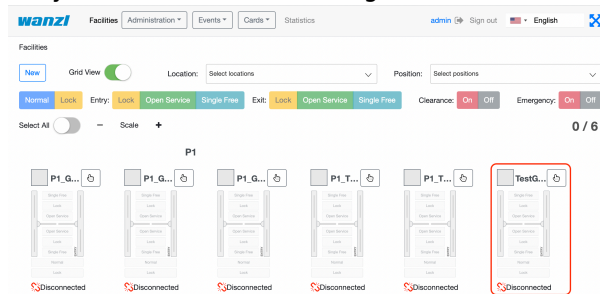

In the next step you connect the gate to the server.

<https://<IP-Adresse des Dashboards>>

To do this, check on the **General** tab that the correct gate name has been entered.

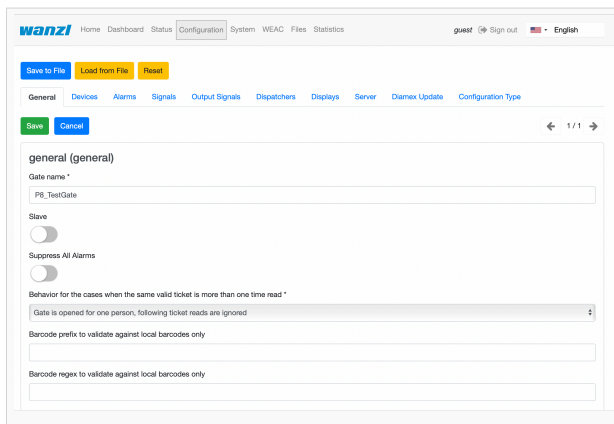

Then check the following points on the **Server** tab.

Server#0 (server)- must be set to remote.

Activated slide-switch is activated.

Your server should be entered under Name\*.

Your URL should be entered under URL\*.

 
Gate should be entered under Username\*.

Your password should be entered under Password\*.


Save at the end.

Datei:Gate conf.png  
295x295px


In the next step, please click on System in the top bar.

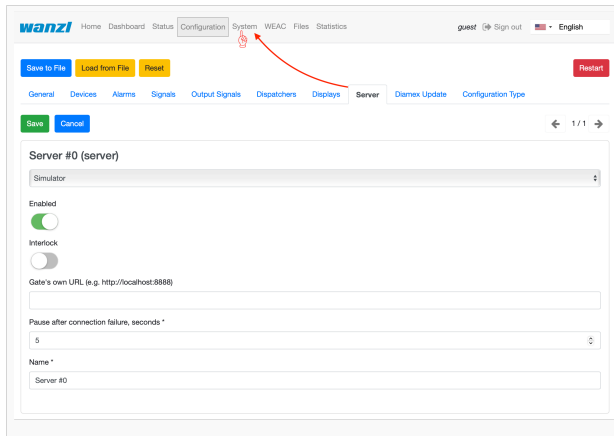

 You will now see the following display, here please press restart once. Now your new gate should be connected.

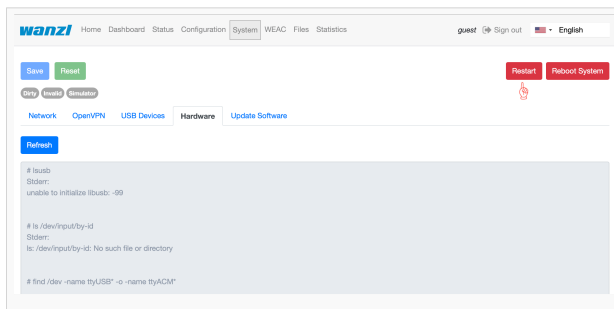

 Finally, you can check the connection in the **Status** tab. **CONNECTED** must now appear under State.

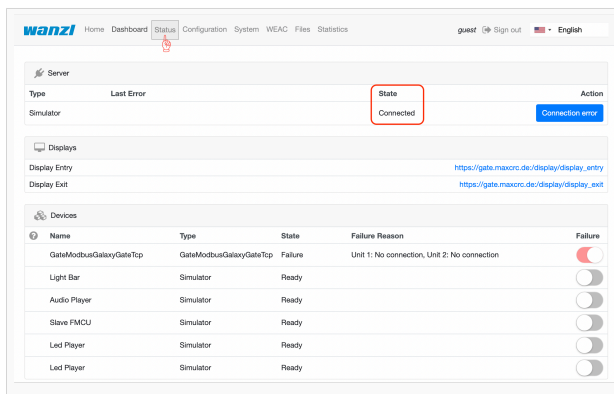



## Edit existing Gate

---

`https://<dns-name or ip-address>/gates`

You are in the same view as where you would create a new gate.

Please move the slide switch "Grid view" to the left.

**Datei:GridViewFMCU.png** In the view click on the name of the gate which you want to edit (in the example P8\_TestGate).

**Datei:GridViewSelect.png** In this view, please press the "Edit" function.

**Datei:PressEdit.png** You can now edit the gate in this view.

**Datei:GateCardsFMCU.png**

## Remove Gate

---

`https://<dns-name or ip-address>/gates`

You are in the same view as where you would create a new gate.

Please move the slide switch "Grid view" to the left.

**Datei:GridViewFMCU.png**

In the view click on the name of the gate which you want to delete (in the example P8\_TestGate).

**Datei:GridViewSelect.png**

In this view, please press the "Delete" function.

**Datei>DeleteGate.png**

To be on the safe side, you will now be asked again whether you really want to delete the element? Please confirm this.

**Datei:ConfirmDelete.png**

After deleting, you will automatically be shown the next gate (here in the example P1\_TestGate2). Please click on attachments here.

**Datei:GoToFacilities.png**

You will then see in the grid view that Gate P8\_TestGate is missing and has been successfully deleted.

**Datei:Bildschirmfoto 2022-02-22.png**

## Administration

---

### User

---

`https://<dns-name or ip-address>/users`

On this page you can see an overview of all users [Datei:FMCU Users.png](#)

Number	Function
1	Create new user
2	Filter users by location
3	Filter users by position

### Set up new User

---

Press under [User](#) on the button **New**

`https://<dns-name or ip-address>/new-user`

[Datei:FMCU newUser.png](#)

Field Name	Description
Id	Automatically generated unique number of the user
Username*	Username of the user to login
Password*	User's password for login
Email	Email address of the user for sending log messages
First name	User's first name
Last name	Last name of the user
Info	Description of the user
Superuser	The highest rights are assigned to the user
Locked	The user's login is blocked
Disable notifications	The user does not receive any notifications in the FMCU Management Dashboard

\* Strictly required fields Through the button **Save** the new user is created.

### Edit existing User

---

Press under [User](#) the user to edit

## Event Notifications

---

Under this tab, the notifications can be selected which the user should receive.

**Note:** If the checkbox **Disable notifications** is set, no notifications are displayed regardless of these settings.

## Locations & Positions Tab

---

You can set different locations in countries and cities. Separate access rights can be defined for each location via the authorization model.

## Groups Tab

---

This tab allows you to customize the user's group memberships.

## Permissions Tab

---

 
The user's permissions are displayed under this tab  
All changes are applied by clicking the **Save** button.

## Groups

---

`https://<dns-name or ip-address>/groups`

On this page you can see an overview of all groups

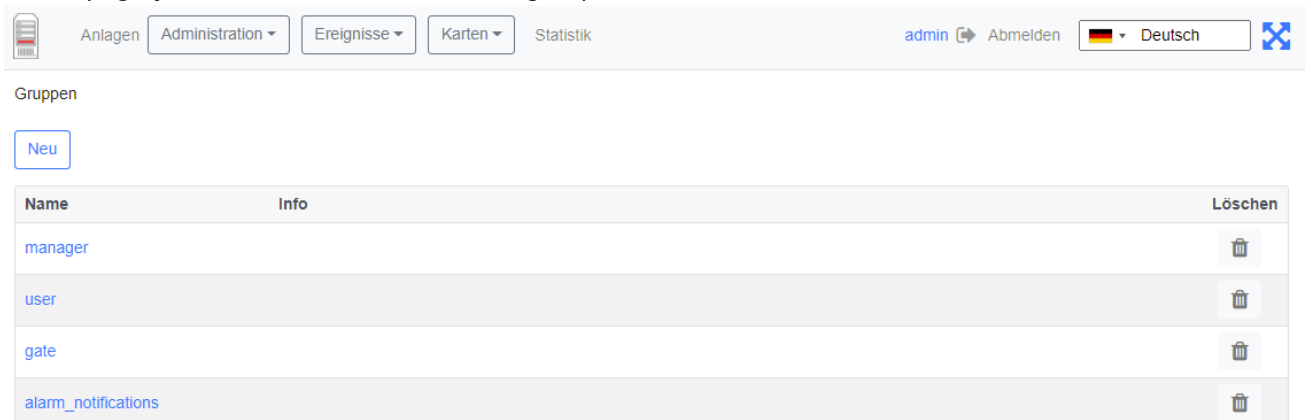

The screenshot shows a web interface for managing groups. At the top, there is a navigation bar with a hamburger menu icon, followed by tabs: 'Anlagen', 'Administration' (selected), 'Ereignisse', 'Karten', and 'Statistik'. On the right side of the navigation bar, there is a user profile 'admin' with a logout button 'Abmelden', a language dropdown set to 'Deutsch', and a blue 'X' icon.

Below the navigation bar, the page title is 'Gruppen'. There is a 'Neu' button for creating a new group.


The main content area contains a table with the following structure:

Name	Info	Löschen
manager		
user		
gate		
alarm_notifications		

## Set up new Group
 
`https://<dns-name or ip-address>/new-group`

Click under [Gruppen](#) the button **New**



[Gruppen](#) > Neu Gruppe

Id

Name

Info

[Benutzer](#) [Berechtigungen](#)

Benutzername	Email	Vorname	Nachname	Info
<input type="button" value="Bearbeiten"/>				

Field Name	Description
Id	Automatically generated unique number of the group
Name	Name of the Group
Info	Description of the Group

\* Strictly required fields

The new group is created by clicking the **Save** button.

## Edit existing Group

Click under [Gruppen](#) the Group you want edit

### Users Tab

This tab allows you to customize the members of the group.

### Permissions Tab

The permissions that are inherited by the members of the group are displayed under this tab. All changes are applied by clicking the **Save** button.

## Positions

---

```
https://<dns-name or ip-address>/cities
```

On this page you can see an overview of all positions

## Set up new Position

---

```
https://<dns-name or ip-address>/new-city
```

Under [Positions](#) click on the button **New** Enter the name of the position and assign the position to a location using the dropdown field. Click on the **Save** button to create the position

## Edit existing Position

---

Under [Positions](#) click to edit the position  
Here you can edit the position name and location

## Locations

---

```
https://<dns-name or ip-address>/countries
```

On this page you can see an overview of all locations

## Set up new Location

---

```
https://<dns-name or ip-address>/new-country
```

Press under [Locations](#) the button **New**

Field Name	Description
Id	Automatically generated unique number of the location
Name*	Location name
Code*	Location country code
Info	Description of the location

\* Strictly required fields

Click on the **Save** button to create the position

## Edit existing Location

Under [Location](#) , click the location you want to edit  
Here you can edit the name, code and info of the location

## Locations & Positions

<https://<dns-name or ip-address>/locations>

Here you can see an overview of all positions and their assigned locations

## Configuration

 
<https://<dns-name or ip-address>/configurations>

## Events

### Events

<https://<dns-name or ip-address>/events>

In this view, the events of all access controls are shown in an intuitive list view. There are filtering options and a name search for the events.

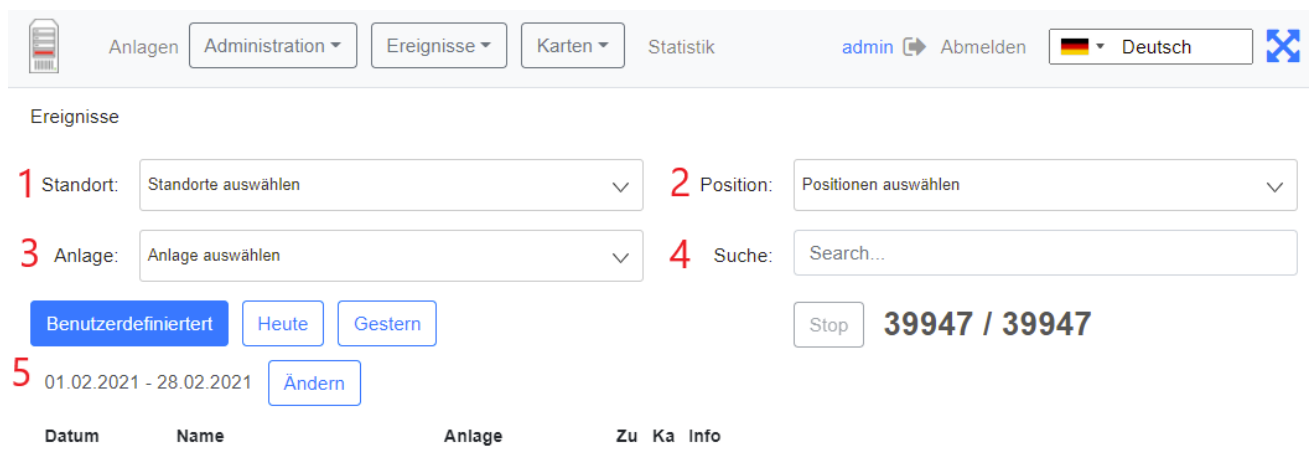

The screenshot shows the 'Ereignisse' (Events) management interface. At the top, there is a navigation bar with tabs for 'Anlagen', 'Administration', 'Ereignisse', 'Karten', and 'Statistik'. The user is logged in as 'admin' and the language is set to 'Deutsch'. Below the navigation bar, there are several filters: 'Standort' (Location), 'Position', 'Anlage' (Factory), and 'Suche' (Search). There are also buttons for 'Benutzerdefiniert', 'Heute', 'Gestern', and 'Stop'. The current view shows 39947 / 39947 events. A date range filter is set to '01.02.2021 - 28.02.2021'. Below the filters, there is a table with columns for 'Datum', 'Name', 'Anlage', 'Zu', 'Ka', and 'Info'.


The following filters can be set:

1. Location
2. Position
3. Factory
4. Search by Event name
5. Time Period

## Event Definitions
 
<https://<dns-name or ip-address>/event-definitions>

In this view, all events that the FMCU contains are listed and their event definition groups, supported states and categories are assigned.



Navigation bar with tabs: Anlagen, Administration, Ereignisse, Karten, Statistik. User: admin, Abmelden, Deutsch, and a blue X icon.

Ereignisdefinitionen

Name	Ereignisdefinitionsgruppen	Unterstützte Zustände	Kategorie
------	----------------------------	-----------------------	-----------

## Event definition Groups

<https://<dns-name or ip-address>/event-definition-groups>

All event definition groups are listed under this tab.



Navigation bar with tabs: Anlagen, Administration, Ereignisse, Karten, Statistik. User: admin, Abmelden, Deutsch, and a blue X icon.





Ereignisdefinitionsgruppen

Neu

Name	Ereignisse	Info	Löschen
Alarm events	ServerGateDevicesFailed		
	ServerGateAllDevicesOperational		
	GateUnauthorizedAccess		
	GateStateFireAlarm		
	GateDoorIsBeingBroken		

## Create a new Event definition Group

Click [Event definition groups](#) on the Button **New**


 Anlagen
 Administration ▾
Ereignisse ▾
Karten ▾
Statistik
admin 
Abmelden
 Deutsch


Ereignisdefinitionsgruppen > New Event Definition Group

Id   
 Name   
 Info

Ereignisdefinitionen

Name	Info	Kategorie	Ausgewählt
Fieldname	Description		
ID	Automatically generated unique group number		
Name	Name of the group		
Info	Group description		

\* Absolutely required fields

Under the **Event definition** tab select the event definitions that are to be assigned to the group.

## Event Subscriptions

`https://<dns-name or ip-address>/event-subscriptions`

There is the possibility to link groups of alarm messages with groups of users. As a result, only group members are notified of alarm messages that are also grouped,

Ereignisabonnements > Neues Ereignisabonnement

Id   
 Name   
 Gruppe  ▾  
 Ereignisdefinitionsgruppe  ▾  
 Locked   
 Info

Fieldname	Description
ID	internal value

 


Group	Summary of users
Ereignisdefinitionsgruppe	Event definition group
Locked	Notifications deactivated/activated
Info	Description field

## Notifications

<https://<dns-name or ip-address>/notifications>

Sent notifications are displayed in this overview. You can adjust the view accordingly using a date filter.

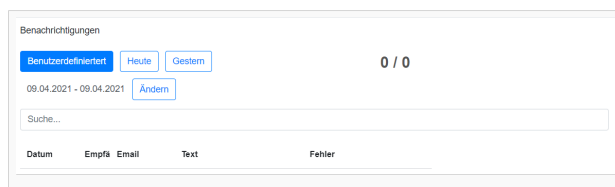


## Cards

### Cards

<https://<dns-name or ip-address>/cards>

 This view shows an overview of the RFID cards in the system with the gates enabled for access.

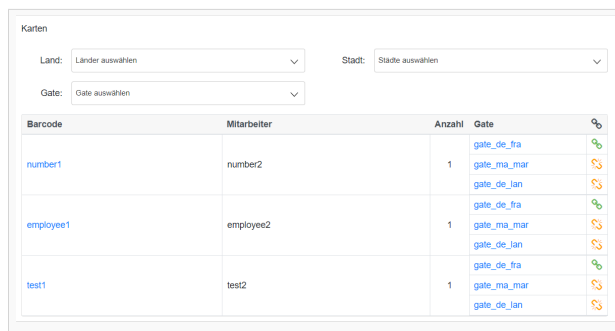


Barcode	Mitarbeiter	Anzahl	Gate	
number1	number2	1	gate_de_fra	🟢
			gate_ma_mar	🟡
employee1	employee2	1	gate_de_fra	🟢
			gate_ma_mar	🟡
test1	test2	1	gate_de_fra	🟢
			gate_ma_mar	🟡
			gate_de_fra	🟡

## Edit Cards
 
<https://<dns-name or ip-address>/cards-edit>


In this view, cards can be added / removed and authorizations for individual gates can be defined.

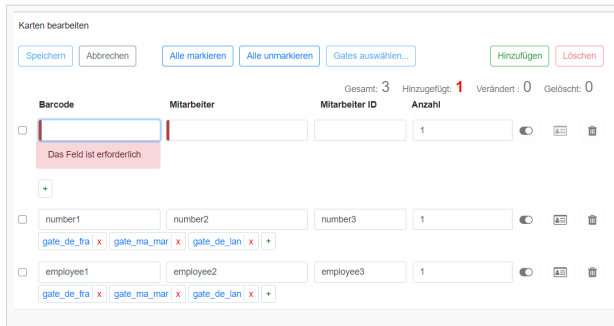

Field	Description
Barcode	Card content that is captured by the reader
Employee	Description field
Employee ID	Description field
Quantity	Number of accesses for this card

## Statistics

 In this view, all activities for the assigned access controls are shown. You can adjust the view with date filters. It is possible to group the screen output, e.g. only to evaluate the number per day or month. Finally, the data can be exported in Excel format or CSV-format.

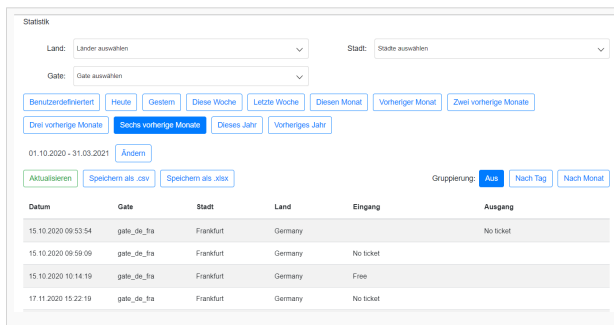

Datum	Gate	Stadt	Land	Eingang	Ausgang
15.10.2020 09:53:54	gate_de_fra	Frankfurt	Germany		No ticket
15.10.2020 09:59:09	gate_de_fra	Frankfurt	Germany	No ticket	
15.10.2020 10:14:19	gate_de_fra	Frankfurt	Germany	Free	
17.11.2020 15:22:19	gate_de_fra	Frankfurt	Germany	No ticket	