

Covcheck

Inhaltsverzeichnis

| | |
|--|----|
| 1 Introduction | 1 |
| 2 Installation of Covcheck Application Server | 1 |
| 2.1 Prerequisites | 1 |
| 2.2 Installation Steps | 1 |
| 2.3 Installation Files | 3 |
| 3 Configuration of Covcheck Application Server | 3 |
| 3.1 Change Default Password | 3 |
| 3.2 Managing Rulesets | 6 |
| 4 Configuration of Galaxy Gate | 7 |
| 4.1 Dispatcher | 7 |
| 4.2 Display | 10 |

Introduction

The document describes how to install the **Covcheck** application server and configure a Galaxy Gate so that COVID certificates and tests presented at the gate can be validated through the server's REST API.

Installation of Covcheck Application Server

Prerequisites

- Ubuntu 22.04 with Internet access
- User with **sudo** permissions and availability of a user with ID 1000 (**cat /etc/passwd | grep 1000**), which is by default
- Archive **covcheck-installer.tar.gz** with the files listed in [Installation Files](#). The name **covcheck-installer.tar.gz** can include a version, e.g. **covcheck-installer-v0.1.tar.gz**

Installation Steps

- Connect with **ssh** to the Ubuntu server
- Copy **covcheck-installer.tar.gz** to the local directory
- Execute the following command:

```
tar xvf covcheck-installer.tar.gz && cd ./covcheck-installer
```

Covcheck

- Modify file `.env` and specify the database password (**POSTGRES_PASSWORD**) and, if necessary, host name (**ODOO_HOST_NAME**) and timezone (**TZ**):

```
POSTGRES_PASSWORD=gR7K6GT8MvQHpvLs
ODOO_HOST_NAME=covcheck.maxcr.de
TZ=Europe/Berlin
```

- If SSL certificates are provided for domain name **ODOO_HOST_NAME**, put them into directory **/etc/nginx/certs**, e.g:

```
sudo mkdir -p /etc/nginx/certs
sudo tar xvf certs.tar.gz -C /
```

- If SSL certificates are not available, HTTP connection will be used and you need to modify file ****docker-compose**** accordingly:

- Add this section to container ****odoo****:

```
ports:
- 80:8069
```

- Comment out or remove port 80 for container ****nginx_proxy****:

```
ports:
# - 80:80
- 443:443
```

- Run the installer script:

```
script=install-covcheck.sh && chmod +x $script && ./ $script -i
```

- The installation is finished successfully if you see this line in the shell:

```
### Installation finished successfully
```

Covcheck

You can make sure that the Covcheck is installed and running by executing the following command:

```
curl https://covcheck.maxcrc.de/covcheck/status
```

The reply must be a JSON like as follows:

```
{  
  "status": "ok",  
  "last_update": "2022-07-04 12:06:34"  
}
```

Installation Files

.env

environment variables

covcheck.tar.gz

archived covcheck and request_extension ODOO addons

docker-compose.yml

docker compose file

git-submodule-status

information about git submodules that comprise the Covcheck application server

install-covcheck.sh

primary installation script

nginx-vhost

template vhost file for nginx

odoo.conf


configuration file for ODOO

Configuration of Covcheck Application Server


Change Default Password

Open the address of the server in a browser and logging using the following default credentials:


| Username | Password |
|----------|----------|
| admin | admin |

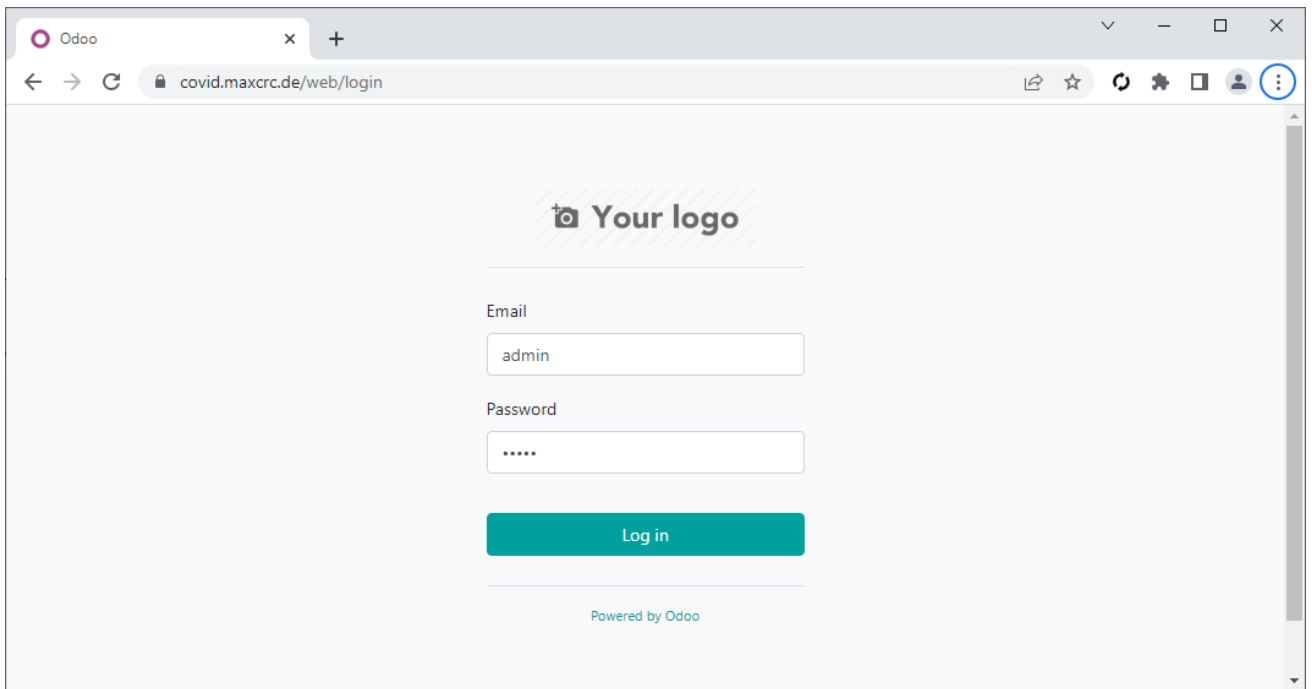

Click the **Administrator** in the top right corner and then **Preferences**:

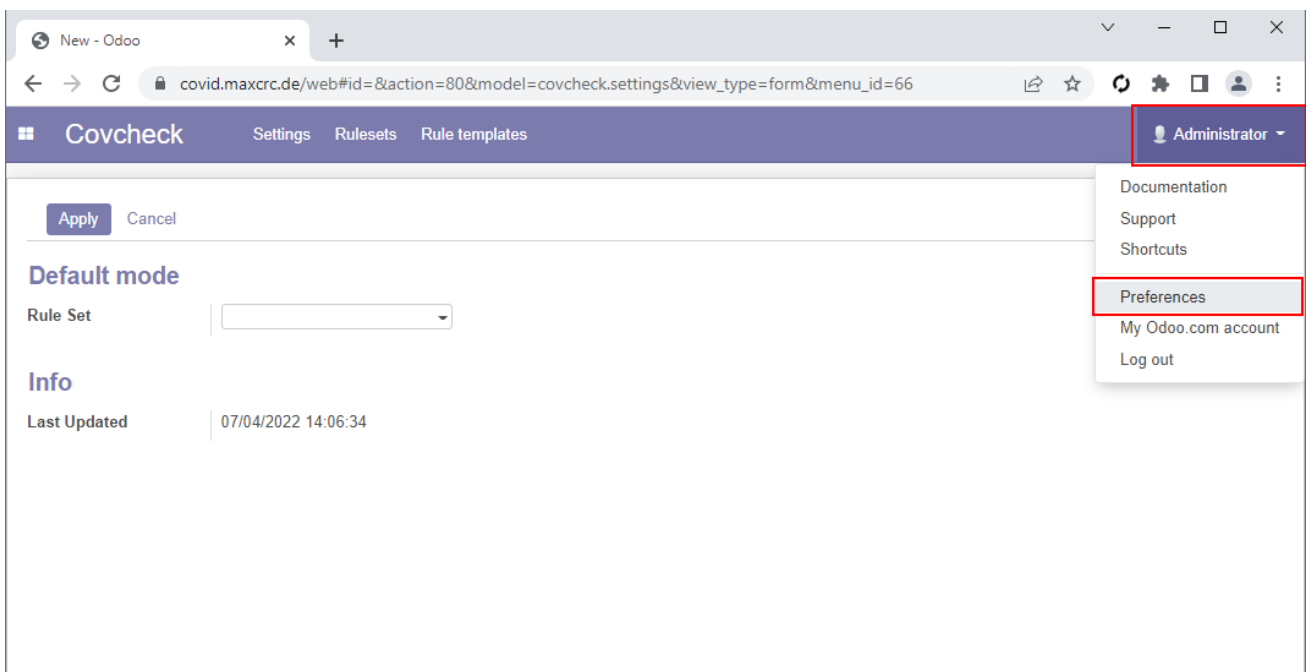


In the opened window click **Change password**:

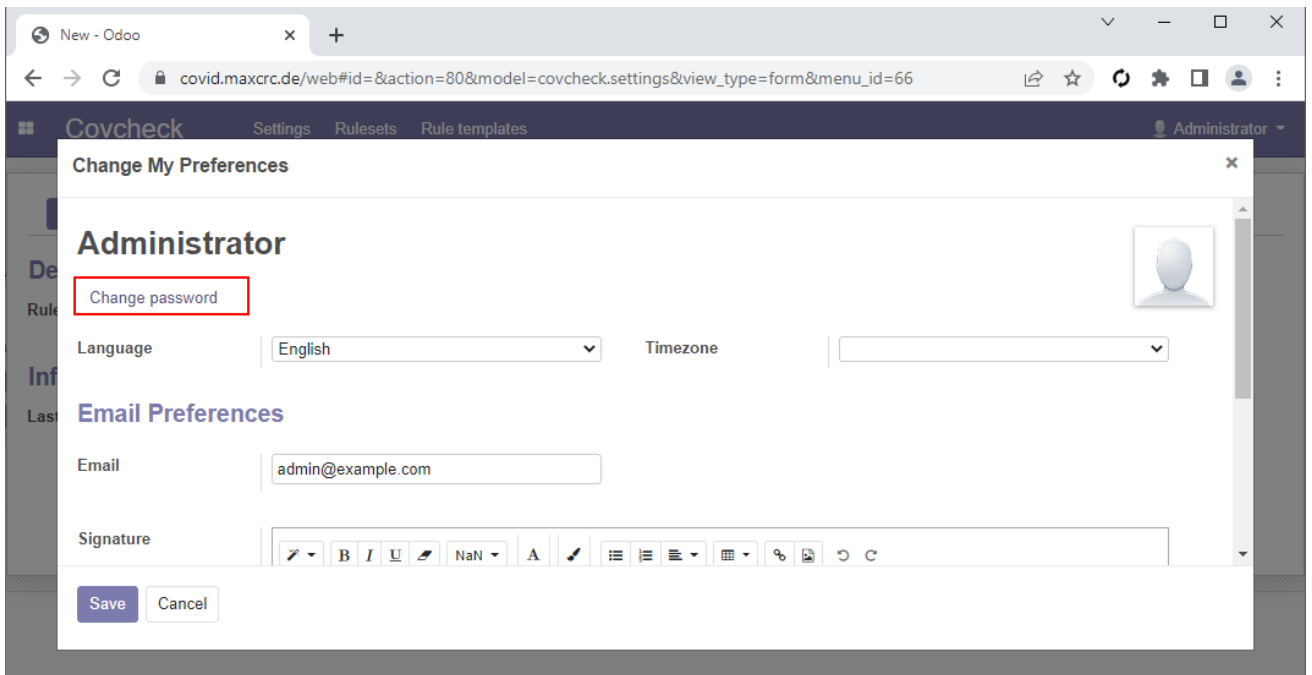


Fill-in the following fields and then click **Change Password**:

- Old Password
- New Password
- Confirm New Password

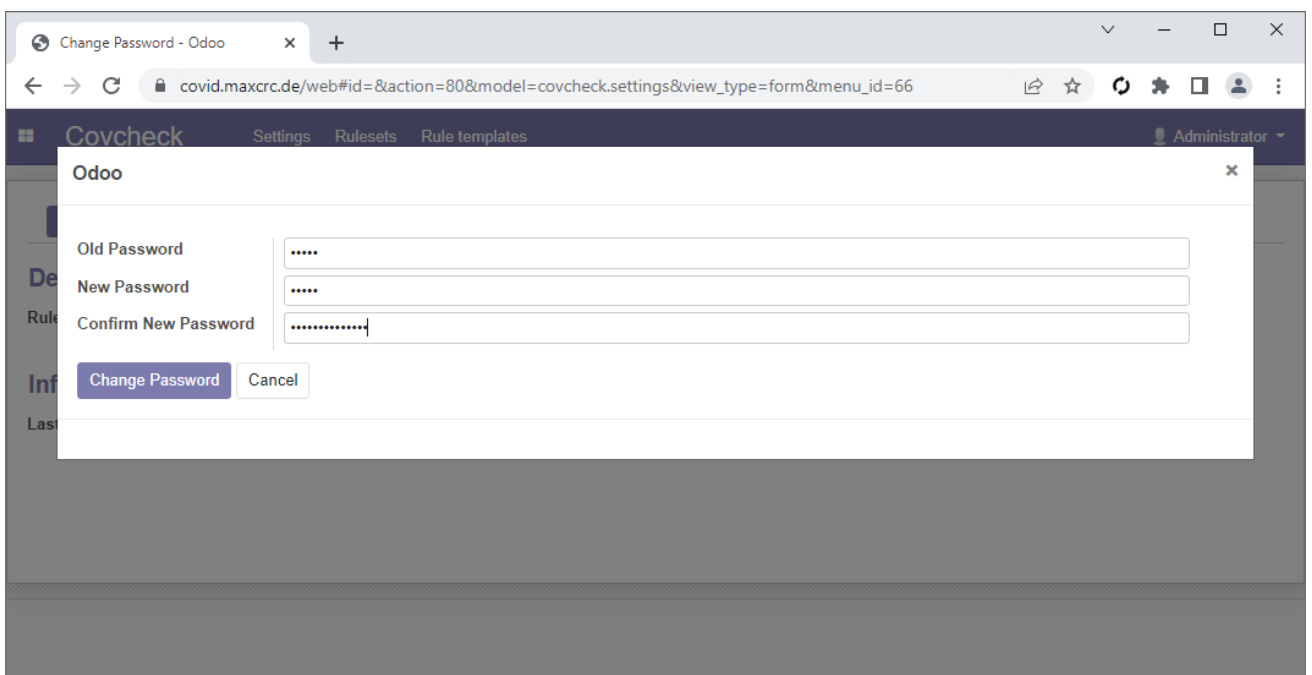


Managing Rulesets


You can add, modify and delete rulesets on the **Rulesets** page:

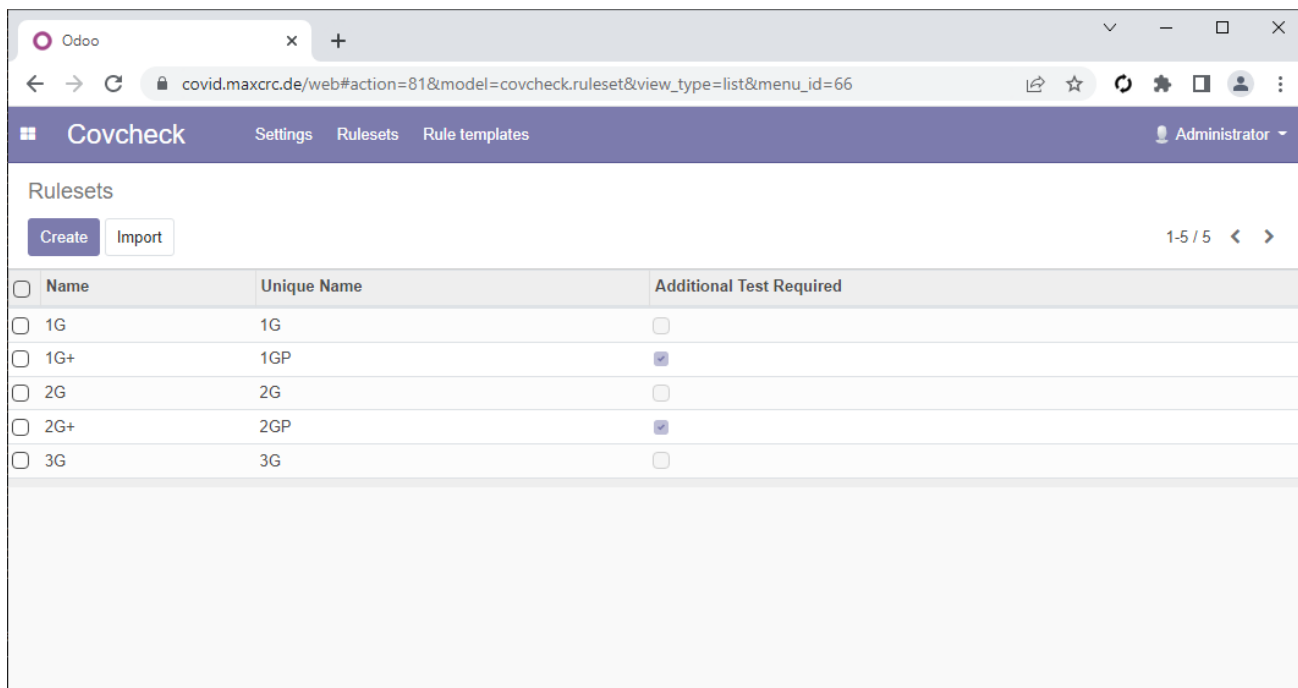

For example, let us create a ruleset **3G+**, which requires an additional test. Click **Create** fill-in the fields **Name** and **Unique Name**, check **Additional Test Required** and click **Save**:

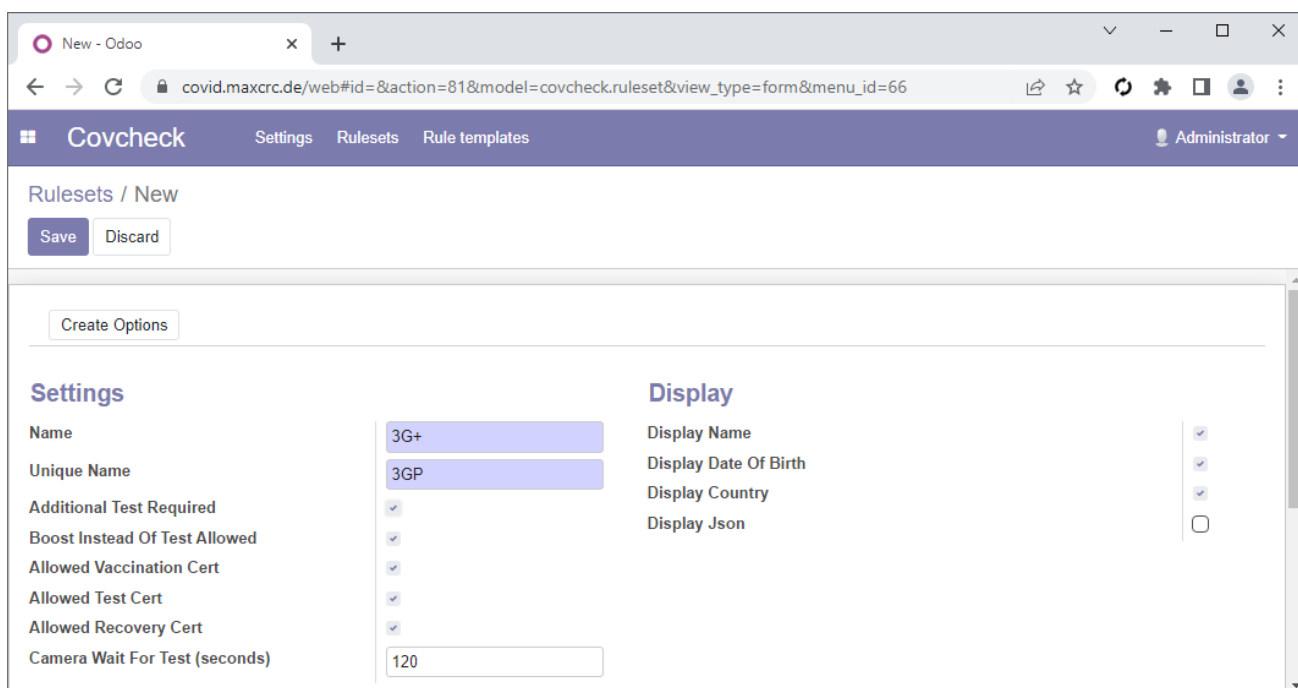

The list now includes the **3G+** ruleset:

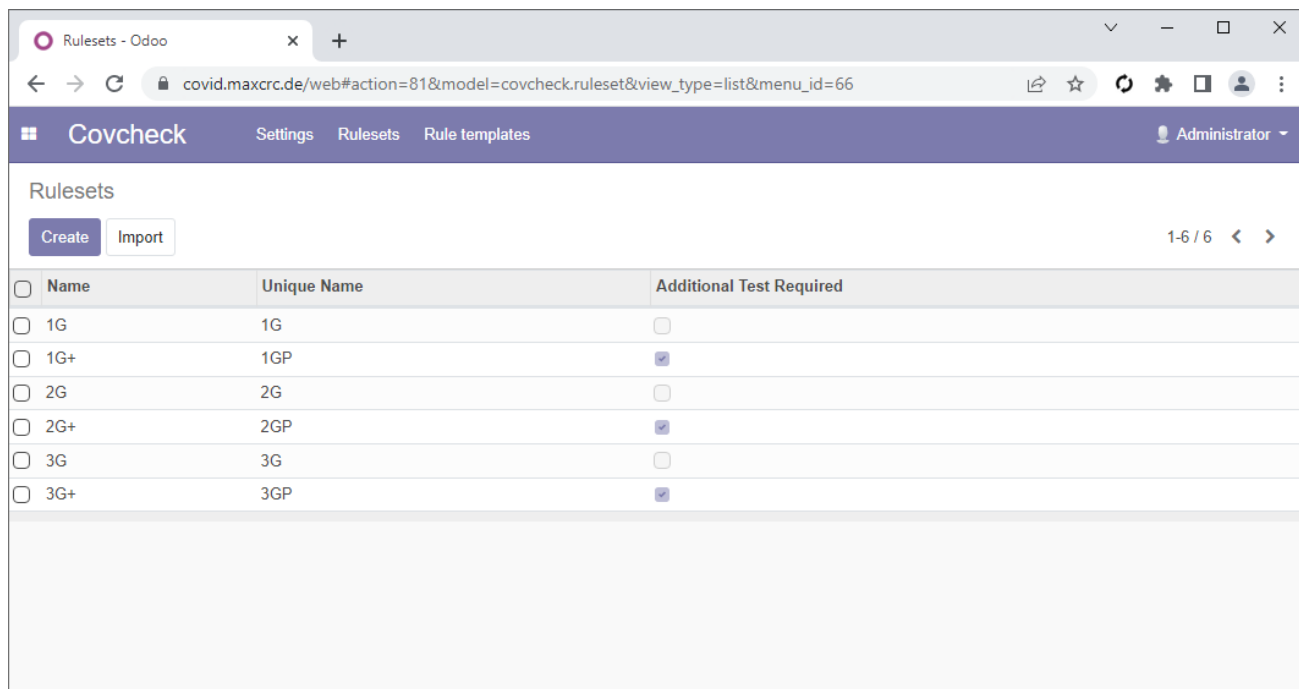


| <input type="checkbox"/> | Name | Unique Name | Additional Test Required |
|--------------------------|------|-------------|-------------------------------------|
| <input type="checkbox"/> | 1G | 1G | <input type="checkbox"/> |
| <input type="checkbox"/> | 1G+ | 1GP | <input checked="" type="checkbox"/> |
| <input type="checkbox"/> | 2G | 2G | <input type="checkbox"/> |
| <input type="checkbox"/> | 2G+ | 2GP | <input checked="" type="checkbox"/> |
| <input type="checkbox"/> | 3G | 3G | <input type="checkbox"/> |
| <input type="checkbox"/> | 3G+ | 3GP | <input checked="" type="checkbox"/> |

Configuration of Galaxy Gate

In order COVID certificates and tests can be validated against the Covcheck server, the proper dispatcher and display must be selected and configured.

Dispatcher

Open the URL of the gate, login with user **wanzl** and navigate to the **Configuration** page. Select tab **Dispatchers** and click **Add**:

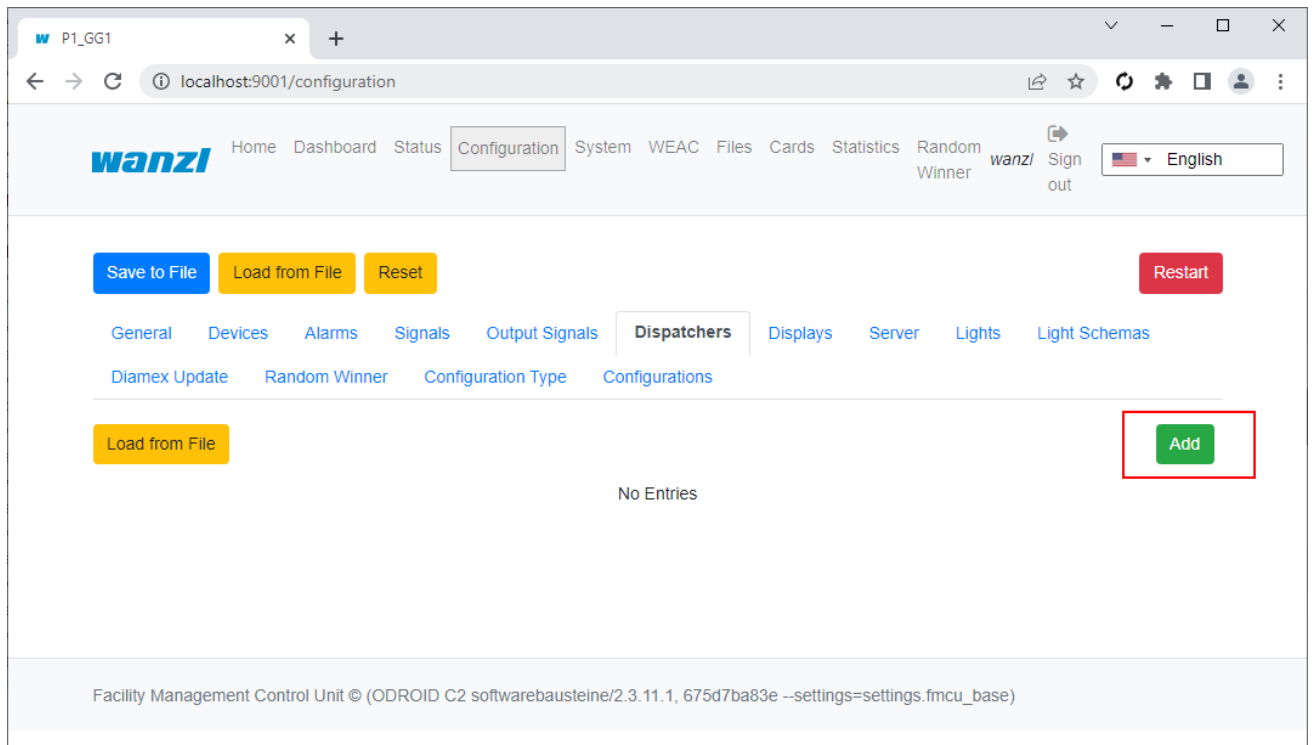

In the combo box under the title **Dispatcher** select **Covcheck**, modify the following properties if needed and click **Save**:

URL


Base URL of Covcheck's API

Ruleset

Ruleset for validating COVID certificates and tests

COVID Test timeout, ms

When a COVID test is required, specifies the timeout of waiting for it

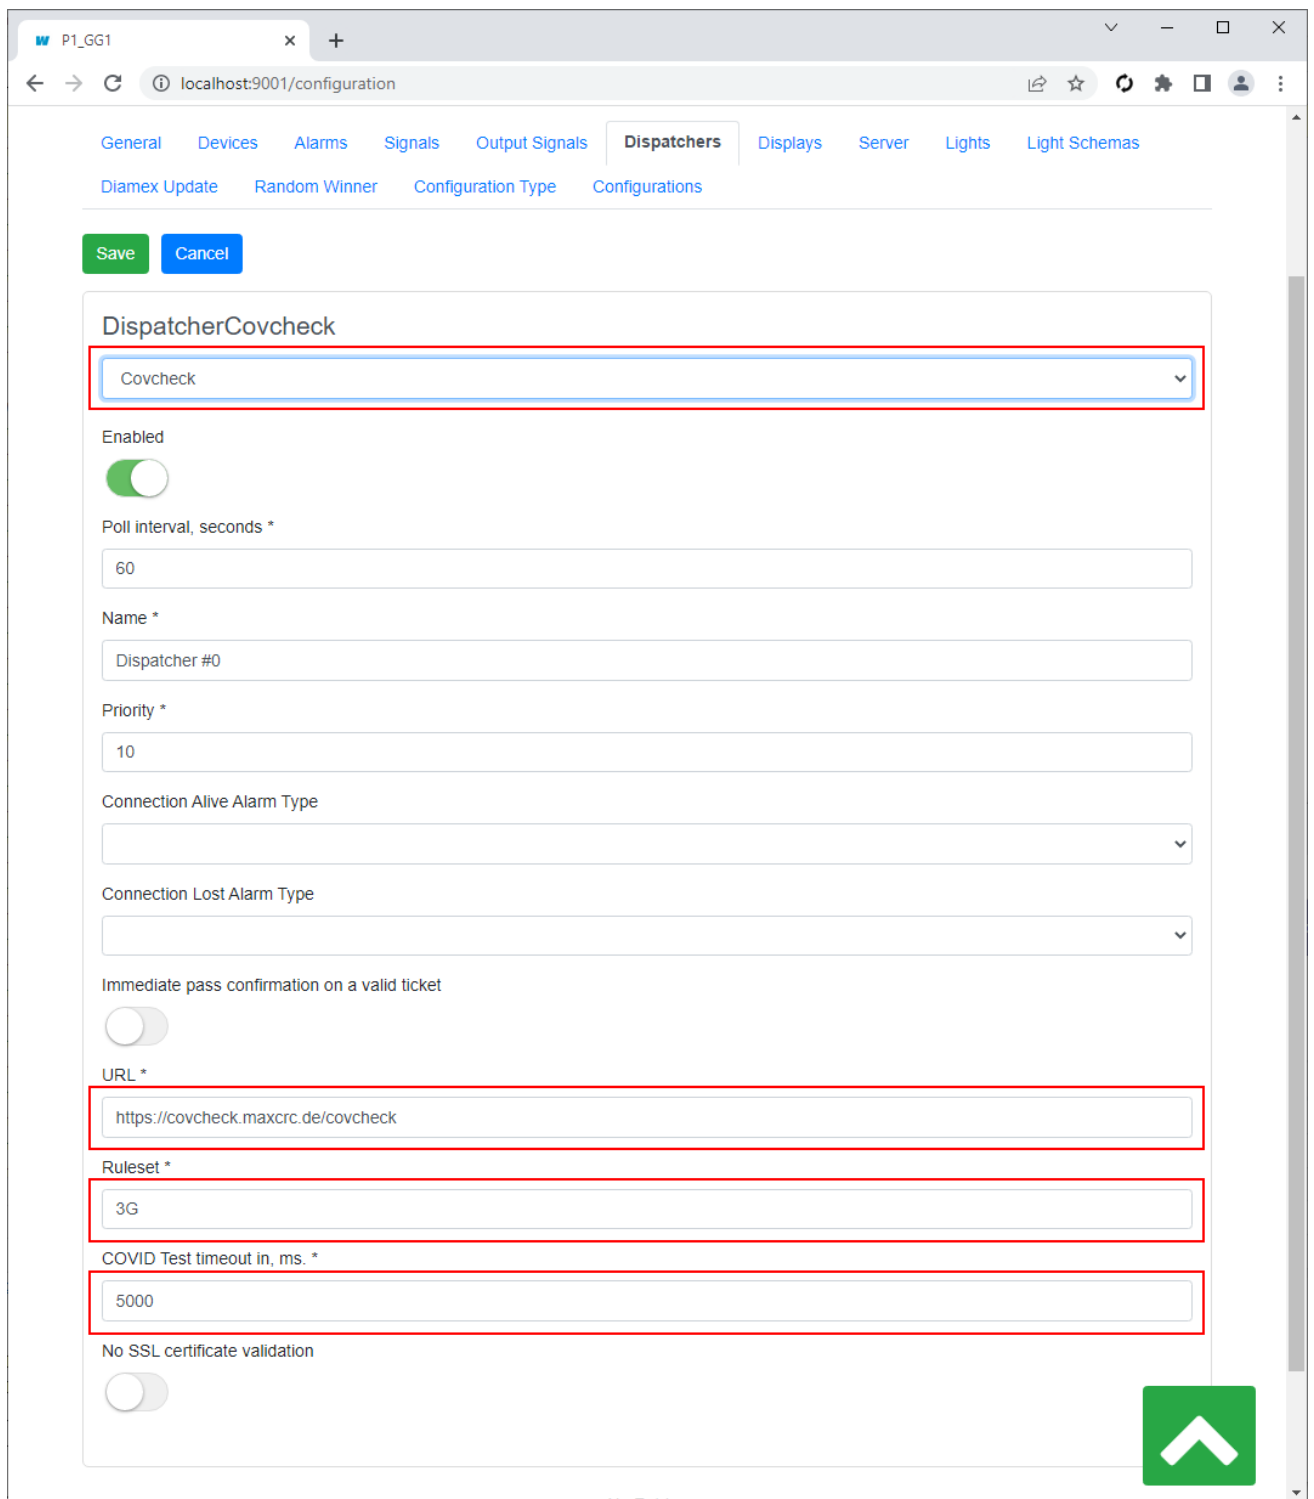

DispatcherCovcheck

Covcheck

Enabled

Poll interval, seconds *
60

Name *
Dispatcher #0

Priority *
10

Connection Alive Alarm Type

Connection Lost Alarm Type

Immediate pass confirmation on a valid ticket

URL *
https://covcheck.maxcrc.de/covcheck


Ruleset *
3G

COVID Test timeout in, ms. *
5000

No SSL certificate validation

Restart the gate:

Covcheck

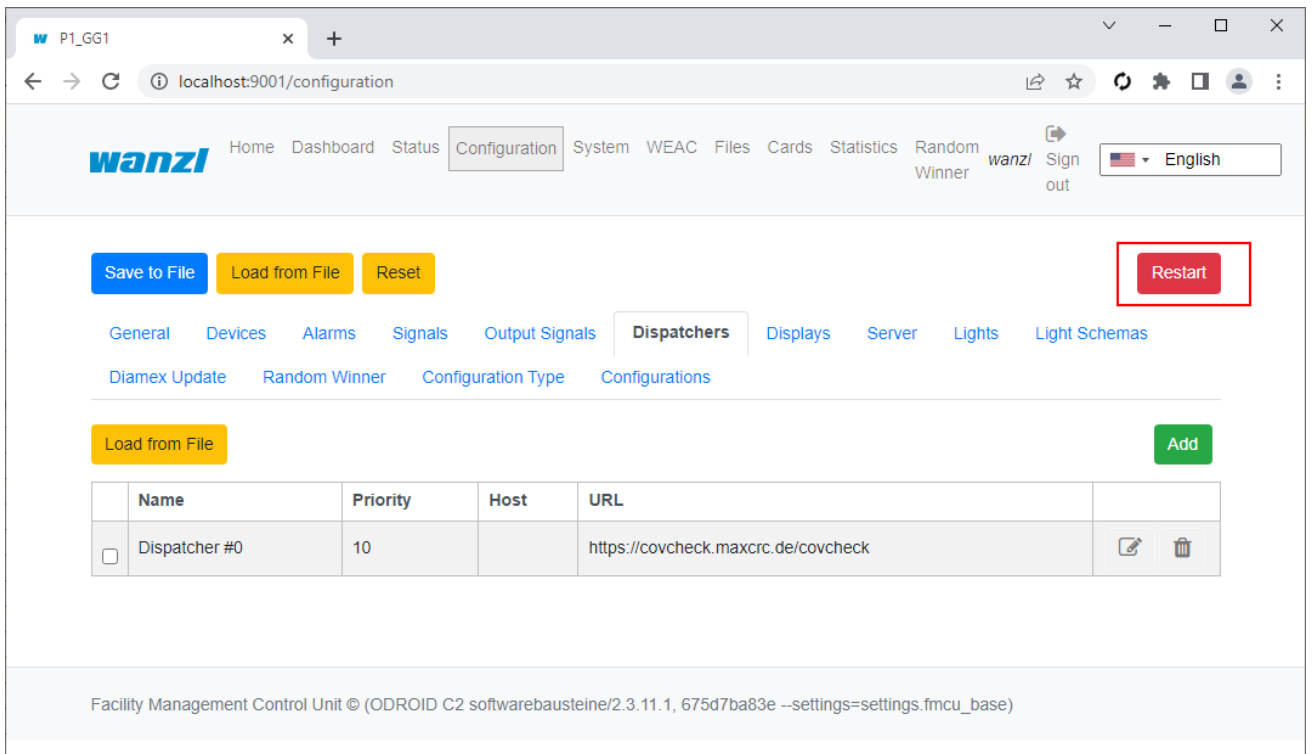



Save to File Load from File Reset Restart

General Devices Alarms Signals Output Signals **Dispatchers** Displays Server Lights Light Schemas


Diamex Update Random Winner Configuration Type Configurations

Load from File Add

| | Name | Priority | Host | URL | |
|--------------------------|---------------|----------|------|-------------------------------------|---|
| <input type="checkbox"/> | Dispatcher #0 | 10 | | https://covcheck.maxcrc.de/covcheck |   |

Facility Management Control Unit © (ODROID C2 softwarebausteine/2.3.11.1, 675d7ba83e --settings=settings.fmcu_base)

If the Covcheck server is available, the **Error** field is empty:

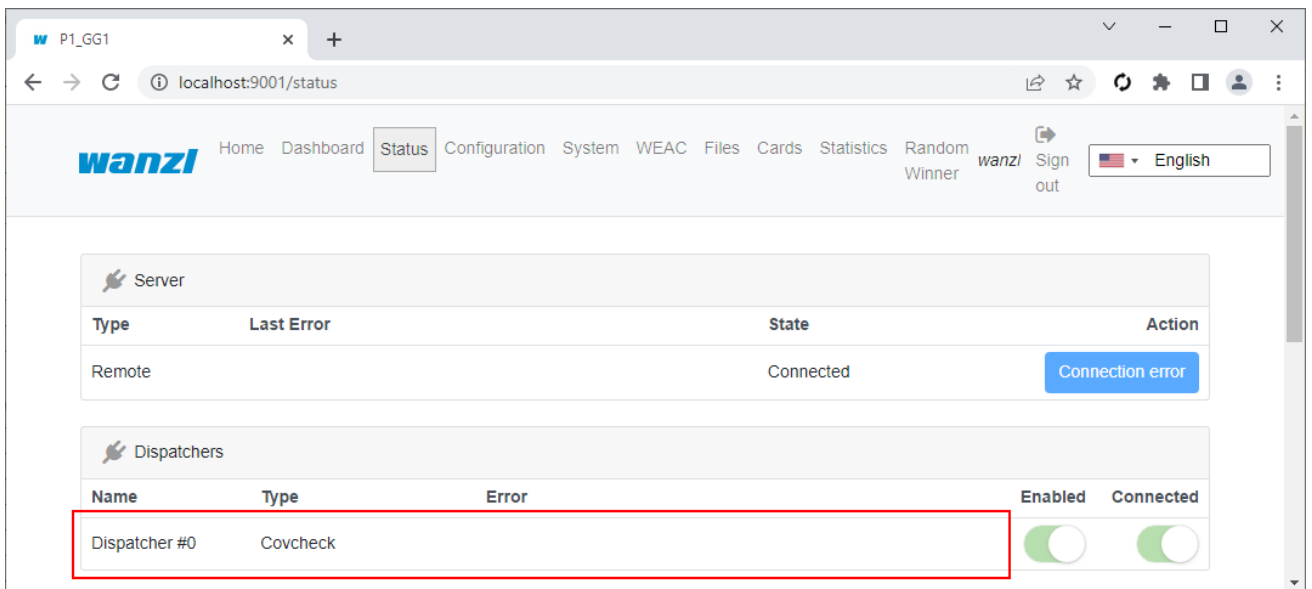

Server


| Type | Last Error | State | Action |
|--------|------------|-----------|------------------|
| Remote | | Connected | Connection error |

Dispatchers

| Name | Type | Error | Enabled | Connected |
|---------------|----------|-------|-------------------------------------|-------------------------------------|
| Dispatcher #0 | Covcheck | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

Display

Open the URL of the gate, login with user **wanzl** and navigate to the **Configuration** page. Select tab **Displays** and click **Add**:

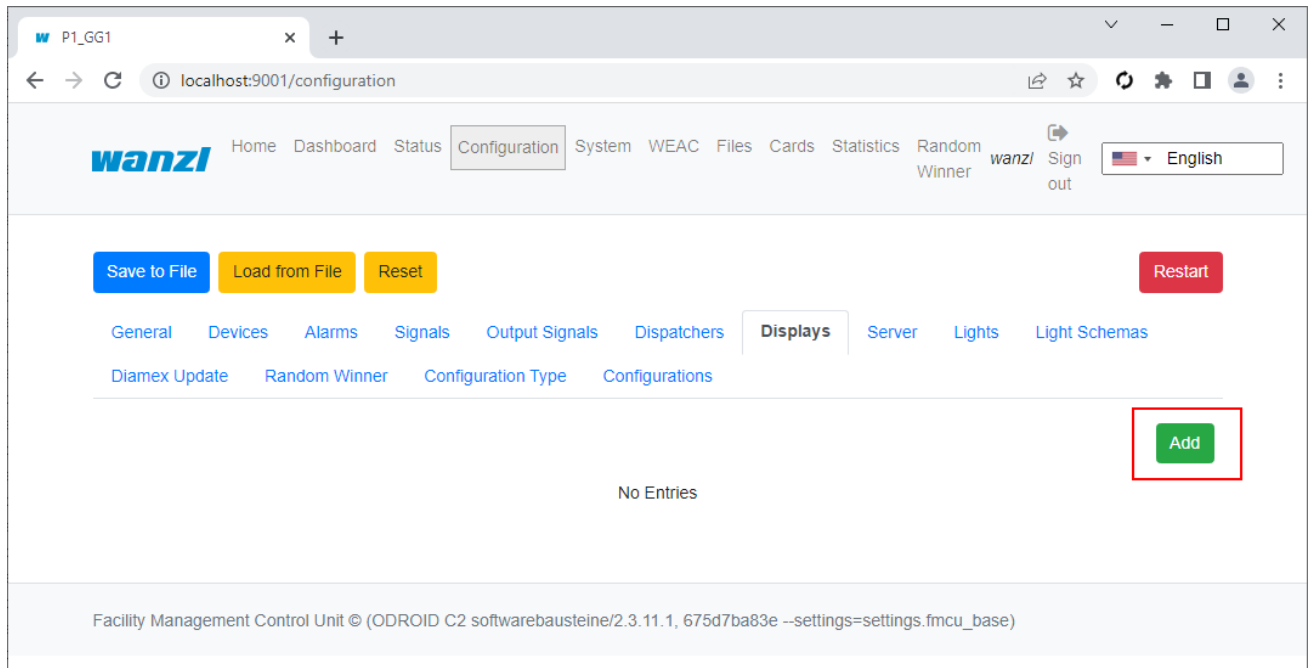


In the combo box under the title **Display** select **Display Gate Covcheck**, modify the following properties if needed and click **Save**:

Gate side

Side of the display, **Entry** or **Exit**

Name

User-friendly name

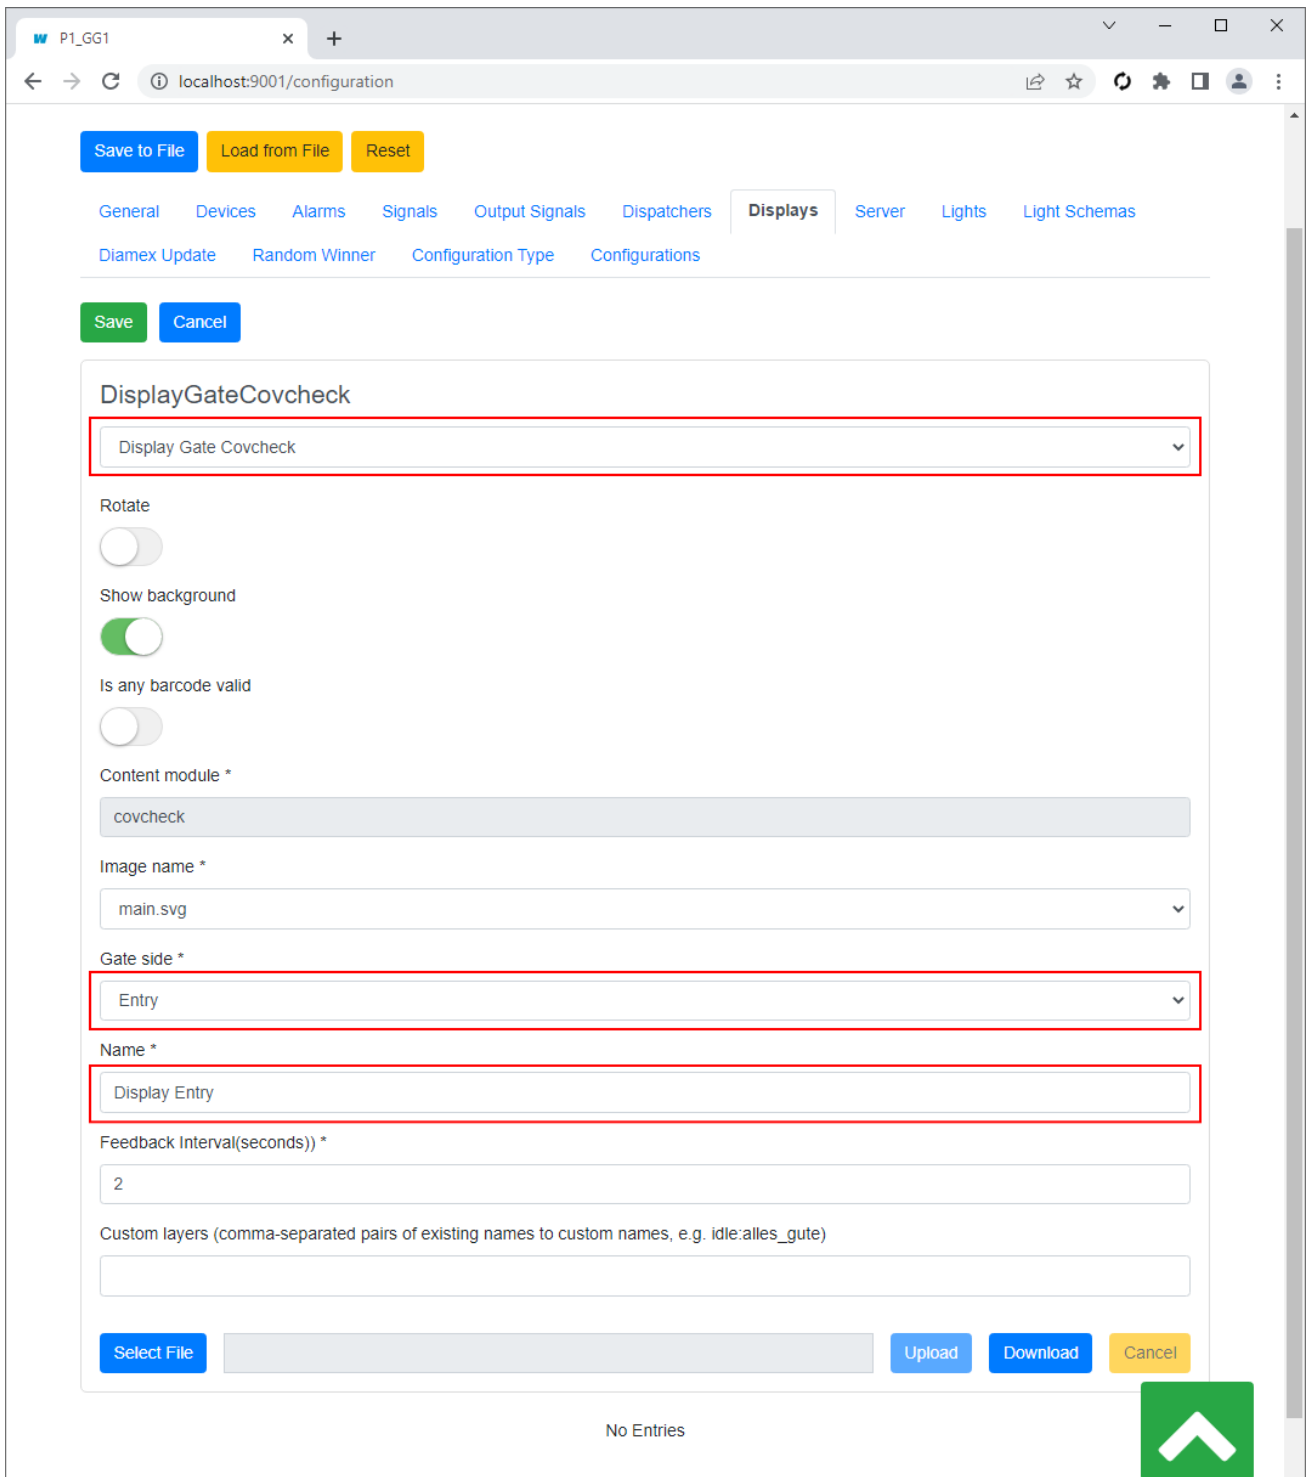


The screenshot shows a web browser window with the URL localhost:9001/configuration. The page has a navigation menu with tabs: General, Devices, Alarms, Signals, Output Signals, Dispatchers, **Displays**, Server, Lights, Light Schemas. Below the navigation are buttons for 'Save to File', 'Load from File', and 'Reset'. The main content area has 'Save' and 'Cancel' buttons. The configuration for 'DisplayGateCovcheck' is shown with the following fields:


- Display Gate Covcheck (dropdown menu)
- Rotate (toggle switch, off)
- Show background (toggle switch, on)
- Is any barcode valid (toggle switch, off)
- Content module * (text input: covcheck)
- Image name * (dropdown menu: main.svg)
- Gate side * (dropdown menu: Entry)
- Name * (text input: Display Entry)
- Feedback Interval(seconds) * (text input: 2)
- Custom layers (comma-separated pairs of existing names to custom names, e.g. idle:alles_gute) (text input)

At the bottom, there are buttons for 'Select File', 'Upload', 'Download', and 'Cancel'. A green arrow button is located in the bottom right corner. The text 'No Entries' is displayed at the bottom center.

Restart the gate:

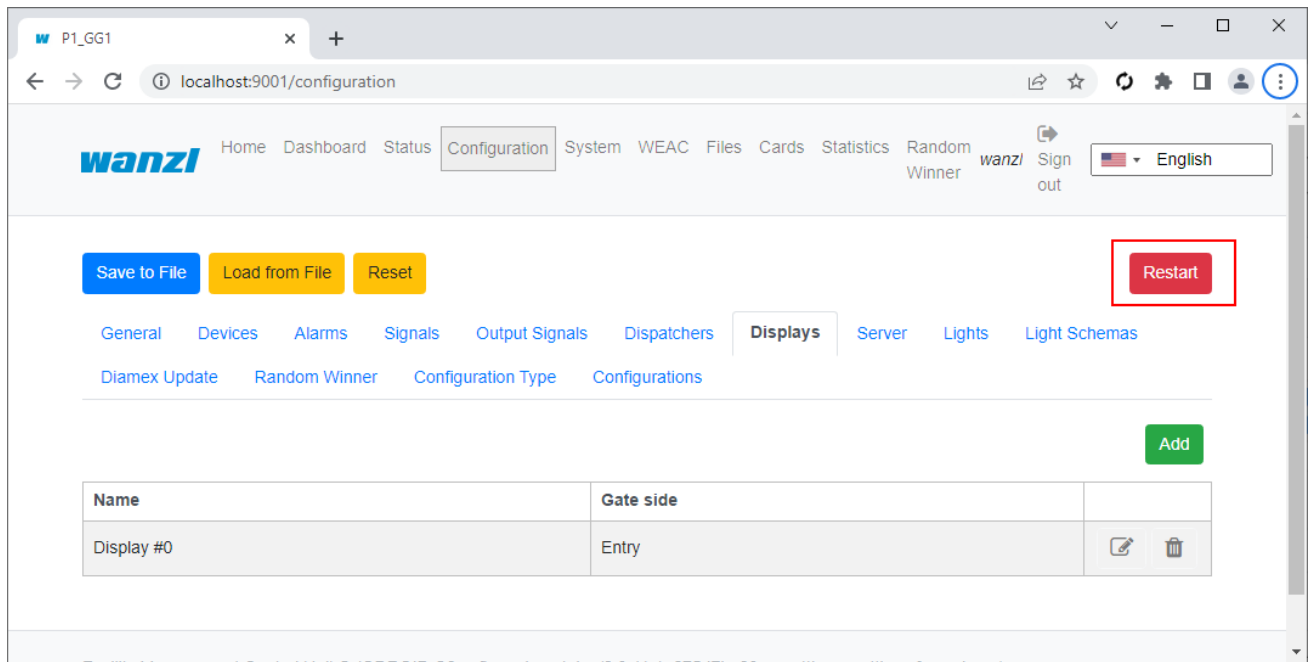

Navigate to the **Status** page and open the link corresponding to the display:

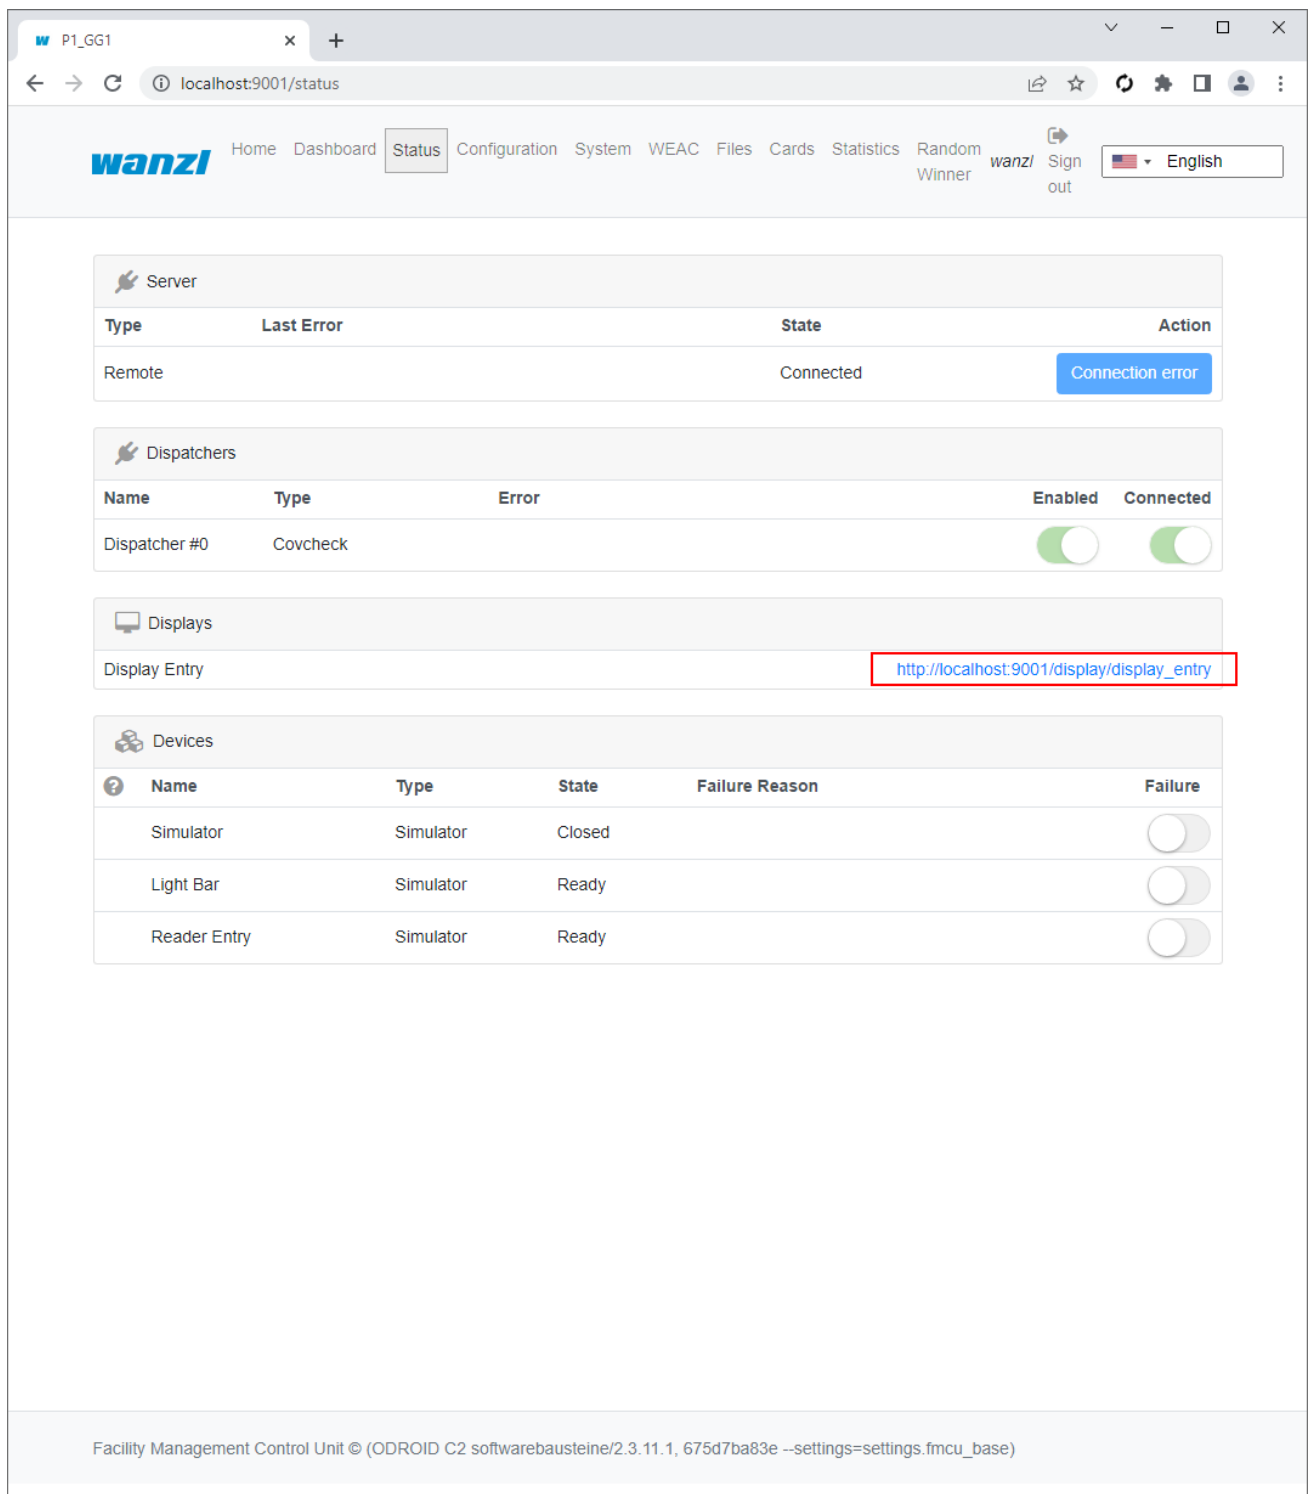

The screenshot shows a web browser window with the address bar at localhost:9001/status. The page has a navigation menu with 'Status' selected. The main content is divided into four sections:

- Server:** A table with columns 'Type', 'Last Error', 'State', and 'Action'. It shows one entry: Remote, Connected, and a 'Connection error' button.
- Dispatchers:** A table with columns 'Name', 'Type', 'Error', 'Enabled', and 'Connected'. It shows one entry: Dispatcher #0, Covcheck, and two green toggle switches for Enabled and Connected.
- Displays:** A table with columns 'Display Entry' and 'URL'. The URL 'http://localhost:9001/display/display_entry' is highlighted with a red box.
- Devices:** A table with columns 'Name', 'Type', 'State', 'Failure Reason', and 'Failure'. It shows three entries: Simulator (Closed), Light Bar (Ready), and Reader Entry (Ready), each with a toggle switch for Failure.

At the bottom of the page, there is a footer: Facility Management Control Unit © (ODROID C2 softwarebausteine/2.3.11.1, 675d7ba83e --settings=settings.fmcu_base)

The following screen for the idle state invites to present a COVID certificate:





When in addition a test certificate is required, the next screen asks to show it:



