



## Gate ~ FMCU ~ management dashboard/en



### Inhaltsverzeichnis

1 General .....	1
2 Headline .....	1
3 Connectivity Board .....	2
4 Configuration Management .....	2
4.1 Architecture .....	8
4.2 Roadmap .....	9
5 Management of Events .....	10
6 Events .....	10
7 Event Definitions Page .....	10
8 Event Definition Groups .....	11
9 Event Subscriptions .....	11
10 Configuration .....	12

## General

The Wanzl Access Manager offers a central dashboard for access controls in a homogeneous interface, displays the corresponding states and supports the user in the administration of these components. The Wanzl Access Manager is a leading platform for monitoring and managing access controls of security areas.

## Headline

	1 Anlagen	2 Administration	3 Ereignisse	4 Karten	5 Statistik	6 admin	7 Abmelden	8  Deutsch	9
Nummer	Funktion								
2	Aufklappmenü Administration								
3	Aufklappmenü Ereignisse								
4	Aufklappmenü Karten								
5	Button Statistiken								
6	Anzeige Angemeldeter Benutzer								
7	Button zur Abmeldung des Benutzers								
8	Aufklappmenü zur Wahl der Anzeigesprache								
9	Button Anpassung der Darstellung auf die gesamte Bildschirmbreite								



## Connectivity Board

Contact	Type	Impulse	Description
<b>A8</b>	Output	Yes (500 ms)	Person has entered
<b>A9</b>	Output	Yes (500 ms)	Alarms*
<b>E3</b>	Input	Yes (500 ms)	Open Entry
<b>E4</b>	Input	Yes (500 ms)	Open Exit
<b>E6</b>	Input	Yes (200ms)	Card is valid, open the gate
<b>E7</b>	Input	Yes (200ms)	Card is invalid, do not open the gate
<b>E8</b>	Input	No	Emergency State button**
<b>E9</b>	Input	Yes (500 ms)	Open Entry 70%
<b>E10</b>	Input	No	Fire Alarm

\*A9 Alarms:

- Gate is out of order, when a mandatory device is broken or a connection to the server is broken (if the server is used in the solution).
- Tailgating or other unwanted actions.
- Entry barcode scanner is broken or it is a stub.
- Gate in the **Fire Alarm** or **Emergency** state. The alarm is produced as a repetitive pulse signal (700ms).
- Gate is open only for exit.

After the Emergency State button pressed, the gate switches to the Emergency State. Then only exit from this state is to restart the gate.

The signal can be set/received to/from a contact from any of the halves of the gate.

## Configuration Management

### User Interface

The Galaxy Gate is configured through the **/configuration** page. If the server is running at 192.168.1.221 and port is 8888, the url is:

`http://192.168.1.221/configuration`



## Gate ~ FMCU ~ management dashboard/en

The screenshot shows a configuration interface for a 'Dispatcher' section and a 'Devices' section. In the Dispatcher section, fields include Type (set to 'dispatcher\_default'), Remote Host (set to 'http://localhost:8888'), Remote Service Path (set to 'remote-service/VenueManagement/ASP/turnstileInterface.asp'), Remote Camera Upload Path (set to 'remote-service/VenueManagement/ASP/turnstileInterfacePhoto.asp'), Poll Interval (set to 120 seconds), No Connection Audio Message Timespan (set to 30 seconds), and No Connection Audio Message Count (set to 4). In the Devices section, there are two rows for Barcode Readers: one for 'Barcode Reader Entry' (Type set to 'barcode\_scanner\_simulator') and one for 'Barcode Reader Exit' (Type set to 'barcode\_scanner\_simulator'). Both rows have 'Instance Name' fields.

There are two buttons on the page:

Name	Description	Action
<b>Save</b>	Saves the modified configuration to the server	Post
<b>Reset</b>	Discards any changes by reloading the configuration from the server	Get

The configuration is split into sections and subsections:

- General
  - Dispatcher
  - Miscellaneous
- Devices
  - Barcode Reader Entry
  - Barcode Reader Exit
  - Gate
  - Tracking Camera
  - Audio Player
  - Camera
- Displays
  - Display Gate Entry
  - Display Gate Exit
  - Display Entry

- Display Exit
- Display TimelInfo

Here are some screenshots:

General

**Dispatcher**

Type

Host\*

Port\*

Protocol

Password\*

Poll Interval, seconds\*

No Connection Audio Message Timespan, seconds\*

No Connection Audio Message Count\*

**Miscellaneous**

Ticket Policy

WebSocket Protocol

Gate Role

Devices

<b>Barcode Reader Entry</b>	<b>Barcode Reader Exit</b>
Type	Type
barcode_scanner_rfid	barcode_scanner_magellan
Instance Name *	Instance Name *
Barcode Scanner Entry	Barcode Scanner Exit
Read card not often than, ms *	Read card not often than, ms *
1000	1000
Port *	Port *
/dev/ttyUSB2	/dev/ttyUSB3
Beep Enabled	
<input type="button" value="OFF"/>	
<b>Gate</b>	
Type	
gate_galaxy_modbus	
Port *	
/dev/ttyUSB0	
Timeout, ms *	
500	
Baud rate *	
115200	
Reverse	
<input type="button" value="OFF"/>	
Timeout Count *	
2	
Timespan Before Audio Message, seconds *	
10	

**Audio Player**

Type

audio\_player\_sonos

Host Ip Address\*

192.168.101.86

Sonos Ip Addresses, separated by a comma\*

192.168.101.159

Volume, %\*

100

**Camera**

Type

camera\_http

Url\*

192.168.1.33

User\*

admin

Password\*

pass


Delay On Enter, ms\*

0

Delay On Exit, ms\*

0

Disabled



**Tracking Camera**

Type

tracking\_camera\_xovis

Host\*

10.122.21.21

Port\*

80

Protocol

http

Password\*

pass

Entry Line\*

EnterLine

Exit Line\*

ExitLine

Inner Entry Zone\*

EnterDangerZone

Inner Exit Zone\*

ExitDangerZone

Outer Entry Zone\*

EnterZone

Outer Exit Zone\*

ExitZone

### Displays

<input checked="" type="checkbox"/> <b>Display Gate Entry</b>	<input checked="" type="checkbox"/> <b>Display Gate Exit</b>
Content Module	Content Module
trade_fair	default
Rotate 90 Grad	Rotate 90 Grad
<input type="button" value="OFF"/>	<input type="button" value="OFF"/>
<input checked="" type="checkbox"/> <b>Display Entry</b>	<input checked="" type="checkbox"/> <b>Display Exit</b>
Show Video	Show Video
<input type="button" value="OFF"/>	<input type="button" value="OFF"/>
<input checked="" type="checkbox"/> <b>Display Time Info</b>	


Facility Management Control Unit (v2.4-88-gf5bd36c-dirty)

A subsection is often has a structure with a combo box named **Type** at the top and some fields that follow. This structure is used for configuring an entity that can have several implementations. What is important is that the implementation can differ in type and number of controls. For example, a simulator of the gate has only two properties:

<b>Gate</b>
Type
gate_simulator
Timeout Count *
2
Timespan Before Audio Message, seconds *
10

## Architecture

The picture below gives a bird's eye view of the configuration management.

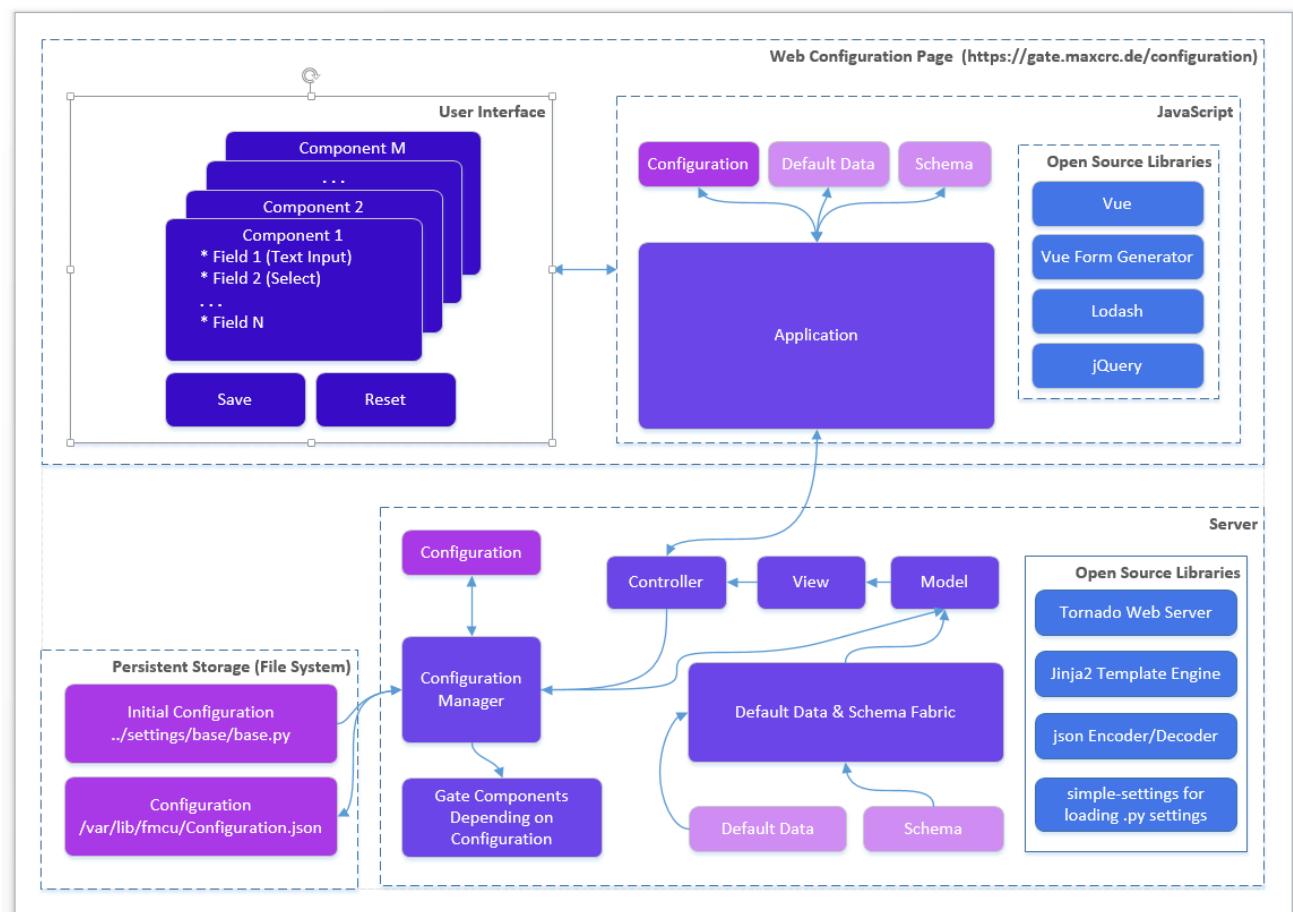

When the gate starts and the Configuration.json is present it is created from the Initial Configuration (base.py or other .py configuration file). The Schema contains a set of data for describing controls in form components:

- Which controls should contain a component
- Validations rules if any

E.g. a form component can contain a text box and an input for integers. The data range for integer should 1-100.

The Default Data contains the initial data for controls in form components.

Edit this section

## Roadmap

The features are planned for the upcoming release:

- Configurations page allows you to see the list of available configurations. You can:
  - Clone an existing configuration to a new one
  - Delete a configuration
  - Make a configuration active. Only one configuration can be used by the server and it is called *active*.



- Apply button. This should apply changes on-the-fly.
- Restart button. This should restart the docker container and apply settings, which cannot be applied on-the-fly.
- Extend the vue form generator library:
  - Make the switch control consistent with the switch controls on other pages
  - Add a control which allows you to manage an array of items (e.g. the list of connected gates). E.g. <https://codepen.io/safx/pen/AhCtk>
- Import/Export of a Configuration.json.
- Reset any configuration to the default one (by removing the json file)

## Management of Events

---

The following sections contains the term **Path**, which means the path is part of the URL. E.g., path **/events** for the FMCU Server running under <https://server.maxcrc.de/> means

`https://server.maxcrc.de/events`

## Events

---

Web path:

`/events`

The page shows a filterable and sortable list of events:

Name	Description
Date	Date and time when the event occurred
Name	Translated name of the event
Gate	Gate if appropriate where the event occurred
State	The state of the event if supported
Category	Category to which the event belongs to
Info	Additional info about the event

Edit this section

## Event Definitions Page

---

Path:

`/event-definitions`

The page shows a list of definitions of events:



Name	Description
Name	Name
Event Definition Groups	Groups to which the event belongs to if any
Supported States	Can be empty (for impulse events) or <b>On</b> , <b>Off</b> (for the events with states)
Category	Category to which the event belongs to

Edit this section

## Event Definition Groups

Path:

```
/event-definition-groups
```

The page shows a list of event groups:

Name	Description
Name	Name
Events	Event definitions assigned to the group
Delete	Delete button

An event definition group allows you to group one or more events so that it can be bound to a user group.  
See **Event Subscriptions** below

Edit this section

## Event Subscriptions

Web path:

```
/event-subscriptions
```

The page shows a list of event definition groups bound to a user groups.

Name	Description
Group	User group
Event definition group	Event definition group
Locked	When locked, events are not sent to the users of the group
Info	Any informative text
Delete	Delete button

When a event definition group is bound to a user group and not locked, new events from the event definition group are sent to the users from the user group. The user must have a valid email address.

Example. A user group **Alarm events** with two members **user1** and **user2** is bound to an event definition group **Alarm events** with two events **GateTailgating** and **GateStateFireAlarm**. When either or both of these events occur, both users **user1** and **user2** receive an email notification about that.

[Edit this section](#)

## Configuration

---

Path:

```
/configuration
```

In order the emails with events can be sent out, the **Email** section with the information like the hostname, port etc. of the outgoing server and credentials should be properly configured.