

Gate ~ FMCU ~ management dashboard/en



Inhaltsverzeichnis


1 General	2
2 Headline	2
3 Menu items	2
3.1 Gates	2
3.1.1 Set up a new Gate	3
3.1.2 Edit existing Gate	5
3.1.3 Remove Gate	7
4 Administration	8
4.1 User	8
4.1.1 Set up new User	9
4.1.2 Edit existing user	10
4.1.2.1 Event notifications	10
4.1.2.2 Locations & Positions tab	10
4.1.2.3 Groups tab	10
4.1.2.4 Permissions tab	10
4.2 Groups	11
4.2.1 Set up new group	11
4.2.2 Edit existing group	12
4.2.2.1 Users tab	12
4.2.2.2 Permissions tab	12
4.3 Positions	12
4.3.1 Set up new Position	12
4.3.2 Edit existing Position	13
4.4 Locations	13
4.4.1 Set up new Location	13
4.4.2 Edit existing Location	13
4.5 Locations & Positions	13
4.6 Configuration	14
5 Events	14
5.1 Events	14
5.2 Event definitions	14
5.3 Event definition groups	15
5.4 Neue Ereignisdefinitionsgruppe anlegen	15
5.4.1 Create a new event definition group	16
5.5 Event subscriptions	16
5.6 Notifications	16
6 Cards	16
6.1 Cards	16
6.2 Edit Cards	16
7 Statistics	16

8 Connectivity Board	16
9 Configuration Management	17
9.1 Architecture	23
9.2 Roadmap	24
10 Management of Events	25
11 Events	25
12 Event Definitions Page	25
13 Event Definition Groups	26
14 Event Subscriptions	26
15 Configuration	27

General

The Wanzl Access Manager offers a central dashbaord for access controls in a homogeneous interface, displays the corresponding states and supports the user in the administration of these components. The Wanzl Access Manager is a leading platform for monitoring and managing access controls of security areas.

Headline




Number	Function
1	Button Management Dashboard
2	Administration
3	Events Button
4	Cards Button
5	Statistics Button
6	Logged in User
7	Log out Button
8	Languages menu
9	Adjust the display to entire width of the screen

Menu items

Gates


`https://<dns-name or ip-address>/gates`

In this view, all access controls are shown in an intuitive interface. There are grouping options in two categories. First of all, you can group by **location**. You can then combine different **positions** within the location. Individual gates can be added using the "**New**" menu item.

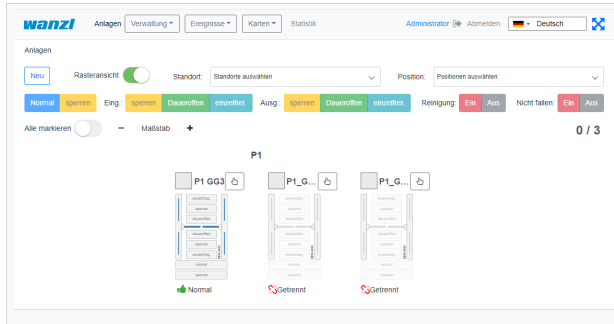


Set up a new Gate

In this view you create a **new** gate. The fields **names**, **displayed name** and **Position** of the Gate must be verified with values. Then click on Attachments.

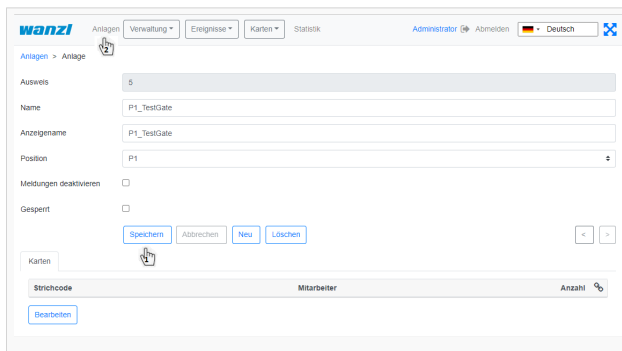


You can now see in the view that you have created a **NEW** gate, in this case the fourth gate in this view.

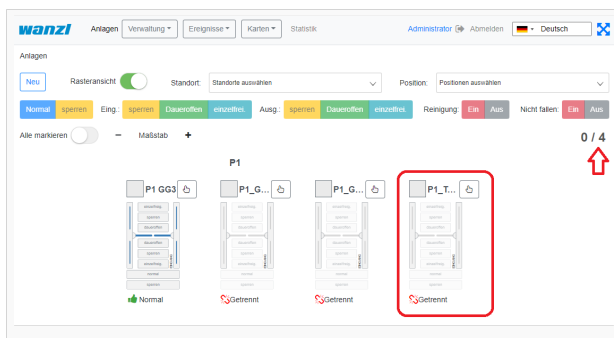

In the next step you connect the gate to the server.

<https://<IP-Adresse des Dashboards>>

To do this, check on the **General** tab that the correct gate name has been entered.

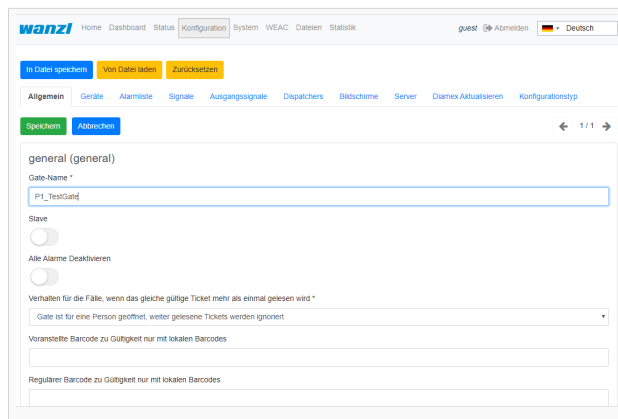

The screenshot shows the 'general' configuration tab for a gate. The 'Gate-Name' field is filled with 'P1_testGate'. Below it, there are several toggle switches: 'Slave' (disabled), 'Alle Alarme Deaktivieren' (disabled), and a dropdown menu for 'Verhalten für die Fälle, wenn das gleiche gültige Ticket mehr als einmal gelesen wird'. The dropdown is set to 'Gate ist für eine Person geöffnet, weiter gelesene Tickets werden ignoriert'. There are also two empty text input fields for 'Vorandehlte Barcode zu Gültigkeit nur mit lokalen Barcodes' and 'Regulärer Barcode zu Gültigkeit nur mit lokalen Barcodes'.

Then check the following points on the **Server** tab.

Server#0 (server)- must be set to remote.

Activated slide-switch is activated.


Your server should be entered under Name*.

Your URL should be entered under URL*.

Gate should be entered under Username*.


Your password should be entered under Password*.

Save at the end.

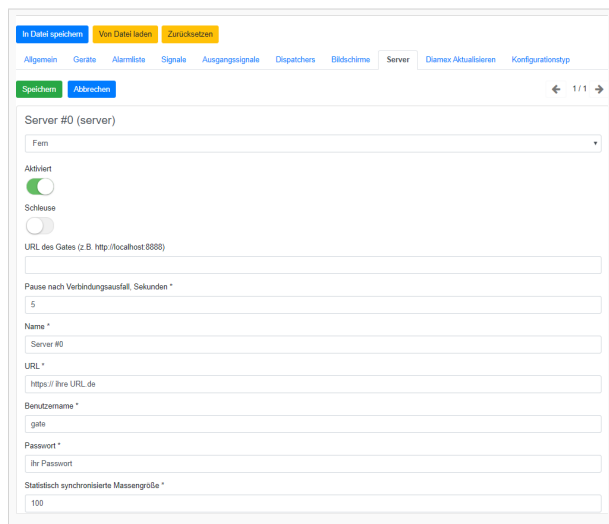


The screenshot shows the 'Server #0 (server)' configuration tab. The 'Fern' checkbox is checked. Below it, there are several fields: 'Pause nach Verbindungsausfall, Sekunden' (5), 'Name' (Server #0), 'URL' (https:// ihre URL.de), 'Benutzername' (gate), 'Passwort' (ihr Passwort), and 'Statistisch synchronisierte Messenggröße' (100).


In the next step, please click on System in the top bar.

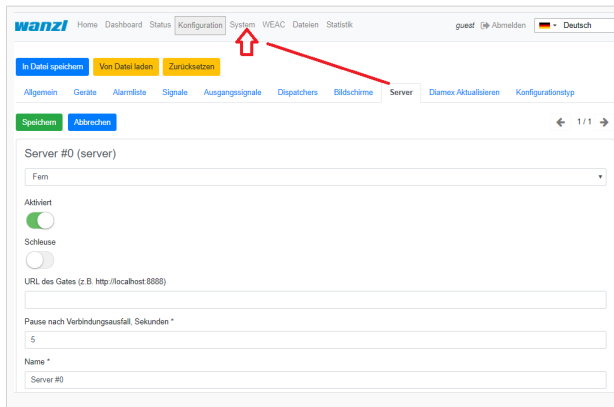

You will now see the following display, here please press restart once. Now your new gate should be connected.

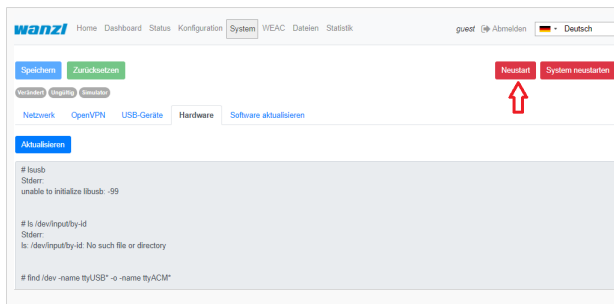

Finally, you can check the connection in the **Status** tab. **CONNECTED** must now appear under State.

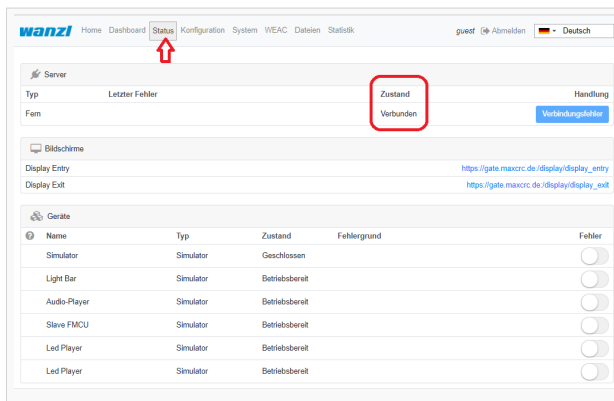


Edit existing Gate

<https://<dns-name or ip-address>/gates>


Gate ~ FMCU ~ management dashboard/en

You are in the same view as where you would create a new gate.


Please move the slide switch "Grid view" to the left.

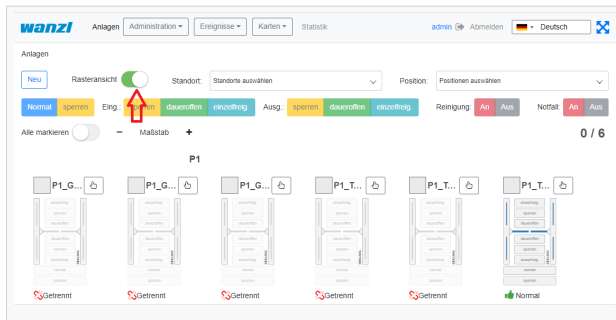

In the view click on the name of the gate which you want to edit (in the example P1_TestGate2).

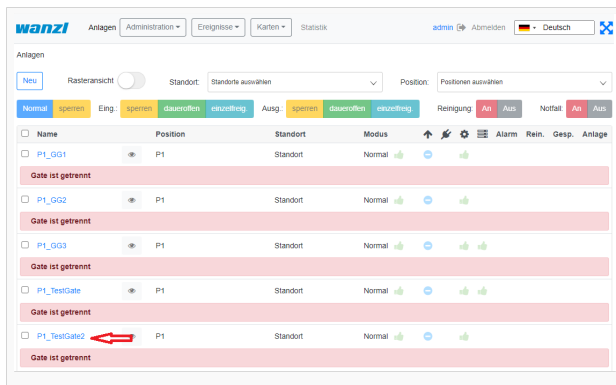

In this view, please press the "Edit" function.

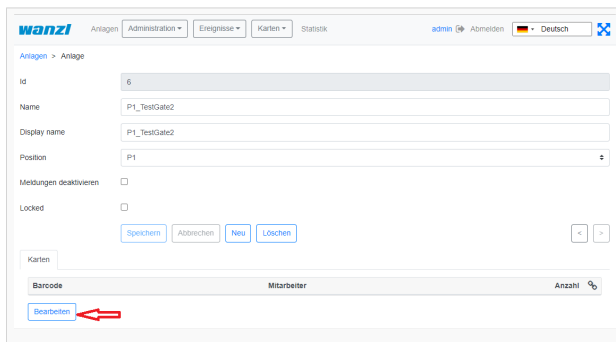

You can now edit the gate in this view.




Remove Gate


<https://<dns-name or ip-address>/gates>

You are in the same view as where you would create a new gate.


Please move the slide switch "Grid view" to the left.

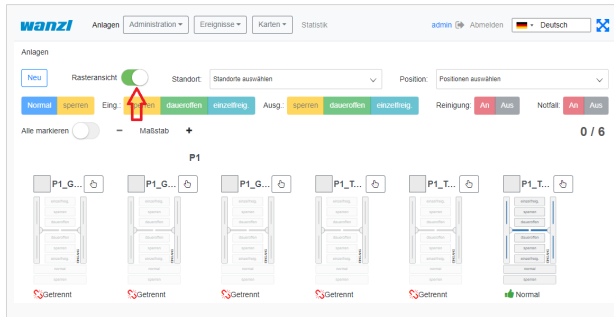


In the view click on the name of the gate which you want to delete (in the example P1_TestGate6).

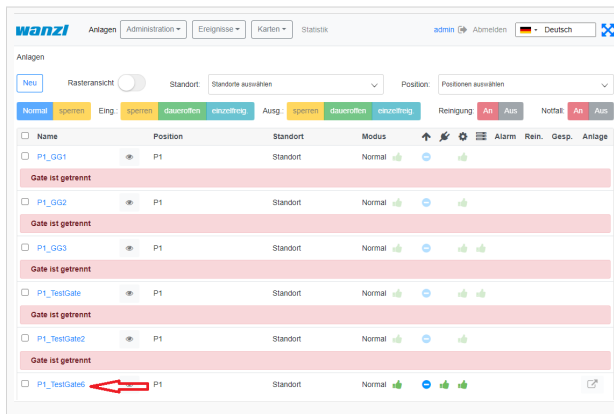


In this view, please press the "Delete" function.

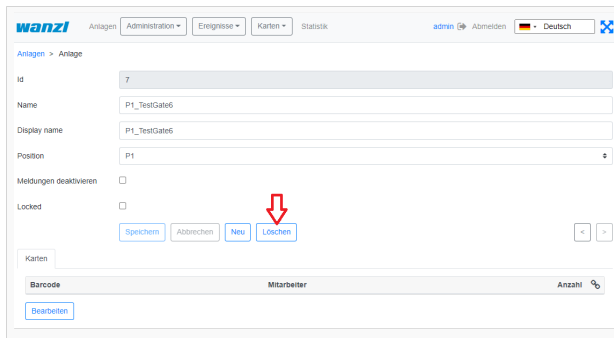


To be on the safe side, you will now be asked again whether you really want to delete the element? Please confirm this.

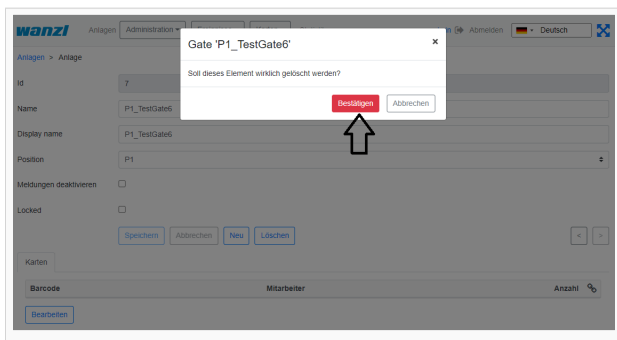

After deleting, you will automatically be shown the next gate (here in the example P1_TestGate2). Please click on attachments here.

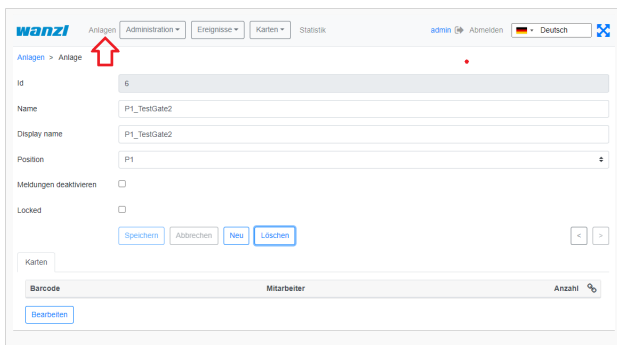

You will then see in the grid view that Gate P1_TestGate6 is missing and has been successfully deleted.

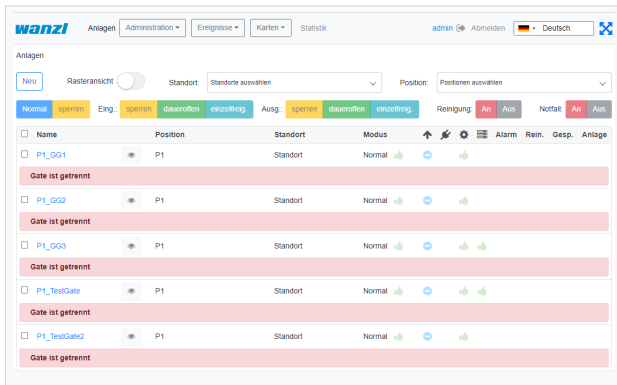



Administration



User

`https://<dns-name or ip-address>/users`

Auf dieser Seite sehen Sie eine Übersicht aller Benutzer


 Anlagen
 Administration ▾
Ereignisse ▾
Karten ▾
Statistik

 Abmelden

 Deutsch
 

Benutzer

1 Neu

Standort: Standorte auswählen 2 ▾

Position: Positionen auswählen 3 ▾

Benutzername
Vorname
Nachname
Standorte & Positionen
Gruppen
Super.
Gesp.
Löschen

Nummer	Funktion
1	Neuen Benutzer anlegen
2	Benutzer nach Standort filtern
3	Benutzer nach Position filtern

Set up new User

Klicken Sie unter [Benutzer](#) auf den Button **Neu**

```
https://<dns-name or ip-address>/new-user
```

[Benutzer](#) > Neuer Benutzer

Id

Benutzername

Passwort

Bestätige das Passwort

Email

Vorname

Nachname

Info

Superuser

Locked

Meldungen deaktivieren

[Speichern](#)
[Abbrechen](#)
[Neu](#)
[Löschen](#)
[Passwort zurücksetzen](#)
[<](#)
[>](#)

[Ereignisbenachrichtigungen](#)
[Standorte & Positionen](#)
[Gruppen](#)
[Berechtigungen](#)

Name	Info
Feldname	Beschreibung
Id	Automatisch generierte eindeutige Nummer des Benutzers

Benutzername*	Benutzername des Benutzers für die Anmeldung
Passwort*	Passwort des Benutzers für die Anmeldung
Email	Email Adresse des Benutzers zum Versand von Log Nachrichten
Vorname	Vorname des Benutzers
Nachname	Nachname des Benutzers
Info	Beschreibung des Benutzers
Superuser	Die höchsten Rechte werden dem Benutzer vergeben
Locked	Die Anmeldung des Benutzers ist gesperrt
Meldungen deaktivieren	Der Benutzer erhält keine Benachrichtigungen im FMCU Management Dashboard

* Unbedingt erforderliche Felder Durch den Button **Speichern** wird der neue Benutzer angelegt.

Edit existing user

Klicken Sie unter [Benutzer](#) auf den zu bearbeitenden Benutzer

Event notifications

Unter diesem Reiter können die Benachrichtigungen ausgewählt werden welcher der Benutzer erhalten soll.
Hinweis: Ist die Checkbox **Meldungen deaktivieren** gesetzt werden unabhängig von diesen Einstellungen keine Benachrichtigungen angezeigt.

Locations & Positions tab

Man kann unterschiedliche Standorte in Länder und Städte festlegen. Über das Berechtigungsmodell lassen sich separate Zugriffsrechte für jeden Standort definieren.

Groups tab

Unter diesem Reiter können Sie die Gruppenmitgliedschaften des Benutzers anpassen.

Permissions tab

Unter diesem Reiter werden die Berechtigungen des Benutzers angezeigt
Durch den Button **Speichern** werden alle Änderungen angewendet.

Groups

<https://<dns-name or ip-address>/groups>

Auf dieser Seite sehen Sie eine Übersicht aller Gruppen

 Anlagen Administration ▾ Ereignisse ▾ Karten ▾ Statistik admin  Abmelden  Deutsch 

Gruppen

Neu

Name	Info	Löschen
manager		
user		
gate		
alarm_notifications		

Set up new group

<https://<dns-name or ip-address>/new-group>

Klicken Sie unter [Gruppen](#) auf den Button **Neu**

 Anlagen Administration ▾ Ereignisse ▾ Karten ▾ Statistik admin  Abmelden  Deutsch 

[Gruppen](#) > Neu Gruppe

Id

Name

Info

Benutzer [Berechtigungen](#)

Benutzername	Email	Vorname	Nachname	Info
--------------	-------	---------	----------	------

Feldname	Beschreibung
----------	--------------

Id	Automatisch generierte eindeutige Nummer der Gruppe
Name	Name der Gruppe
Info	Beschreibung der Gruppe

* Unbedingt erforderliche Felder

Durch den Button **Speichern** wird die neue Gruppe angelegt.

Edit existing group

Klicken Sie unter [Gruppen](#) auf die zu bearbeitende Gruppe

Users tab

Unter diesem Reiter können Sie die Mitglieder der Gruppe anpassen.

Permissions tab

Unter diesem Reiter werden die Berechtigungen angezeigt welche den Mitgliedern der Gruppe vererbt werden.

Durch den Button **Speichern** werden alle Änderungen angewendet.

Positions

```
https://<dns-name or ip-address>/cities
```

Auf dieser Seite sehen Sie eine Übersicht aller Positionen

Set up new Position

```
https://<dns-name or ip-address>/new-city
```

Klicken Sie unter [Positionen](#) auf den Button **Neu** Geben Sie den Namen der Position ein und ordnen Sie die Position mit dem Dropdown Feld einem Standort zu. Klicken Sie auf den Button **Speichern** um die Position anzulegen

Edit existing Position

Klicken Sie unter [Positionen](#) auf die zu bearbeitende Position
Hier können Sie die den Namen und den Standort der Position bearbeiten

Locations

`https://<dns-name or ip-address>/countries`

Auf dieser Seite sehen Sie eine Übersicht aller Standorte

Set up new Location

`https://<dns-name or ip-address>/new-country`

Klicken Sie unter [Standorte](#) auf den Button **Neu**

Feldname	Beschreibung
Id	Automatisch generierte eindeutige Nummer des Standorts
Name*	Name des Standorts
Code*	Ländercode des Standorts
Info	Beschreibung des Standorts

* Unbedingt erforderliche Felder

Klicken Sie auf den Button **Speichern** um die Position anzulegen

Edit existing Location

Klicken Sie unter [Standort](#) auf die zu bearbeitende Standort
Hier können Sie die den Namen, den Code sowie die Info des Standorts bearbeiten

Locations & Positions

`https://<dns-name or ip-address>/locations`

Hier sehen Sie eine Übersicht aller Positionen und deren zugeordnete Standorte

Configuration

<https://<dns-name or ip-address>/configurations>

Events

Events

<https://<dns-name or ip-address>/events>

In dieser Ansicht werden die Ereignisse aller Zutrittskontrollen in einer intuitiven Listenansicht dargestellt. Es existieren Filterungsmöglichkeiten und eine Namensuche der Ereignisse.



The screenshot shows the 'Ereignisse' (Events) management interface. At the top, there is a navigation bar with tabs for 'Anlagen', 'Administration', 'Ereignisse', 'Karten', and 'Statistik'. The 'Ereignisse' tab is active. To the right of the navigation bar, there is a user profile 'admin', a language selector set to 'Deutsch', and a 'Abmelden' (Logout) button. Below the navigation bar, the 'Ereignisse' section is displayed. It includes several filter options: 'Standort' (Location) with a dropdown menu, 'Position' (Position) with a dropdown menu, 'Anlage' (Plant) with a dropdown menu, and 'Suche' (Search) with a search input field. There are also buttons for 'Benutzerdefiniert' (Custom), 'Heute' (Today), and 'Gestern' (Yesterday). A 'Stop' button is visible next to the count '39947 / 39947'. Below the filters, there is a date range selector showing '01.02.2021 - 28.02.2021' and an 'Ändern' (Change) button. At the bottom, a table header is visible with columns: 'Datum', 'Name', 'Anlage', 'Zu', 'Ka', and 'Info'.



Es können folgende Filter gesetzt werden:


1. Standort
2. Position
3. Anlage
4. Suche nach Ereignisnamen
5. Zeitraum


Event definitions

<https://<dns-name or ip-address>/event-definitions>

In dieser Ansicht werden alle Ereignisse welche die FMCU beinhaltet aufgelistet und deren Ereignisdefinitionsgruppen, Unterstützte Zustände und Kategorie zugeordnet.


 Anlagen
 Administration ▾
Ereignisse ▾
Karten ▾
Statistik
admin  Abmelden

 Deutsch





Ereignisdefinitionen


Name	Ereignisdefinitionsgruppen	Unterstützte Zustände	Kategorie
------	----------------------------	-----------------------	-----------


Event definition groups

`https://<dns-name or ip-address>/event-definition-groups`

Unter diesem Reiter werden alle Ereignisdefinitionsgruppen aufgelistet.



 Anlagen
 Administration ▾
Ereignisse ▾
Karten ▾
Statistik
admin  Abmelden

 Deutsch





Ereignisdefinitionsgruppen


[Neu](#)


Name	Ereignisse	Info	Löschen
Alarm events	ServerGateDevicesFailed ServerGateAllDevicesOperational GateUnauthorizedAccess GateStateFireAlarm GateDoorIsBeeingBroken		

Neue Ereignisdefinitionsgruppe anlegen

Klicken Sie unter [Ereignisdefinitionsgruppen](#) auf den Button **Neu**




 Anlagen
 Administration ▾
Ereignisse ▾
Karten ▾
Statistik
admin  Abmelden

 Deutsch



[Ereignisdefinitionsgruppen](#) > New Event Definition Group

Id
 Name
 Info

Ereignisdefinitionen

Name	Info	Kategorie	Ausgewählt
Feldname	Beschreibung		
	Automatisch generierte eindeutige Nummer der		

Id	Gruppe
Name	Name der Gruppe
Info	Beschreibung der Gruppe

* Unbedingt erforderliche Felder

Wählen Sie unter dem Reiter **Ereignisdefinitionen** die Ereignisdefinitionen aus welche der Gruppe zugeordnet werden sollen.

Create a new event definition group

Event subscriptions

Notifications

Cards

Cards

Edit Cards

Statistics

Connectivity Board

Contact	Type	Impulse	Description
A8	Output	Yes (500 ms)	Person has entered
A9	Output	Yes (500 ms)	Alarms*
E3	Input	Yes (500 ms)	Open Entry
E4	Input	Yes (500 ms)	Open Exit
E6	Input	Yes (200ms)	Card is valid, open the gate
E7	Input	Yes (200ms)	Card is invalid, do not open the gate
E8	Input	No	Emergency State button**
E9	Input	Yes (500 ms)	Open Entry 70%

E10	Input	No	Fire Alarm
------------	-------	----	------------

*A9 Alarms:

- Gate is out of order, when a mandatory device is broken or a connection to the server is broken (if the server is used in the solution).
- Tailgating or other unwanted actions.
- Entry barcode scanner is broken or it is a stub.
- Gate in in the **Fire Alarm** or **Emergency** state. The alarm is produces as a repetitive pulse signal (700ms).
- Gate is open only for exit.

After the Emergency State button pressed, the gate switches to the Emergency State. Then only exit from this state is to restart the gate.


The signal can be set/received to/from a contact from any of the halves of the gate.

Configuration Management

User Interface

The Galaxy Gate is configured through the **/configuration** page. If the server is running at 192.168.1.221 and port is 8888, the url is:

<http://192.168.1.221/configuration>

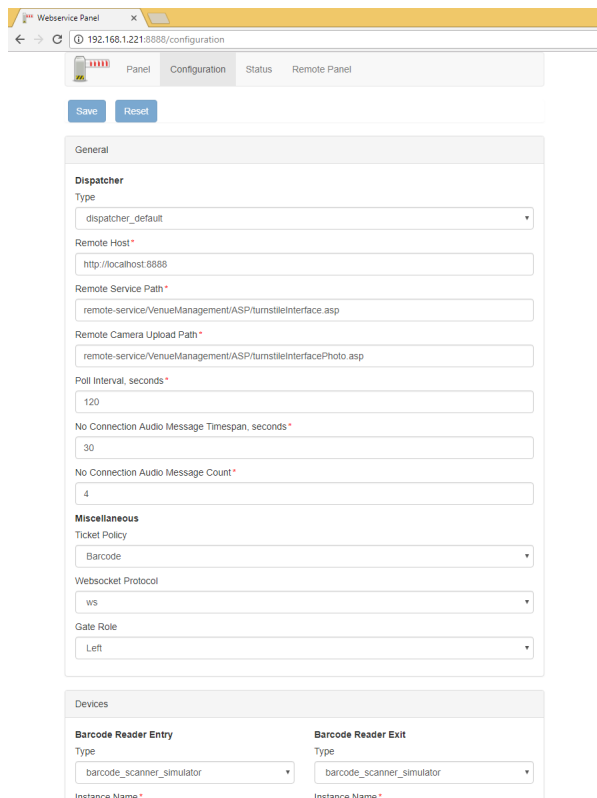

The screenshot shows a web browser window titled "Webservice Panel" with the address bar displaying "192.168.1.221:8888/configuration". The page has a navigation menu with "Panel", "Configuration", "Status", and "Remote Panel". Below the menu are "Save" and "Reset" buttons. The main content area is divided into sections: "General" (containing fields for Dispatcher Type, Remote Host, Remote Service Path, Remote Camera Upload Path, Poll Interval, No Connection Audio Message Timespan, and No Connection Audio Message Count), "Miscellaneous" (containing Ticket Policy, Websocket Protocol, and Gate Role), and "Devices" (containing Barcode Reader Entry and Barcode Reader Exit settings).

There are two buttons on the page:

Name	Description	Action
Save	Saves the modified configuration to the server	Post
Reset	Discards any changes by reloading the configuration from the server	Get

The configuration is split into sections and subsections:

- General
 - Dispatcher
 - Miscellaneous
- Devices
 - Barcode Reader Entry
 - Barcode Reader Exit
 - Gate
 - Tracking Camera
 - Audio Player
 - Camera
- Displays
 - Display Gate Entry
 - Display Gate Exit
 - Display Entry
 - Display Exit
 - Display TimeInfo

Here are some screenshots:

General
Dispatcher
Type
<input type="text" value="dispatcher_odoo_superfly"/>
Host *
<input type="text" value="192.168.1.221"/>
Port *
<input type="text" value="8069"/>
Protocol
<input type="text" value="http"/>
Password *
<input type="text" value="pass"/>
Poll Interval, seconds *
<input type="text" value="120"/>
No Connection Audio Message Timespan, seconds *
<input type="text" value="300"/>
No Connection Audio Message Count *
<input type="text" value="4"/>
Miscellaneous
Ticket Policy
<input type="text" value="Barcode"/>
Websocket Protocol
<input type="text" value="ws"/>
Gate Role
<input type="text" value="Left"/>

Devices

Barcode Reader Entry	Barcode Reader Exit
Type <input type="text" value="barcode_scanner_rfid"/>	Type <input type="text" value="barcode_scanner_magellan"/>
Instance Name* <input type="text" value="Barcode Scanner Entry"/>	Instance Name* <input type="text" value="Barcode Scanner Exit"/>
Read card not often than, ms* <input type="text" value="1000"/>	Read card not often than, ms* <input type="text" value="1000"/>
Port* <input type="text" value="/dev/ttyUSB2"/>	Port* <input type="text" value="/dev/ttyUSB3"/>
Beep Enabled <input type="checkbox"/> OFF	
Gate	
Type <input type="text" value="gate_galaxy_modbus"/>	
Port* <input type="text" value="/dev/ttyUSB0"/>	
Timeout, ms* <input type="text" value="500"/>	
Baud rate* <input type="text" value="115200"/>	
Reverse <input type="checkbox"/> OFF	
Timeout Count* <input type="text" value="2"/>	
Timespan Before Audio Message, seconds* <input type="text" value="10"/>	

Audio Player

Type

Host Ip Address *

Sonos Ip Addresses, separated by a comma *

Volume, % *

Camera

Type

Uri *

User *

Password *

Delay On Enter, ms *

Delay On Exit, ms *

Disabled

 OFF

Tracking Camera

Type

tracking_camera_xovis

Host*

10.122.21.21

Port*

80

Protocol

http

Password*

pass

Entry Line*

EnterLine

Exit Line*

ExitLine

Inner Entry Zone*

EnterDangerZone

Inner Exit Zone*

ExitDangerZone

Outer Entry Zone*

EnterZone

Outer Exit Zone*

ExitZone

Displays

<input checked="" type="checkbox"/> Display Gate Entry	<input checked="" type="checkbox"/> Display Gate Exit
Content Module	Content Module
<input type="text" value="trade_fair"/>	<input type="text" value="default"/>
Rotate 90 Grad	Rotate 90 Grad
<input type="checkbox"/> OFF	<input type="checkbox"/> OFF
<input checked="" type="checkbox"/> Display Entry	<input checked="" type="checkbox"/> Display Exit
Show Video	Show Video
<input type="checkbox"/> OFF	<input type="checkbox"/> OFF
<input checked="" type="checkbox"/> Display Time Info	

Facility Management Control Unit (v2.4-88-gf5bd36c-dirty)

A subsection is often has a structure with a combo box named **Type** at the top and some fields that follow. This structure is used for configuring an entity that can have several implementations. What is important is that the implementation can differ in type and number of controls. For example, a simulator of the gate has only two properties:

Gate


Type

Timeout Count*

Timespan Before Audio Message, seconds*

Architecture

The picture below gives a bird's eye view of the configuration management.

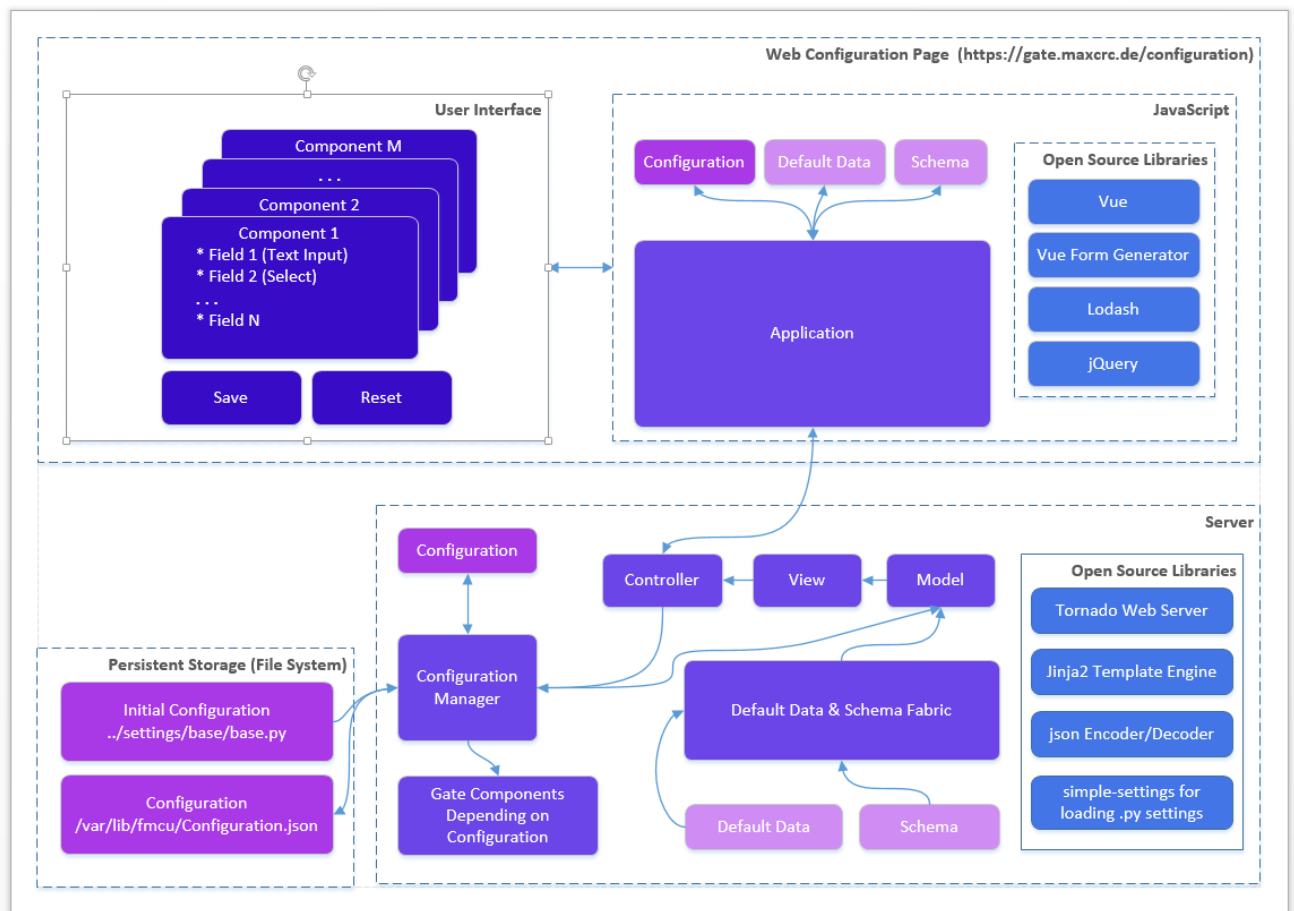

When the gate starts and the Configuration.json is present it is created from the Initial Configuration (base.py or other .py configuration file). The Schema contains a set of data for describing controls in form components:

- Which controls should contain a component
- Validations rules if any

E.g. a form component can contain a text box and an input for integers. The data range for integer should 1-100.

The Default Data contains the initial data for controls in form components.

Edit this section

Roadmap

The features are planned for the upcoming release:

- Configurations page allows you to see the list of available configurations. You can:
 - Clone an existing configuration to a new one
 - Delete a configuration
 - Make a configuration active. Only one configuration can be used by the server and it is called *active*.

- Apply button. This should apply changes on-the-fly.
- Restart button. This should restart the docker container and apply settings, which cannot be applied on-the-fly.
- Extend the vue form generator library:
 - Make the switch control consistent with the switch controls on other pages
 - Add a control which allows you to manage an array of items (e.g. the list of connected gates). E.g. <https://codepen.io/safx/pen/AhCtk>
- Import/Export of a Configuration.json.
- Reset any configuration to the default one (by removing the json file)

Management of Events

The following sections contains the term **Path**, which means the path is part of the URL. E.g., path **/events** for the FMCU Server running under **https://server.maxcrc.de/** means

```
https://server.maxcrc.de/events
```

Events

Web path:

```
/events
```

The page shows a filterable and sortable list of events:

Name	Description
Date	Date and time when the event occurred
Name	Translated name of the event
Gate	Gate if appropriate where the event occurred
State	The state of the event if supported
Category	Category to which the event belongs to
Info	Additional info about the event

Edit this section

Event Definitions Page

Path:

```
/event-definitions
```

The page shows a list of definitions of events:

Name	Description
Name	Name
Event Definition Groups	Groups to which the event belongs to if any
Supported States	Can be empty (for impulse events) or On, Off (for the events with states)
Category	Category to which the event belongs to

Edit this section

Event Definition Groups

Path:

/event-definition-groups

The page shows a list of event groups:

Name	Description
Name	Name
Events	Event definitions assigned to the group
Delete	Delete button

An event definition group allows you to group one or more events so that it can be bound to a user group. See **Event Subscriptions** below

Edit this section

Event Subscriptions

Web path:

/event-subscriptions

The page shows a list of event definition groups bound to a user groups.

Name	Description
Group	User group
Event definition group	Event definition group
Locked	When locked, events are not sent to the users of the group
Info	Any informative text
Delete	Delete button

When a event definition group is bound to a user group and not locked, new events from the event definition group are sent to the users from the user group. The user must have a valid email address.

Example. A user group **Alarm events** with two members **user1** and **user2** is bound to an event definition group **Alarm events** with two events **GateTailgating** and **GateStateFireAlarm**. When either or both of these events occur, both users **user1** and **user2** receive an email notification about that.

Edit this section

Configuration

Path:

/configuration

In order the emails with events can be sent out, the **Email** section with the information like the hostname, port etc. of the outgoing server and credentials should be properly configured.