



# Gate ~ FMCU ~ Benutzerhandbuch/en

---



## Inhaltsverzeichnis

1 Introduction .....	1
2 Initial Configuration .....	2
2.1 Network .....	2
2.2 FMCU Configuration .....	3
2.3 Meta information .....	5
2.4 Configuration of Gate .....	6
3 Operation Manual .....	10
3.1 Configuration of the Swing Doors .....	10
3.2 Configuration of the XOVIS Sensors .....	11
3.3 Store VPN key .....	18
3.4 Update Software .....	19
3.5 Customer Role .....	20
3.6 Standard Assignment Connection Board .....	21
3.7 Alarms Definition .....	24
3.8 Signals .....	26
3.9 Light Schemas .....	27
3.10 Lights .....	29
4 Technical Background .....	31
5 Functions .....	32
5.1 Closing-run at reduced Speed .....	34
5.2 Passage Confirmation .....	34
5.3 Suitcase Trolley Detection .....	34
5.4 Multiple Opening .....	34
6 Tips for Working .....	35
7 Verwandte Themen .....	35

## Introduction

---

The document describes the functions and configuration options of the software **Facility Management Control Unit**.

The Facility Management Control Unit is software for access control management. It can be used in an enclosed area such as a sports or entertainment center, an airport zone, universities or security areas. The main components of the software solution are:

- An automated passage control with two-part door and signal lighting
- Barcode (or/and RFID) scanners that read identification data from the customer's ticket or card
- Tracking cameras observing the passage of customers

- Info screens showing inbound and outbound information to the customer
- One or more external speakers
- One or more additional monitors with content tailored to customer needs

The main features are:

- Opening access control upon successful ticket validation
- Interaction with customer in response to various events through:
  - Light effects
  - Voice prompts through internal or external speakers
  - Acoustic confirmation of the reading process from barcode scanners
  - Visual content displayed on an info screen
  - Safe opening and closing of the swing doors by monitoring the passage area

Supported operating modes:

- Normal
- Service
- Fire alarm
- Emergency

The variants of Entry Tickets:

- Single entry ticket with closing of access control after passage of one person
- Multiple entry ticket with permanent access control
- Adjustable time intervals
- Consideration of additional conditions about potential-free contacts

## Initial Configuration


---

After the software has been downloaded and transferred to the eMMC card according to the documented procedure, see also here [Galaxy Gate Inbetriebnahme/en](#), the login screen appears after the first start. After logging in with the user `Installer`, configuration wizard will be started.

## Network

---

First step is the network settings configuring

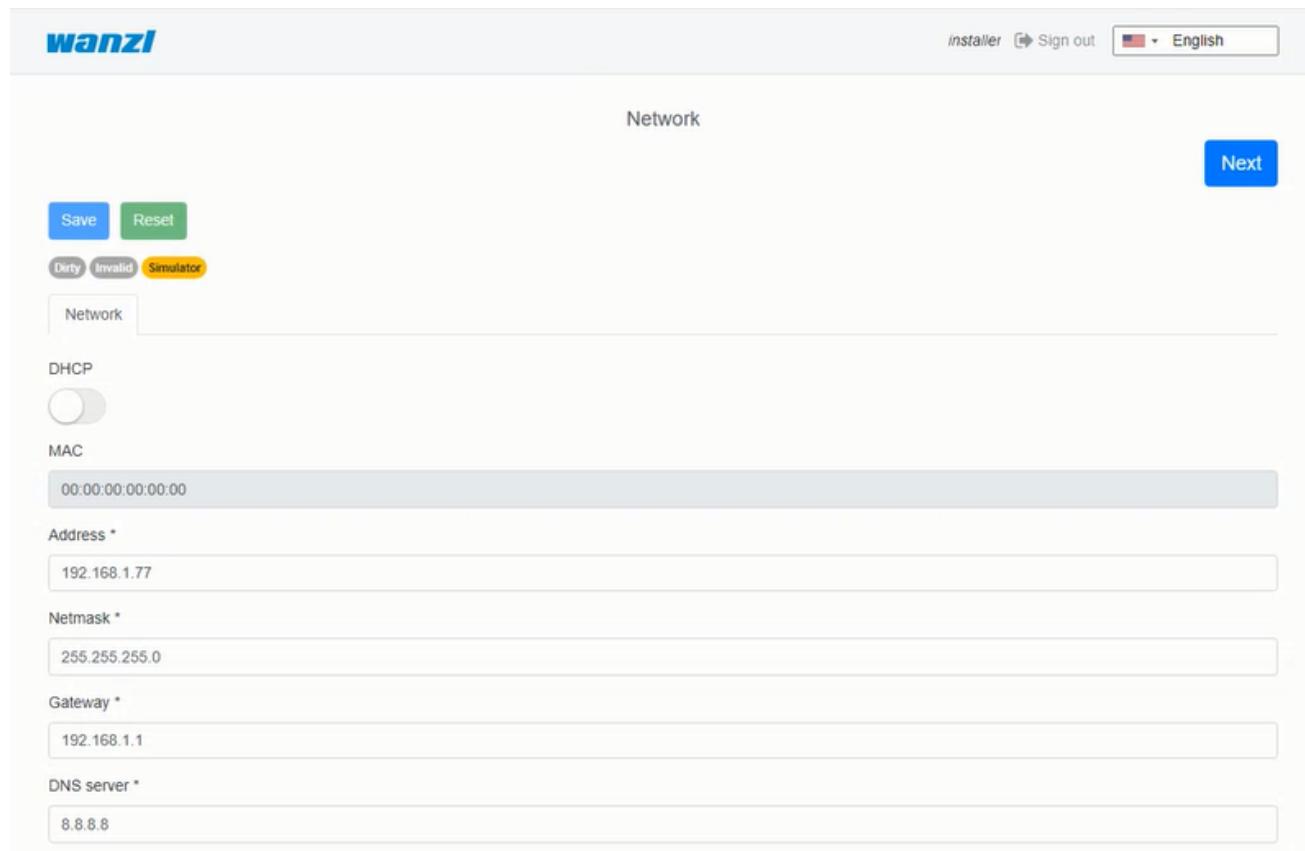

The screenshot shows a network configuration page for a WANZI device. At the top right are links for 'installer' (with a gear icon), 'Sign out' (with a user icon), and language selection ('English'). Below the header, the title 'Network' is centered above a 'Next' button. On the left, there are two buttons: 'Save' (blue) and 'Reset' (green). Below them are three status indicators: 'Dirty' (grey), 'Invalid' (grey), and 'Simulator' (orange). A 'Network' tab is selected. Under the 'Network' section, there is a 'DHCP' toggle switch which is off. The 'MAC' field contains the value '00:00:00:00:00:00'. Below it are five input fields for 'Address \*' (192.168.1.77), 'Netmask \*' (255.255.255.0), 'Gateway \*' (192.168.1.1), and 'DNS server \*' (8.8.8.8).

Parameter	Description	Default Value
Address	IP-Address of access control	192.168.1.100
Mask	Network-Mask	255.255.255.0
Gateway	Gateway-Address	192.168.1.1
DNS-Server	DNS-Server for name resolution	192.168.1.1

## FMCU Configuration

Next step is selecting FMCU Configuration



The screenshot shows the 'FMCU Configuration' page under 'Facility Management Control Unit Configuration'. It displays two dropdown menus: 'Executable Device Type' (set to 'No Device (Slave)') and 'Configuration Type' (set to 'Default'). A note below the dropdowns states: 'Please select executable device type and corresponding configuration type for the FMCU instance.' A scrollable list of functions is shown, with 'Default' selected. A note at the bottom right says: 'The configuration for the standard slave gate' with an 'Apply' button.

### NOTE

The configuration always starts with the "Slave" side of the Galaxy Gate. This selection is preset in the assistant "No Device Slave".

As a type, you can basically make this selection in the assistant.

### Configuration of the Facility Management Control Unit

Selection	Description
No Device Slave	Slave Unit (Default Selection)
Galaxy Gate (Modbus Serial)	Master-Unit mit serieller Verbindung zu Slave-Unit
Galaxy Gate (Modbus TCP)	Master-Unit with network connection to Slave-Unit
Galaxy Port (Modbus Serial)	Unit with serial connection to Slave-Unit
Galaxy Port (Modbus TCP)	Unit with network connection to Slave-Unit

### Functions

Function	Description
AEA	Configuration for Boarding Gates
Immediate Closure	Closing the swivel arms without swivel range monitoring
Multiple Opening	Swivel arms remain open when multiple input signals are present
Personal Protection	Closing the swivel arms with swivel area monitoring



One-time opening	Single pass even when several input signals are present
Trolley Case	Support of trolley case without alarm
Wheelchair	Assistance from wheelchair without alarm

After the function has been selected, the combination of functions results in corresponding configuration types. The function selection is a filter for the resulting configuration type.

#### Configuration type from combination of functions

Configuration Type	Description
AEA	Configuration for Boarding Gates
One-time opening Personal Protection	Closing the swivel arms with swivel area monitoring
One-time opening Immediate Closure	Closing the swivel arms without swivel range monitoring
One-time opening Trolley Case	Single passage with trolley case even when several input signals are present
One-time opening Wheelchair	Single passage with a wheelchair even if several input signals are present
Multiple opening personal protection	Closing the swivel arms with swivel area monitoring
Multiple opening instant closure	Closing the swivel arms with swivel area monitoring
Multi-opening trolley case	Swivel arms remain open when several people with wheeled suitcases pass through
Multiple opening wheelchair	Swivel arms remain open when several people with wheeled suitcases pass through


After choosing from the three lists, click on **Apply**, the application will be restarted, you have to wait for the start-up process to be completed. After logging in again, this screen appears.

#### NOTE

If you adjust the IP address in the configuration, you must also align the URL in the browser to the new IP address.

## Meta information

Next step is filling meta information about FMCU

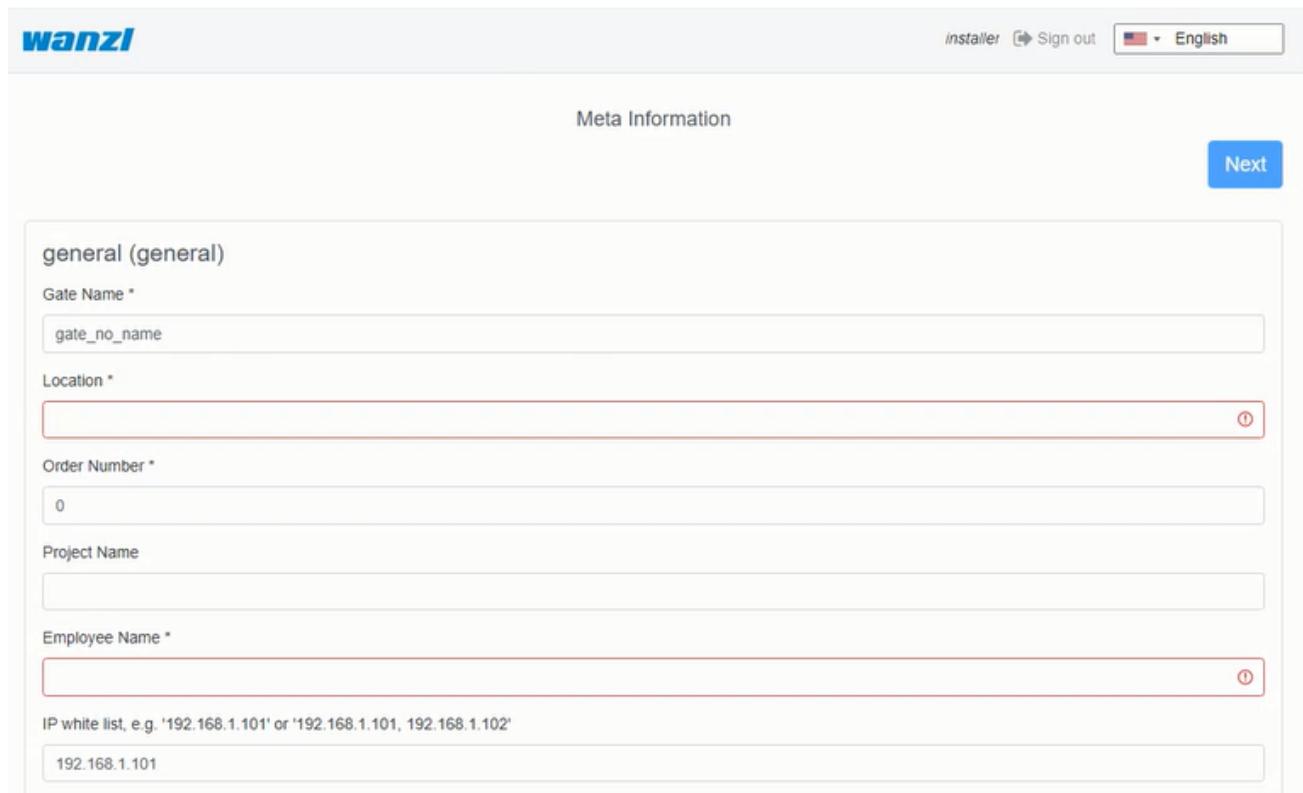


The screenshot shows a configuration wizard step titled "Meta Information". The "general (general)" section contains the following fields:

- Gate Name \*:
- Location \*:
- Order Number \*:
- Project Name:
- Employee Name \*:
- IP white list, e.g. '192.168.1.101' or '192.168.1.101, 192.168.1.102':

A "Next" button is visible in the top right corner.

After the input fields have been filled in, you can click on **Next** to reach the next page of the wizard.

## Configuration of Gate

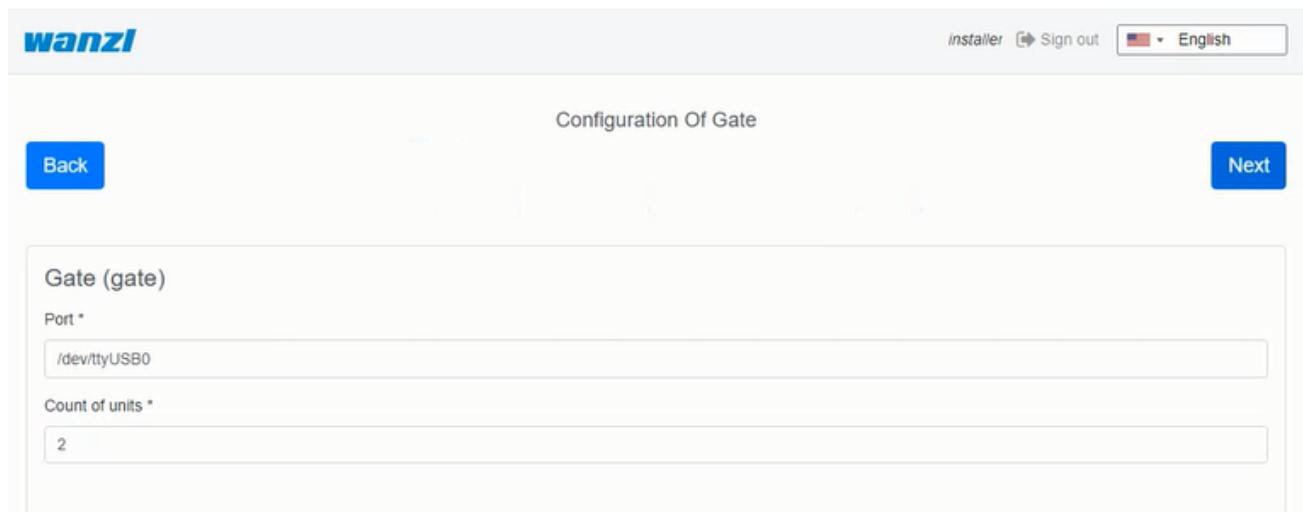

The screenshot shows a configuration wizard step titled "Configuration Of Gate". The "Gate (gate)" section contains the following fields:

- Port \*:
- Count of units \*:

A "Back" button is on the left and a "Next" button is on the right.

The current WEAC firmware is displayed on the next page of the wizard. If necessary, you can down or upgrade the firmware.



wanzl

installer Abmelden Deutsch

WEAC Update

Zurück      Weiter

Firmware

Unit 1 (3052)  Unit 2 (3052)

Datei auswählen  Hochladen Abbrechen

The firmware version for each unit is listed as a label next to the activation button. The navigation options are deactivated during the update process. The update process takes about 3 minutes for both units.

wanzl

installer Abmelden Deutsch

WEAC Update

Zurück      Weiter

Firmware

Unit 1 (3052)  Unit 2 (3052)

Datei auswählen  Hochladen Abbrechen

5%

Aktion	Datum	Zeit	Ergebnis
Initialisierung	12.02.2021, 13:57:12	0	100% ✓
W2MB3048.bin	12.02.2021, 13:57:13	5%	

After checking the WEAC firmware, the swing doors are configured. It is automatically checked whether the minimum requirements regarding the firmware are met. You will be informed on the surface if the firmware has to be updated first.



wanzl

installer Abmelden Deutsch

### WEAC Doors Update

Zurück      Weiter

Tür

Unit 1 (3048)  Unit 2 (3048)

Aktuelle Konfiguration

Unit 1 3 - Glas 320(250)x1000x10 !  
Unit 2 3 - Glas 320(250)x1000x10 !

Tür auswählen ▾ 0 - Glas 670(600)x1550x10 Datei ▾ Abbrechen Anwenden

Unit 1 muss aktualisiert werden. Die minimale Version ist 3051  
Unit 2 muss aktualisiert werden. Die minimale Version ist 3051

Import Export

If the requirements are met, you can select the swing doors and apply them to the gate.

wanzl

installer Abmelden Deutsch

### WEAC Doors Update

Zurück      Weiter

Tür

Unit 1 (3052)  Unit 2 (3052)

Aktuelle Konfiguration

Unit 1 4 - Glas 250x700x10 !  
Unit 2 4 - Glas 250x700x10 !

Tür auswählen ▾ 3 - Glas 320(250)x1000x10 Datei ▾ Abbrechen Anwenden

15%

Initialisierung 12.02.2021, 14:14:49 0 100% ✓  
co1.csv 12.02.2021, 14:14:50 5 100% ✓  
co2.csv 12.02.2021, 14:14:55 0% ⚡

The next step is to configure the LED player for both units (Master and Slave) accomplished. If necessary, you can adjust the parameters. If the status is **ready for use**, no modifications are necessary.



wanzl

Configuration Of Led Player Master

Betriebsbereit

Zurück      Weiter

Led player master (led\_player\_master)

Torseite \*

Eingang

Slave

Pfeil-X-Signalisierung deaktiviert

Lichtband deaktiviert

Serielle Schnittstelle \*

/dev/ttyACM0

Baudrate \*

115200

The current firmware of the LED player is shown again on the last page of the assistant. Optionally, you can end the configuration with a restart. However, this is only necessary if IP addresses or interface information have changed.

wanzl

Led Player Update

Neustart

Zurück      Finish

Diamex Aktualisieren

Gerät	Led player master
Status	OK
Skriptname	Base
Skriptversion	2.0.1

Datei auswählen Zurücksetzen      Aktualisieren

After clicking **Finish** you can log in again as certain user and work with the Galaxy Gate. If you log in again as user *installer*, you get a graphical overview, can find out about the status of the access control and can carry out updates if necessary. So you complete the setup of the access control.



Displays				
Display Entry		<a href="http://192.168.241.117:/display/display_entry">http://192.168.241.117:/display/display_entry</a>		
Display Exit		<a href="http://192.168.241.117:/display/display_exit">http://192.168.241.117:/display/display_exit</a>		
Devices				
Name	Type	State	Failure Reason	Failure
GateModbusGalaxyGateTcp	GateModbusGalaxyGateTcp	Closed		<input type="checkbox"/>
Light bar	Duometric	Ready		<input type="checkbox"/>
Audio player	Weac	Ready		<input type="checkbox"/>
Slave fmcu	Device	Ready		<input type="checkbox"/>
Led player master	Diamex Serial	Ready		<input type="checkbox"/>
Led player slave	Diamex Remote	Ready		<input type="checkbox"/>

You can now log in with a service account and carry out further tests.

## Operation Manual

### Configuration of the Swing Doors

The swing doors can have different dimensions. Depending on the width and height, this results in other target parameters for optimal curve passage.

**Tür auswählen ▾**

- [0 - Glas 670\(600\)x1550x10](#)
- [1 - Glas 520\(450\)x1255x10](#)
- [2 - Glas 500\(425\)x1225x10](#)
- [3 - Glas 320\(250\)x1000x10](#)
- [4 - Glas 250x700x10](#)

After a type has been selected, all parameters can be adjusted according to the needs in the interface before they are then activated via the button **Apply** in the configuration on the access control. If you change individual values in the display, the settings must first be saved. To do this, click on the diskette symbol on the left of the interface above the file list.



	co1.csv	
	2,4,6,8,10,12,14,16,18,20,22,24,26,28,30,32,34,36,38,40,44,56,60,64,72,80,88,96,(100),-100,-100,-100,-100,-100,-100,-101,-101,8	
	co2.csv	
	2,4,6,8,10,12,14,16,18,20,22,24,26,28,30,32,34,36,38,40,44,56,60,64,72,80,88,96,(100),-100,-100,-100,-100,-100,-100,-101,-101,8	
	config	
	CURRMAX 1900 CURRNOM 1000 SPEED_MAX 220 BREAK 70	

After the changes have been saved, you can activate them using the Apply button.

## Configuration of the XOVIS Sensors


### Add XOVIS-Sensor

Navigate to "Configuration" -> "Devices" -> "Xovis Cameras" and then click on the "Add" button

The screenshot shows the Wanzl configuration interface. The top navigation bar has tabs for Dashboard, Configuration (which is highlighted with a red box and labeled 1), System, WEAC, Files, and Statistics. Below the navigation bar, there are several buttons: Save to File, Load from File, and Reset. A menu bar below the buttons includes General (highlighted with a red box and labeled 2), Devices (highlighted with a red box and labeled 2), Alarms, Signals, Output Signals, Dispatchers, Displays, Server, and Diamex Update. Under the Devices menu, there are sub-options: Gates, Light bars, Audio players, Slave FMCUs, GPIO, LED players, USB Hubs, Photo camera (highlighted with a red box and labeled 3), Xovis Cameras (highlighted with a red box and labeled 3), and Readers. At the bottom right of the page, there is a green Add button (highlighted with a red box and labeled 4).

The following fields are filled in the order shown:

1. Name
2. URL
3. Username
4. Password

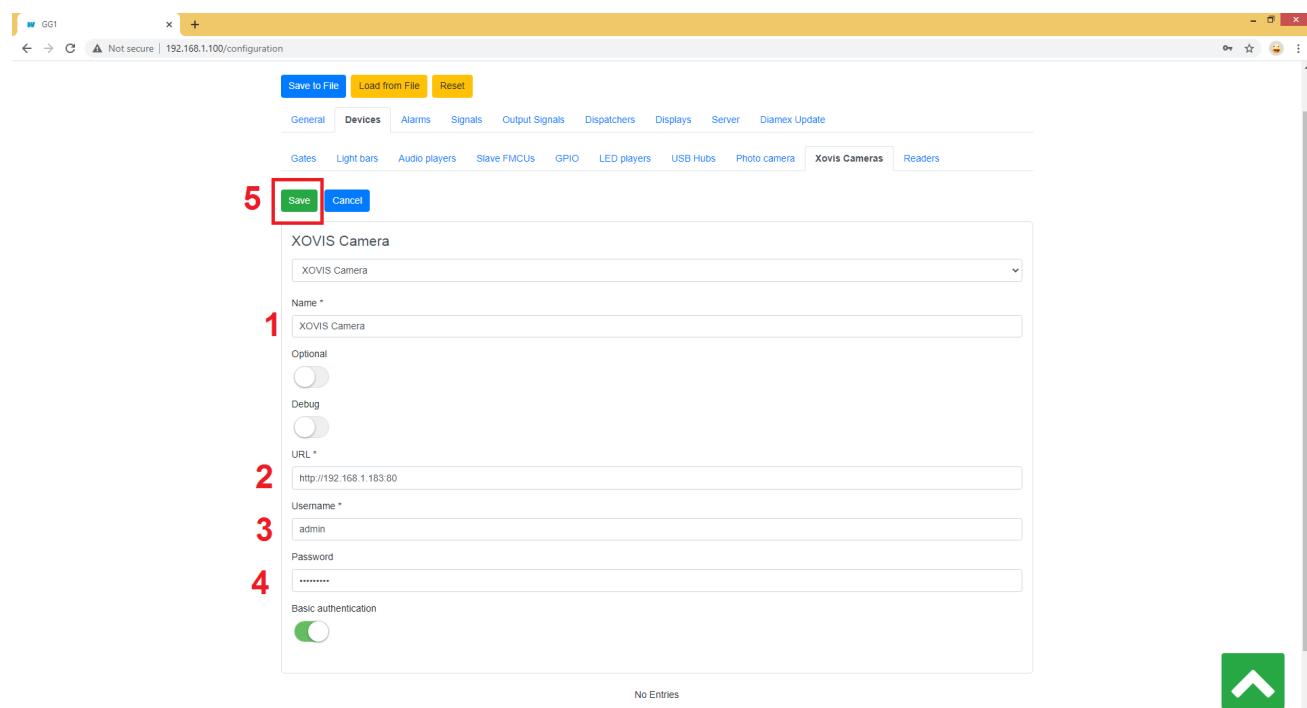


### NOTE

After adding the XOVIS sensor, the **FMCU** must be restarted before proceeding with the configuration.

## Add XOVIS monitoring area as alarm signal

Navigate to "Configuration" -> "Signals" and then click on the "Add" button

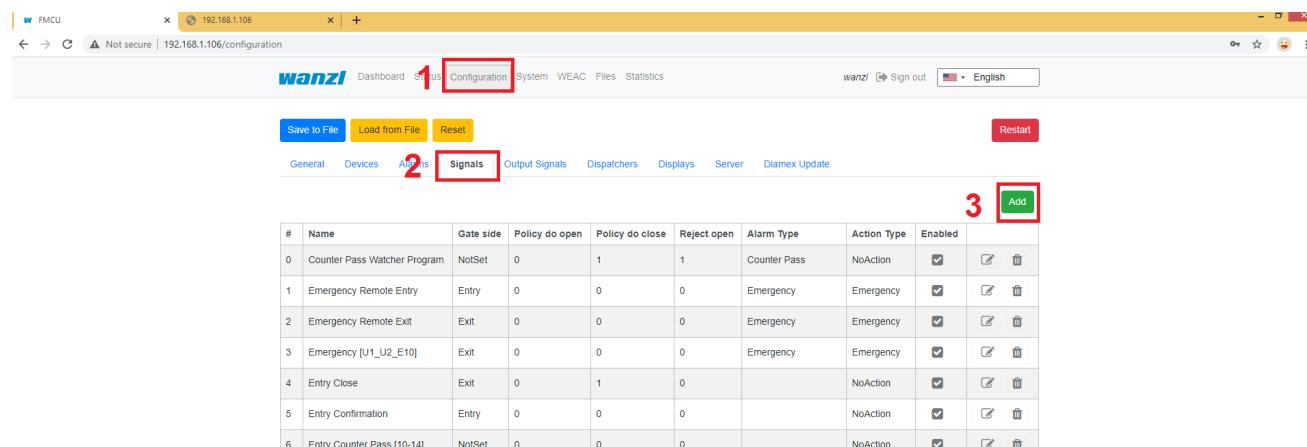

The following fields must be filled in here:

1. Select type "XOVIS Sensor"
2. Specify the name of the signal (e.g. "XOVIS ALARM")
3. Set the minimum number of people in the alarm zone to trigger an alarm (e.g. 2)
4. Select the alert type (e.g. "Unauthorized Access")
5. Determine a list of alarm zones (e.g. "AlarmZone")

6. Select the XOVIS sensor added to.

The configuration is saved by clicking the **Save** button.



Dashboard Status Configuration System WEAC Files Statistics [wanzl](#) [Sign out](#) [English](#)

Save to File Load from File Reset

General Devices Alarms **Signals** Output Signals Dispatchers Displays Server Diamex Update

**Save** Cancel

**1** GateSignalXovis  
XOVIS Sensor

**2** XOVIS Alarm

Enabled

Count Max \* 0

Gate side \* NotSet

Policy do open \* 0

Open gate, ignore locked

Open gate speed, % \* 100

Open gate angle, % \* 100

Open gate timeout, ms \* 2000

Re-open gate delay, ms \* 1800

Policy do close \* 0

Close gate speed, % \* 100

Protect from soft close. Soft Alarm delay, ms \* 0

Soft Alarm Type

Soft close was forbidden. Alarm delay, ms \* 60000

Close was forbidden. Alarm Type

Protect from force close



Protect from force close

Force close was forbidden. Alarm delay, ms \*

1200

Delay to start closing the gate, ms (0 - 1000) \*

0

Reject open \*

0

Ignore reject open delay, after gate closed, ms \*

0

Alarm \*

**3** 2

Alarm Type

**4** Unauthorized Access

Alarm delay, ms \*

400

Action \*

0

Action Type \*

NoAction

Counter \*

0

List of zones ("Gate side" and "Counter" must be unset)

**5** AlarmZone

List of lines ("Gate side" and "Counter" must be set)

Camera XOVIS \*

**6** XOVIS Camera

### Add XOVIS counter

Navigate to "Configuration" -> "Signals" and then click on the "Add" button



## Gate ~ FMCU ~ Benutzerhandbuch/en

The screenshot shows the WANZI software interface with the title bar "FMCU" and "192.168.1.106". The main menu includes Dashboard, Status, Configuration (highlighted with red box 1), System, WEAC, Files, and Statistics. The sub-menu under Configuration is "Signals" (highlighted with red box 2). A toolbar at the top has buttons for Save to File, Load from File, Reset, and a red "Restart" button. Below the toolbar is a navigation bar with tabs: General, Devices, Alarms, Signals (highlighted with red box 2), Output Signals, Dispatchers, Displays, Server, and Diamex Update. The main content area displays a table of signals:

#	Name	Gate side	Policy do open	Policy do close	Reject open	Alarm Type	Action Type	Enabled		
0	Counter Pass Watcher Program	NotSet	0	1	1	Counter Pass	NoAction	<input checked="" type="checkbox"/>		
1	Emergency Remote Entry	Entry	0	0	0	Emergency	Emergency	<input checked="" type="checkbox"/>		
2	Emergency Remote Exit	Exit	0	0	0	Emergency	Emergency	<input checked="" type="checkbox"/>		
3	Emergency [U1_U2_E10]	Exit	0	0	0	Emergency	Emergency	<input checked="" type="checkbox"/>		
4	Entry Close	Exit	0	1	0		NoAction	<input checked="" type="checkbox"/>		
5	Entry Confirmation	Entry	0	0	0		NoAction	<input checked="" type="checkbox"/>		
6	Entry Counter Pass [10-14]	NotSet	0	0	0		NoAction	<input checked="" type="checkbox"/>		

The following fields must be filled in here:

1. Select type "XOVIS Sensor".
2. Specify the name of the signal (e.g. "XOVIS Counter")
3. Specify the side of the gate (e.g. "Entrance")
4. Set the value "Counter".
5. Specify a list of lines(e.g. "EntryLine")
6. Select the XOVIS camera that you added earlier.

The configuration is saved by clicking the **Save** button.



wanzi Dashboard Status Configuration System WEAC Files Statistics Sign out English

Save to File Load from File Reset Restart

General Devices Alarms Signals Output Signals Dispatchers Displays Server Diamex Update

7 Save Cancel

**GateSignalXovis**

1 XOVIS Sensor

2 XOVIS Counter

Enabled

Count Max \* 0

Gate side \* 3 Entry

Policy do open \* 0

Open gate, ignore locked

Open gate speed, % \* 100

Open gate angle, % \* 100

Open gate timeout, ms \* 2000

Re-open gate delay, ms \* 1800

Policy do close \* 0

Close gate speed, % \* 100

Protect from soft close. Soft Alarm delay, ms \* 0

Soft Alarm Type

Soft close was forbidden. Alarm delay, ms \* 60000

Close was forbidden. Alarm Type

Protect from force close

Force close was forbidden. Alarm delay, ms \*



1200

Delay to start closing the gate, ms (0 - 1000) \*

0

Reject open \*

0

Ignore reject open delay, after gate closed, ms \*

0

Alarm \*

0

Alarm Type

Alarm delay, ms \*

400

Action \*

0

Action Type \*

NoAction

Counter \*

4 1

List of zones ("Gate side" and "Counter" must be unset)

5 EntryLine

6 XOVIS Camera

## Store VPN key

A VPN key is required to use remote maintenance. This key can be requested from maxcrc support (support@maxcrc.de) by specifying the project name (Configuration->General view).

After the key file (\*.opvn.conf) is available, you can import via the System->OpenVPN page. The following steps are necessary for this.

Navigating to the **System-OpenVPN** page.



The screenshot shows the maxcrc web interface with the 'OpenVPN' tab selected. A file selection dialog is open, showing the file 'gg\_check-maxcrc.ovpn.conf'. The 'Start' button is green with an info icon.

This file is now specified via the **Select file** button in the file selection dialog. Then click on **Upload**. When the process has been successfully completed, an info icon will appear next to the start button. This means the file has been uploaded successfully, the OpenVPN client can now be activated by clicking on **Start**.

The screenshot shows the maxcrc web interface with the 'OpenVPN' tab selected. The status is now 'Running' with an info icon, and the IP address is 192.168.240.27.

If the start was successful, the color changes from green to red and the label from start to stop. The status of the OpenVPN client and the IP address for access in the VPN network for this gate are displayed to the right of the info symbol. You can disable remote access by clicking the **Stop** button.

## Update Software

If there is no Internet connection, individual package installations can be carried out using the **System->Update software** menu. You should have a zip archive with the packages to be installed. It must be ensured that no relative paths are used in the archive. Then you can insert the archive into the input line via **Select file** and start the update procedure with **Upload**. The progress of update process is displayed:



The screenshot shows the WANZI software update interface. At the top, there are buttons for "Speichern" (Save) and "Zurücksetzen" (Reset). On the right, there are buttons for "Neustart" (Restart) and "System neustarten" (System restart). Below these are tabs for "Verändert" (Changed), "Ungültig" (Invalid), and "Simulator". The main menu includes "Home", "Dashboard", "Status", "Konfiguration", "System", "WEAC", "Dateien", and "Statistik". The "System" tab is selected. On the far right, there are language and user selection buttons for "wanzl" and "Deutsch".  
  
The central area shows a progress bar with three dots indicating progress. A message box at the bottom left says "Fortschritt: 10 %". Another message box below it says "Status: Installing file 'chromium-kiosk\_1.0.0-fmcu-2.2.5\_aarch64.ipk' in progress. Attempt: 1".  
  
At the bottom, there is another instance of the software update interface, identical to the one above but with a different file path: "chromium-kiosk\_1.0.0-fmcu-2.2.5\_aarch64.ipk". It shows a progress bar at 100% and a message box stating "Status: Software aktualisieren abgeschlossen".

If necessary, the application can be restarted.

## Customer Role

When you log in as user *client*, a simplified interface appears with "Home", "Status", "Statistics" configuration menus.

The screenshot shows the simplified WANZI interface for user "client". At the top, there are buttons for "Home", "Status", "Statistics", and "Random Winner". On the right, there are buttons for "Sign out" and "English".  
  
The main area features a vertical stack of service buttons: "Single Free", "Lock", "Open Service", "Open Service", "Lock", and "Single Free". To the right of these buttons is a "CLEARANCE" toggle switch and an "EMERGENCY" toggle switch. Further right is a "Restart" button.  
  
Below this is a statistics summary: "Statistics from Apr 12, 2022, 12:00:00 AM" followed by "Entries ↑ 4" and "Exits ↓ 0". There is also a "Reset" button.  
  
A "Configuration" dropdown menu is set to "Konfiguration". To its right are "Apply" and "Cancel" buttons.  
  
A detailed "Application" section displays system information:

Up time	4:16:48
Start time	Apr 12, 2022 1:58:46 PM
System time	6:15:33 PM

At the bottom left, there is a "Normal" button with a thumbs-up icon and the text "Normal".



In this view you can administrate the access control, but you cannot make any configuration adjustments. The current statistics are displayed directly on the interface, a complete overview of the accesses can be viewed in the **Statistics** tab and exported if required. The current status of the individual access control components can be viewed in the **Status** tab. The **Clearance** option disables all alarms to make the cleaning staff's job easier. The **Emergency** option supports the user in opening the access control immediately.

## Standard Assignment Connection Board

---

### Unit 1

Port	Function	Description
<b>LSU (E1)</b>	LS Middle <i>Center Light barrier</i>	NO <i>Normally Open Contact</i>
<b>LSV (E2)</b>	LS Entry <i>Photocell Input</i>	NO <i>normally open contact</i>
<b>E3</b>	Open Entry <i>Single free entry direction Impuls 0,1-1,0 Sek.</i>	NO <i>Normally Open Contact</i>
<b>E4</b>	Open Exit <i>Single free exit direction Impuls 0,1-1,0 Sek.</i>	NO <i>normally open contact</i>
<b>LSH (E5)</b>	NA <i>not connected</i>	
<b>E6</b>	State bit 0 <i>Status bit 0</i>	NO <i>normally open contact</i>
<b>E7</b>	State bit 1 <i>Status bit 1</i>	NO <i>normally open contact</i>
<b>E8</b>	Fire Alarm <i>fire alarm system (BMA)</i>	NC <i>normally closed contact</i>
<b>E9</b>	Open Entry 70% <i>Einzelfrei 70% Input Direction Impuls 0,1-1,0 Sek.</i>	NO <i>normally open contact</i>
<b>E10</b>	Emergency Open Button <i>emergency button</i>	NC <i>normally closed contact</i>



<b>A8</b>	Entry Confirmation <i>Confirmation of passage entry direction Impuls 0,5 Sek.</i>	+12 VDC
<b>A9</b>	Exit Confirmation <i>Confirmation of passage exit direction Impuls 0,5 Sek.</i>	+12 VDC

## Unit 2

Port	Function	Description
<b>LSU (E1)</b>	NA <i>not connected</i>	
<b>LSV (E2)</b>	NA <i>not connected</i>	
<b>E3</b>	Open Entry <i>Single free entry direction Impuls 0,1-1,0 Sek.</i>	NO <i>normally open contact</i>
<b>E4</b>	Open Exit <i>Single free exit direction Impuls 0,1-1,0 Sek.</i>	NO <i>normally open contact</i>
<b>LSH (E5)</b>	LS Exit <i>Photocell exit</i>	NO <i>normally open contact</i>
<b>E6</b>	State bit 2 <i>Status bit 2</i>	NO <i>normally open contact</i>
<b>E7</b>	State bit 3 <i>status bit 3</i>	NO <i>normally open contact</i>
<b>E8</b>	Fire Alarm <i>fire alarm system (BMA)</i>	NC <i>normally closed contact</i>
<b>E9</b>	Open Exit 70% <i>single free 70% exit direction Impuls 0,1-1,0 Sek.</i>	NO <i>normally open contact</i>
<b>E10</b>	Emergency Open Button <i>emergency button</i>	NC <i>normally closed contact</i>



<b>A8</b>	Alarm Impuls <i>Alarm Impuls 0,5 Sek.</i>	+12 VDC
<b>A9</b>	Gate State Error <i>error condition Durchgang</i>	+12 VDC

#### Status Bits

<b>Status</b>	<b>Unit 1 E6</b>		<b>Unit 2 E6</b>		<b>Unit 2 E7</b>	
	<b>Bit 0</b>	<b>Bit 1</b>	<b>Bit 2</b>	<b>Bit 3</b>		
Normal <i>Normal</i>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>		<b>0</b>
Free Entry <i>Entrance permanently free</i>	<b>1</b>	<b>0</b>	<b>0</b>	<b>0</b>		<b>0</b>
Lock Entry <i>entrance blocked</i>	<b>0</b>	<b>1</b>	<b>0</b>	<b>0</b>		<b>0</b>
Service Entry <i>Permanently open entry direction</i>	<b>1</b>	<b>1</b>	<b>0</b>	<b>0</b>		<b>0</b>
Free Exit <i>Exit permanently free</i>	<b>0</b>	<b>0</b>	<b>1</b>	<b>0</b>		<b>0</b>
Free Entry/Exit <i>Input/Output permanently free (<b>N</b>ot implemented)</i>	<b>1</b>	<b>0</b>	<b>1</b>	<b>0</b>		<b>0</b>
Lock Entry / Free Exit <i>Entrance blocked / exit permanently free</i>	<b>0</b>	<b>1</b>	<b>1</b>	<b>0</b>		<b>0</b>
tbd	<b>1</b>	<b>1</b>	<b>1</b>	<b>0</b>		<b>0</b>
Lock Exit <i>exit blocked</i>	<b>0</b>	<b>0</b>	<b>0</b>	<b>1</b>		



Free Entry / Lock Exit				
<i>Entrance permanently free / exit blocked</i>	<b>1</b>	<b>0</b>	<b>0</b>	<b>1</b>
Lock <i>Gesperrt</i>	<b>0</b>	<b>1</b>	<b>0</b>	<b>1</b>
tbd	<b>1</b>	<b>1</b>	<b>0</b>	<b>1</b>
Service Exit <i>Permanently open exit direction</i>	<b>0</b>	<b>0</b>	<b>1</b>	<b>1</b>
tbd	<b>1</b>	<b>0</b>	<b>1</b>	<b>1</b>
tbd	<b>0</b>	<b>1</b>	<b>1</b>	<b>1</b>
Self Test <i>self test</i>	<b>1</b>	<b>1</b>	<b>1</b>	<b>1</b>

## Alarms Definition

An alarm is triggered as a follow-up action from signals or other sources (e.g. devices). Navigate to "Configuration" -> "Alarms".

The screenshot shows the wanzi web interface with the following details:

- Top Navigation:** Home, Dashboard, Status, Configuration (highlighted), System, WEAC, Files, Statistics, Random Winner. On the right: wanzi, Sign out, English dropdown.
- Sub-navigation:** General, Devices, Alarms (highlighted), Signals, Output Signals, Dispatchers, Displays, Server, Lights, Light Schemas, Diamex Update. Below these: Random Winner, Configuration Type, Configurations.
- Buttons:** Save to File, Load from File, Reset, Restart (red button).
- Table:** A list of alarms with columns: Name, Play Sound, Light Schema, Write App Event, Is Server Alarm, Enabled, and Actions (Edit, Delete).

	Name	Play Sound	Light Schema	Write App Event	Is Server Alarm	Enabled	
<input type="checkbox"/>	Connection Alive	NoSound	Idle	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<a href="#">Edit</a> <a href="#">Delete</a>
<input type="checkbox"/>	Connection Lost	Alarm	Red	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<a href="#">Edit</a> <a href="#">Delete</a>
<input type="checkbox"/>	Counter Pass	Alarm	Red	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<a href="#">Edit</a> <a href="#">Delete</a>
<input type="checkbox"/>	Door Break-In	Alarm	Red	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<a href="#">Edit</a> <a href="#">Delete</a>

To create the alarm click on the "Add" button:



Save    Cancel

Alarm Name

Name \*

Enabled

Priority \*

Play Sound \*

Sound Volume \*

Re-Play Sound, ms \*

Activate Output Signal

Light Schema

An alarm has several general characteristics: Name, Enabled Status, Priority, Sounds settings, Light settings, etc.

In the table below there are descriptions of existing alarms.

Definition	Description	Status
Connection Alive	monitors connection to external application	on/off
Connection Lost	monitors connection to external application	on/off
Counter Pass	is set by anti-rotation protection is activated	on/off
Door Break-In	Door is forcibly moved when closed	on/off
Emergency	is set if the signals on unit 1 E8 or unit 2 E8 are not active (opener).	on/off
Fire Alarm	is set if the signals on unit 1 E10 or unit 2 E10 are not active (opener).	on/off
Invalid Ticket	is set if ticket validation fails	Impuls
	is set when an object is in the	



Motionless Object	gate area for more than a defined period of time and closing is prevented by a timeout.	on/off
No Alarm	is set if no alarm is defined for signals	on/off
Proceed Alarm	analogous to Motionless Object with a different time span and other actions without light indication	on/off
Server Alarm	is triggered in the FMCU server	on/off
Tailgating	is set if more than one person is in the gate area	on/off
Unauthorized Access	is set if a person is in the gate area when the gate is closed	on/off
Valid Ticket	is set if the ticket validation was successful (trigger beep)	Impuls

## Signals

The information in this section is based on FMCU software v2.3.7 and WEAC version 32.14.


The screenshot shows the wanzi web interface with the following details:

- Top Navigation:** Home, Dashboard, Status, Configuration (selected), System, WEAC, Files, Statistics, Random Winner. On the right: wanzi, Sign out, English dropdown.
- Sub-navigation:** General, Devices, Alarms, Signals (selected), Output Signals, Dispatchers, Displays, Server, Lights, Light Schemas, Diamex Update. Below these: Random Winner, Configuration Type, Configurations.
- Buttons:** Save to File (blue), Load from File (yellow), Reset (yellow).
- Table:** A list of 10 signal configurations with columns: #, Name, Gate side, Policy do open, Policy do close, Reject open, Alarm Type, Action Type, Enabled, and edit/delete icons.

#	Name	Gate side	Policy do open	Policy do close	Reject open	Alarm Type	Action Type	Enabled	
0	Anybody Light Bar [1-50]	NotSet	0	0	0		NoAction	<input checked="" type="checkbox"/>	
1	Broken Device	NotSet	0	0	0		NoAction	<input checked="" type="checkbox"/>	
2	Counter Pass Watcher Program	NotSet	0	1	1	Counter Pass	NoAction	<input checked="" type="checkbox"/>	
3	Disinfectant Dispenser	NotSet	0	0	0		NoAction	<input checked="" type="checkbox"/>	
4	Disinfectant Dispenser Program	NotSet	0	0	1		NoAction	<input checked="" type="checkbox"/>	
5	Door Break In Alarm	NotSet	0	0	0	Door Break-In	NoAction	<input checked="" type="checkbox"/>	
6	Door Motor Low Speed	NotSet	0	0	0	Door Motor Low Speed	NoAction	<input checked="" type="checkbox"/>	
7	Door Motor Over Current	NotSet	0	0	0	Door Motor Over Current	NoAction	<input checked="" type="checkbox"/>	
8	Door Motor Over Speed	NotSet	0	0	0	Door Motor Over Speed	NoAction	<input checked="" type="checkbox"/>	
9	Emergency Remote Entry	Entry	0	0	0	Emergency	Emergency	<input checked="" type="checkbox"/>	

## Light Schemas

To navigate the section click "Configuration" -> "Light Schemas". Here you can add and/or customize named color schemes.

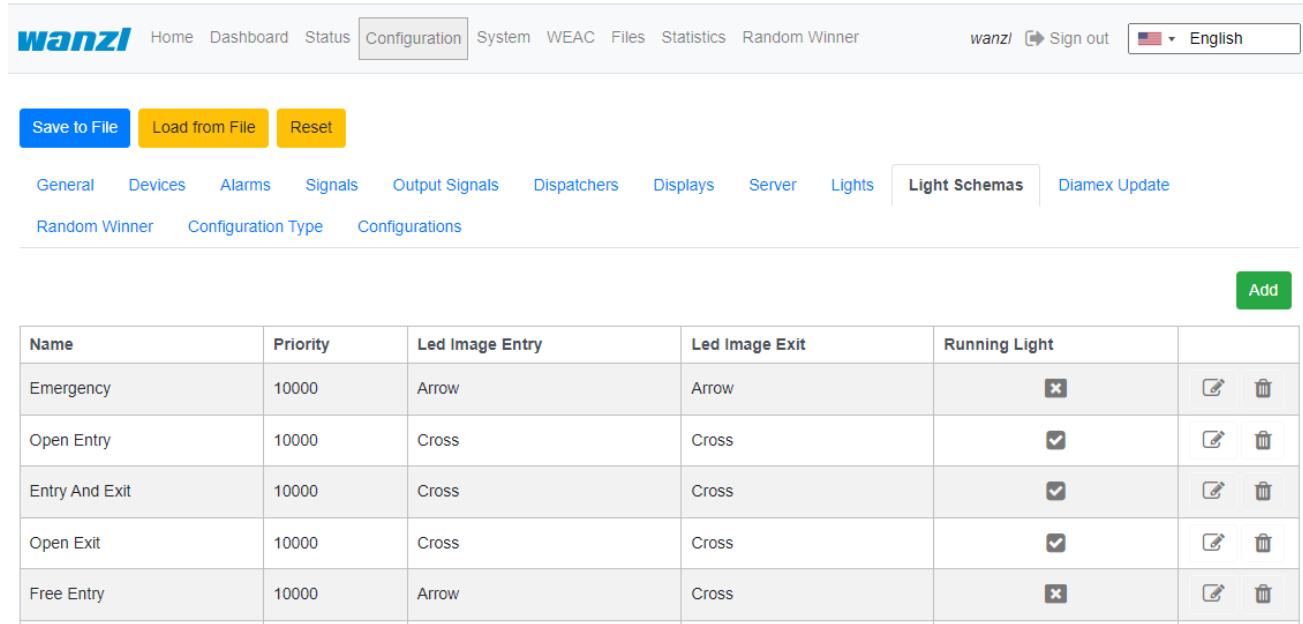

The screenshot shows the WANZI web interface with the following navigation path: Home > Configuration > Light Schemas. The 'Light Schemas' tab is active. At the top, there are buttons for 'Save to File', 'Load from File', and 'Reset'. Below the buttons, there are several tabs: General, Devices, Alarms, Signals, Output Signals, Dispatchers, Displays, Server, Lights, Light Schemas (active), and Diamex Update. Under the 'Lights' tab, there are three sub-tabs: Random Winner, Configuration Type, and Configurations. A green 'Add' button is located at the top right of the table area. The main content is a table with the following data:

Name	Priority	Led Image Entry	Led Image Exit	Running Light	
Emergency	10000	Arrow	Arrow	<input checked="" type="checkbox"/>	 
Open Entry	10000	Cross	Cross	<input checked="" type="checkbox"/>	 
Entry And Exit	10000	Cross	Cross	<input checked="" type="checkbox"/>	 
Open Exit	10000	Cross	Cross	<input checked="" type="checkbox"/>	 
Free Entry	10000	Arrow	Cross	<input checked="" type="checkbox"/>	 

Each schema describes the colors and behaviour of FMCU lights elements like enter and exit zones and the door. Existing light schema you can use in settings of **Gates** and **Alarms**.

Click Add to create light schema or click "pen" in the table to edit existing schema.



**Save** **Cancel**

**Light Schema Name**

Light Schema	
Name *	Light Schema Name
Priority *	10000
Color Entry On *	<input type="color" value="#FF0000"/>
Color Exit On *	<input type="color" value="#FF0000"/>
Color Door On *	<input type="color" value="#FF0000"/>
Light Schema On, ms *	0
Light Schema Off, ms *	0
Color Entry Off *	<input type="color" value="#000000"/>
Color Exit Off *	<input type="color" value="#000000"/>

Each light schema is described by the fields below

Field	Description
Name	Name of light schema
Priority	Priority of using light schema if there is competition situation. Less value means more priority
Color Entry On	Color of the gate entry zone during "On" time period
Color Exit On	Color of the gate exit zone during "On" time period
Color Door On	Color of the doors during "On" time period
Light Schema On, ms *	Length of "On" time period in ms
Light Schema Off, ms *	Length of "Off" time period in ms
Color Entry Off	Color of the gate entry zone during "Off" time period
Color Exit Off	Color of the gate exit zone during "Off" time period
Color Door Off	Color of the doors during "Off" time period
Led Image Entry *	Selected image of the gate entry zone (Arrow, Cross, Empty)
Led Image Exit *	Selected image of the gate exit zone (Arrow, Cross, Empty)



Running Light

Using "runing light" for the light schema (option)

Click on any field for color to edit color of selected gate element

Light Schema Name

Light Schema

Name \*

Light Schema Name

Priority \*

10000

Color Entry On \*



You can select the color space (RGB, HSL, HEX) to set the required color



## Lights

To navigate the section click "Configuration" -> "Lights". Here you can add and/or customize light configurations for different gate's modes.



The screenshot shows the wanzl configuration interface. At the top, there is a navigation bar with links: Home, Dashboard, Status, Configuration (which is selected), System, WEAC, Files, Statistics, Random Winner. On the right, there is a sign-out link and language selection (English). Below the navigation bar, there are three buttons: Save to File, Load from File, and Reset. A horizontal menu bar includes General, Devices, Alarms, Signals, Output Signals, Dispatchers, Displays, Server, Lights (selected), Light Schemas, Diamex Update, Random Winner, Configuration Type, and Configurations. A green 'Add' button is located at the top right of the main content area. Below it is a table with columns: Name, Normal, Off, Locked, Locked Entry, Locked Exit, Free Entry, Free Exit, Open Entry, Open Exit, Service Entry, Service Exit, Terminated, WEAC, Winner, and two icons (edit and delete).

Name	Normal	Off	Locked	Locked Entry	Locked Exit	Free Entry	Free Exit	Open Entry	Open Exit	Service Entry	Service Exit	Terminated	WEAC	Winner	
Default	Idle	Off	Locked	Locked Entry	Locked Exit	Free Entry	Free Exit	Open Entry	Open Exit	Service Entry	Service Exit	Terminated	Weac	Winner	

Each configuration has its own name. The image above shows the default light configuration. Click *Add* to create configuration, or "pen" to edit existing one.

The screenshot shows a configuration dialog for 'Default (default\_light\_mode\_configuration)'. It has a 'Save' and 'Cancel' button at the top right. The main area contains a dropdown menu labeled 'Light Mode Configuration' with a single item 'Default'. Below it is a 'Name \*' field containing 'Default'. Under the heading 'Normal', there is a dropdown menu with several options: Emergency, Open Entry, Entry And Exit, Open Exit, Free Entry, Free Exit, Idle, Locked Entry, Locked Exit, Locked, Manual Mode, Off, Out Of Order, and Red. The 'Idle' option is currently selected.

For each mode select existing light schema.

Then you can use the light configuration in "Devices" -> "Gates" settings.



wanzl Home Dashboard Status Configuration System WEAC Files Statistics Random Winner wanzl Sign out English

Save to File Load from File Reset

General Devices Alarms Signals Output Signals Dispatchers Displays Server Lights Light Schemas Diamex Update

Random Winner Configuration Type Configurations

Gates Light bars Audio players Slave FMCUs GPIO LED players USB Hubs Photo camera Xovis Cameras Readers

Name	Class	Port	Turnstile ID	
Gate	GalaxyGate (Modbus TCP)			

Press "pen" to edit gate settings, and select light configuration.

Is firmware version strict



Entry\Exit Light Disable



Gate Light Schema \*

Default

Unit 1 is Galaxy Port



Unit 2 is Galaxy Port



## Technical Background


The **FMCU** software is based on a customized UNIX operating system, which has been produced using the [Yocto Project](#). Only the required services are activated in the operating system. The optimal support packages for the CPU type are taken into account when creating the operating system. These so-called **B**oard **S**upport **P**ackages (BSP) are provided by the hardware manufacturers and allow optimal and efficient utilization of the hardware resources.

## Functions


In principle, the functions are mapped via the signal processing. The signals are generated by different sources including:

- Light bar
- Light sensor
- Ceiling sensor
- Other

The location of the sensors is shown in the figure below. In each half of the frame there is a so-called "inner zone" and an "outer zone". When passing through an access control, a signal flow diagram is generated, which is used to map the following functions.

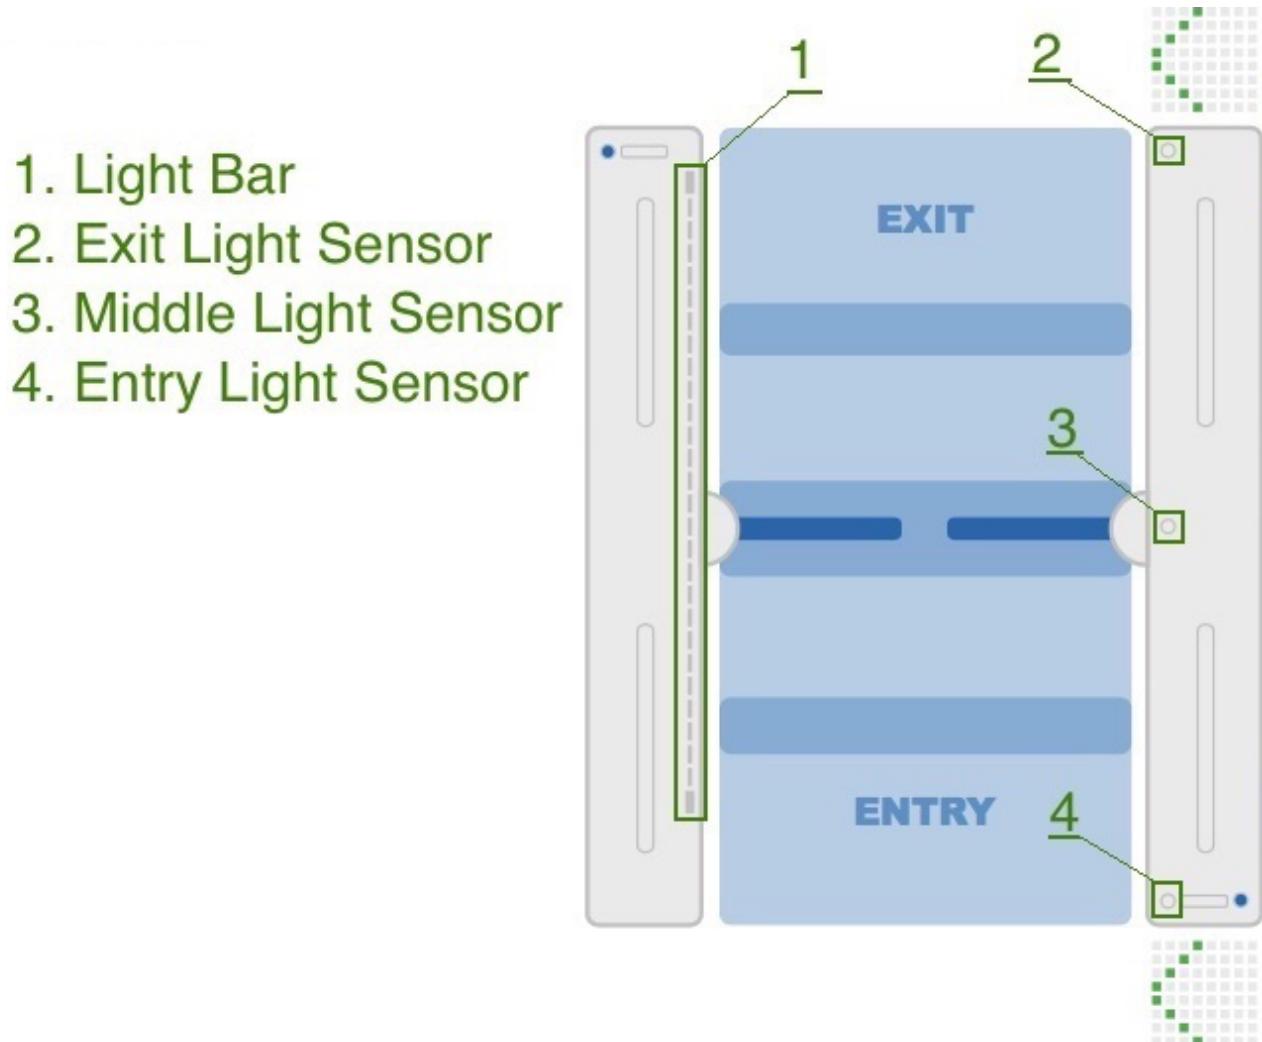

The light bar serves as a source for several signals and is also divided into different areas.

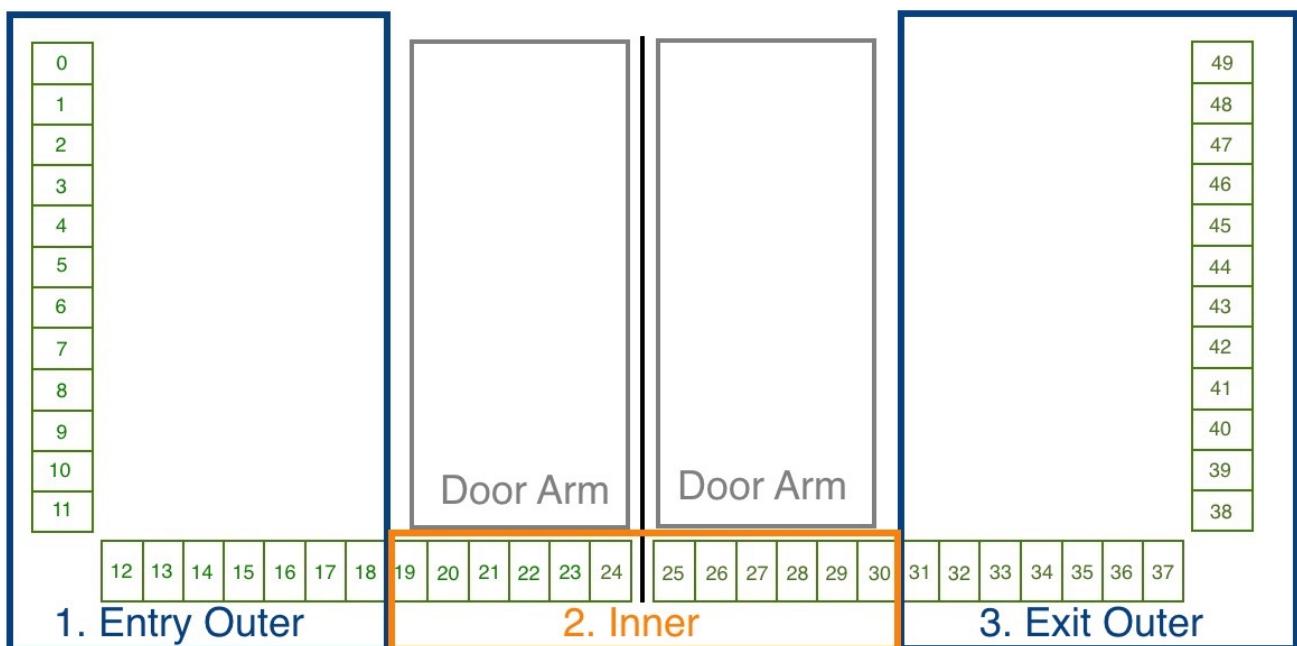

The following signals are installed in the standard configuration.

Signal Name	Frame Half
Entry Confirmation	Entry
Entry Gate Sensor [U1_E2]	Entry
Entry Outer LightBar	Entry
Exit Inner LightBar	Entry
Free Entry [1000]	Entry
Lock Entry [0100]	Entry
Open Entry [U1_U2_E3]	Entry
Open Entry 70% [U1_E9]	Entry
Remote Open Entry	Entry
Service Entry [1100]	Entry
Emergency Remote	Exit
Emergency [U1_U2_E8]	Exit
Entry Inner LightBar	Exit
Exit Confirmation	Exit
Exit Gate Sensor [U2_E5]	Exit
Exit Outer LightBar	Exit
Free Exit [0010]	Exit
Lock Exit [0001]	Exit
Open Exit [U1_U2_E4]	Exit
Open Exit 70% [U2_E9]	Exit



Remote Open Exit	Exit
Service Exit [0011]	Exit

## Closing-run at reduced Speed

---

This function applies to signals that have the property **CloseGate > 0**. For the affected signals, the value **Close gate speed, % \*** must be defined with a value between 10 and 100%. It is therefore possible to define appropriate closing speeds for different passage scenarios. The default value is set to 100%. In the standard configuration, the following signals meet this requirement.

Signal	Parameter	Value
Tailgating watcher	Close gate speed, % *	100%
Entry Gate Sensor [U1_E2]	Close gate speed, % *	100%
Exit Gate Sensor [U2_E5]	Close gate speed, % *	100%
Entry Outer LightBar	Close gate speed, % *	100%
Exit Outer LightBar Exit	Close gate speed, % *	100%

## Passage Confirmation

---

This function sets an impulse with an adjustable duration in the connection board for connection **A8**.

## Suitcase Trolley Detection

---

This function is active when the listed parameters are set for the following signals. It means that a person with a suitcase being pulled behind them can pass through prematurely closing swing doors without being disturbed.

Signal	Parameter	Value
Middle Gate Sensor [U1_E1]	Protect from force close	true
Inner LightBar	Protect from force close	true

## Multiple Opening

---

This function is only valid if a reader has been set up for the entry direction. It means that several people can pass through the entrance in a row without the swing door being closed in the meantime. Each person must present a ticket at the card reader at the entrance. The swing doors only remain open if the validation is successful. This function is active when the listed parameters are set for the following signals.

Signal	Parameter	Value
Middle Gate Sensor [U1_E1]	Protect from force close	true
Inner LightBar	Protect from force close	true
Entry Outer LightBar	Protect from force close	true
Entry Gate Sensor [U1_E2]	Protect from force close	true

Tailgating watcher	Activated	false
--------------------	-----------	-------

## Tips for Working

---

If you have lost the overview when configuring the signals, you can use the function

### Reset to Default

[Reset to Default](#)

restore a defined initial state.



### NOTE

If you use the "Rest to Default" function, the current settings will be lost. If necessary, you can export the current configuration before this step.

## Verwandte Themen

---



- [Galaxy Gate Bedienungsanleitung](#)
- [Beschreibung zentrales Dashboard](#)
- [Galaxy Gate Inbetriebnahme](#)
- [Applikationsserver Zutrittskontrollen](#)
- [Zutrittskontrollen Checkliste IT Infrastruktur](#)