

Etiss-Global-Bedienungsanleitung



Inhaltsverzeichnis

1 General description	1
2 Generating Vending Units	1
2.1 VU Server Connection Settings	3
2.2 Changing VU's user password	4
2.3 Testing server connection settings	5
3 Generating FMCU's	6
3.1 Creating a dispatcher	6
3.2 Changing FMCU's user password	9
3.3 Testing dispatcher connection	10


General description

Equipment Items Generator is used to generate vending units, turnstiles, FMCU's with specified parameters. It makes the task of registering physical equipment in the system a lot easier.


Note that this generator is used to basically clone existing units with various settings. To be able to use it, you need to have at least one unit as a template. Otherwise, if you're starting from scratch you'll need to create everything manually.

Generating Vending Units

To generate one or several vending units navigate to the "ETISS CWS" -> "Equipment items" menu, and select "Equipment items generator".

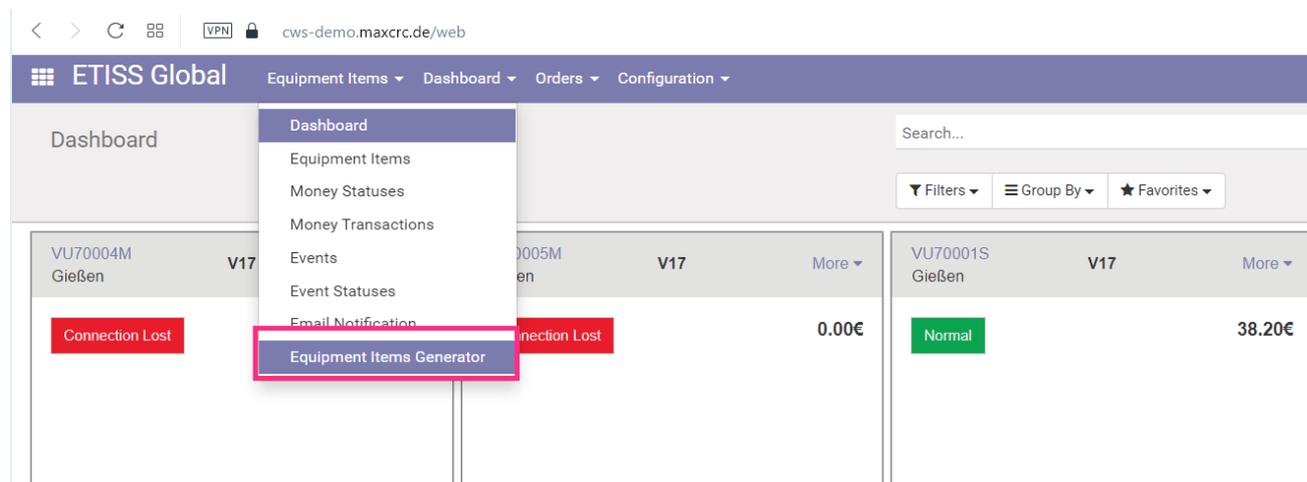

You'll be presented with the following view:

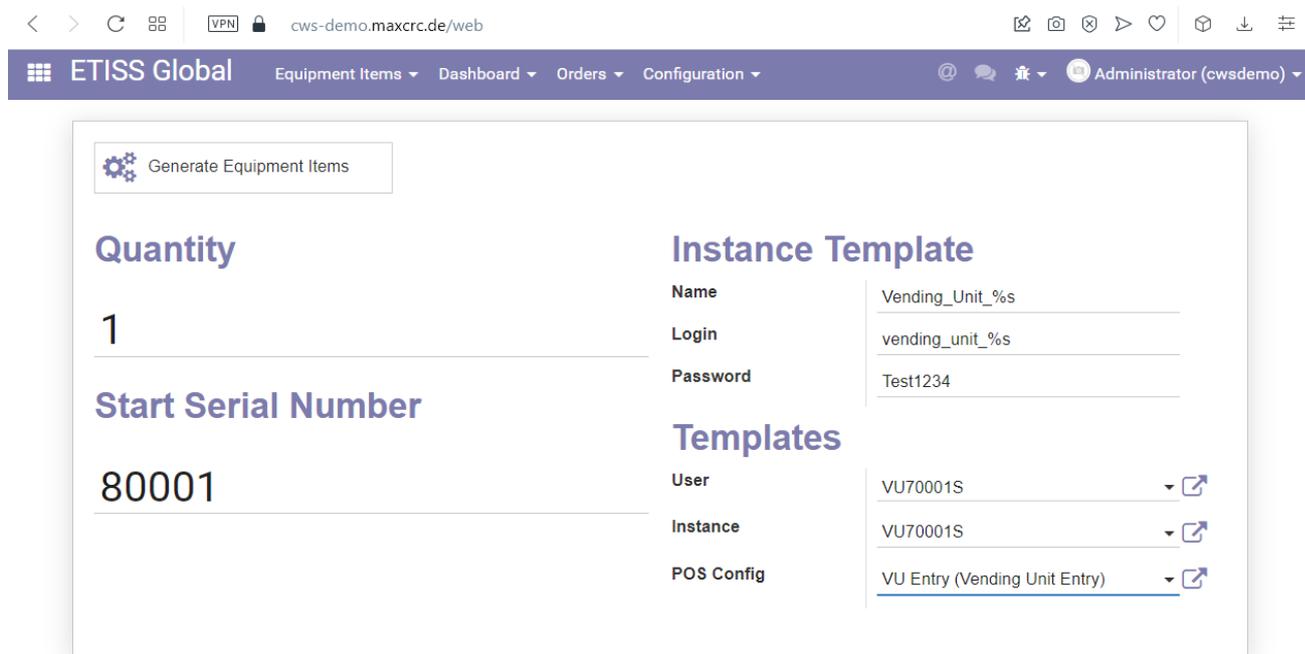


The screenshot shows a web browser window with the URL `cws-demo.maxcrc.de/web`. The page title is "ETISS Global" and the user is logged in as "Administrator (cwsdemo)". The main content area contains a form titled "Generate Equipment Items" with the following fields:

- Quantity:** 1
- Start Serial Number:** 80001
- Instance Template:**
 - Name: Vending_Unit_%s
 - Login: vending_unit_%s
 - Password: Test1234
- Templates:**
 - User: VU70001S
 - Instance: VU70001S
 - POS Config: VU Entry (Vending Unit Entry)

On this form, fill in all necessary fields:

- **Quantity:** The number of vending units to generate.
- **Start serial number:** The starting value of the serial numbers to generate.
- **Name:** Vending unit name (note that %s value will be substituted with the VU serial number during the generation process for each generated unit).
- **Login:** Vending unit user login (the system creates associated user with login and password to establish a connection between VU and the server).
- **Password:** Vending unit user password (it's not a required field, if you omit the password it will be generated randomly).
- **User:** The user template which will be used for linked user creation. The system will use this user's groups, visibility setting, etc. (this will mostly establish required access level for the user).
- **Instance:** An existing VU instance on which to base all generated instances. The system will use this instance's type, configuration, etc. (If you're generating V21 units, select existing V21 instance here).
- **POS Config:** An existing "Point of Sale" config which will be copied to all generated VU instances.


Once all fields are filled in, press the **Generate Equipment Items** button and wait for the generation process to finish. After that you'll see your new vending units created.

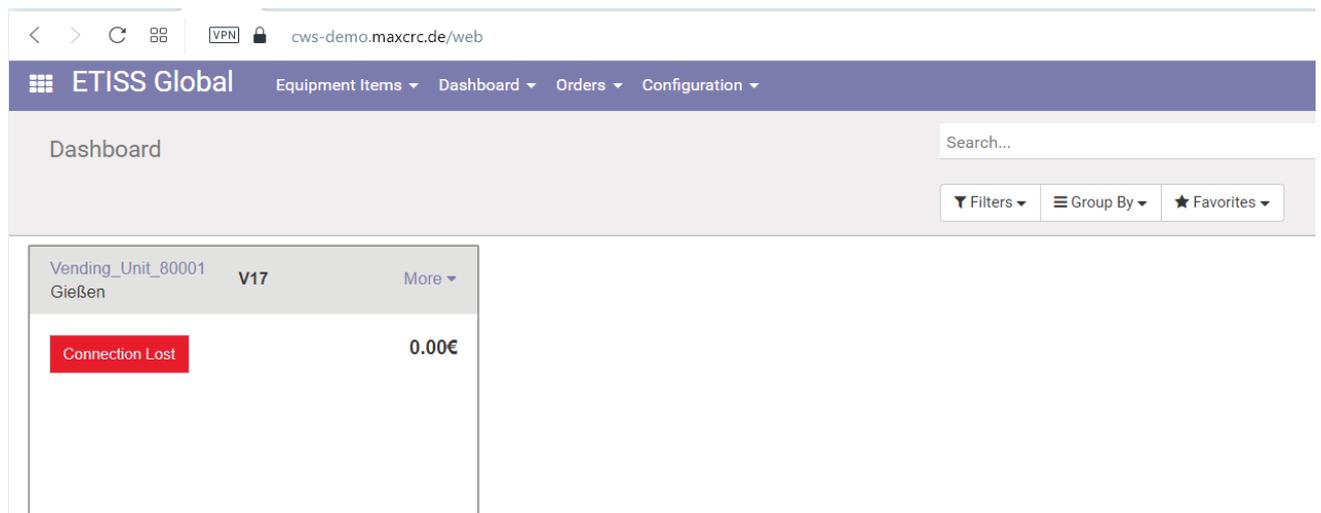

The screenshot shows the ETISS Global dashboard. The browser address bar displays 'cws-demo.maxcrc.de/web'. The navigation menu includes 'Equipment Items', 'Dashboard', 'Orders', and 'Configuration'. The main content area is titled 'Dashboard' and features a search bar and filters. A table lists equipment items, with one entry for 'Vending_Unit_80001' (Gießen) showing a 'Connection Lost' status and a value of '0.00€'.

VU Server Connection Settings

Next, login to the VU as Administrator and navigate to the "Service" -> "System" -> "Setup" -> "Server Connection Settings" page.

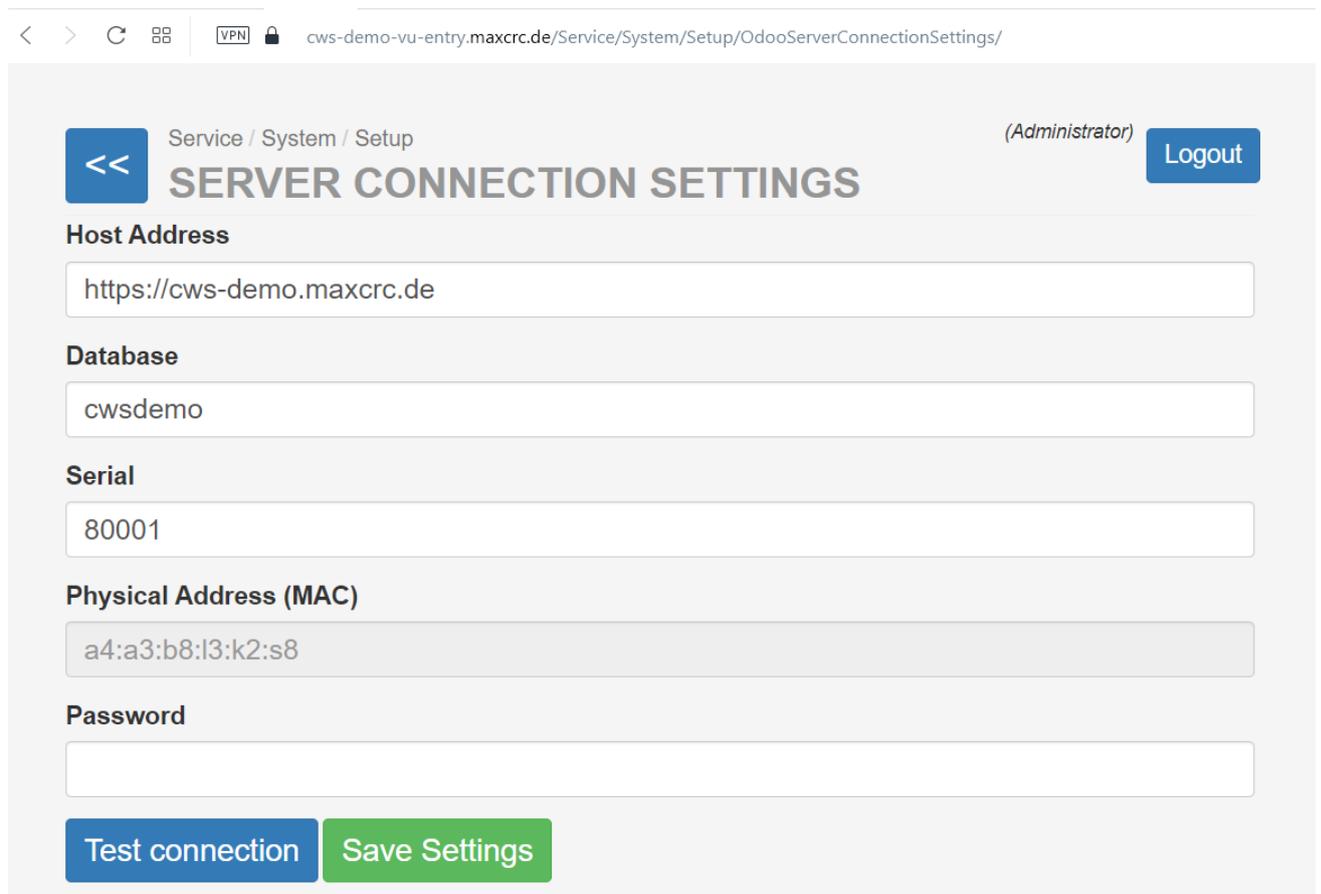

The screenshot shows the 'SERVER CONNECTION SETTINGS' page. The breadcrumb trail is 'Service / System / Setup'. The user is logged in as '(Administrator)' and has a 'Logout' button. The settings are as follows:

Field	Value
Host Address	https://cws-demo.maxcrc.de
Database	cwsdemo
Serial	80001
Physical Address (MAC)	a4:a3:b8:l3:k2:s8
Password	

At the bottom, there are two buttons: 'Test connection' (blue) and 'Save Settings' (green).

On this page enter the following server connection settings:


- **Host Address:** The URL address of the server.

- **Database:** The database name.
- **Serial:** Serial number of the VU.
- **Password:** No need to fill in this field if you don't use "login/password" authorization. The VU's MAC address will be used as a password.

After filling in all these parameters click "Save settings" button. At this point we're almost done with the setup. All we need to do is to specify a password for the VU's linked user. The password should be the same as the MAC Address of the VU.

Changing VU's user password

In the Odoo backend open the VU's linked user and change it's password to the value of MAC Address.

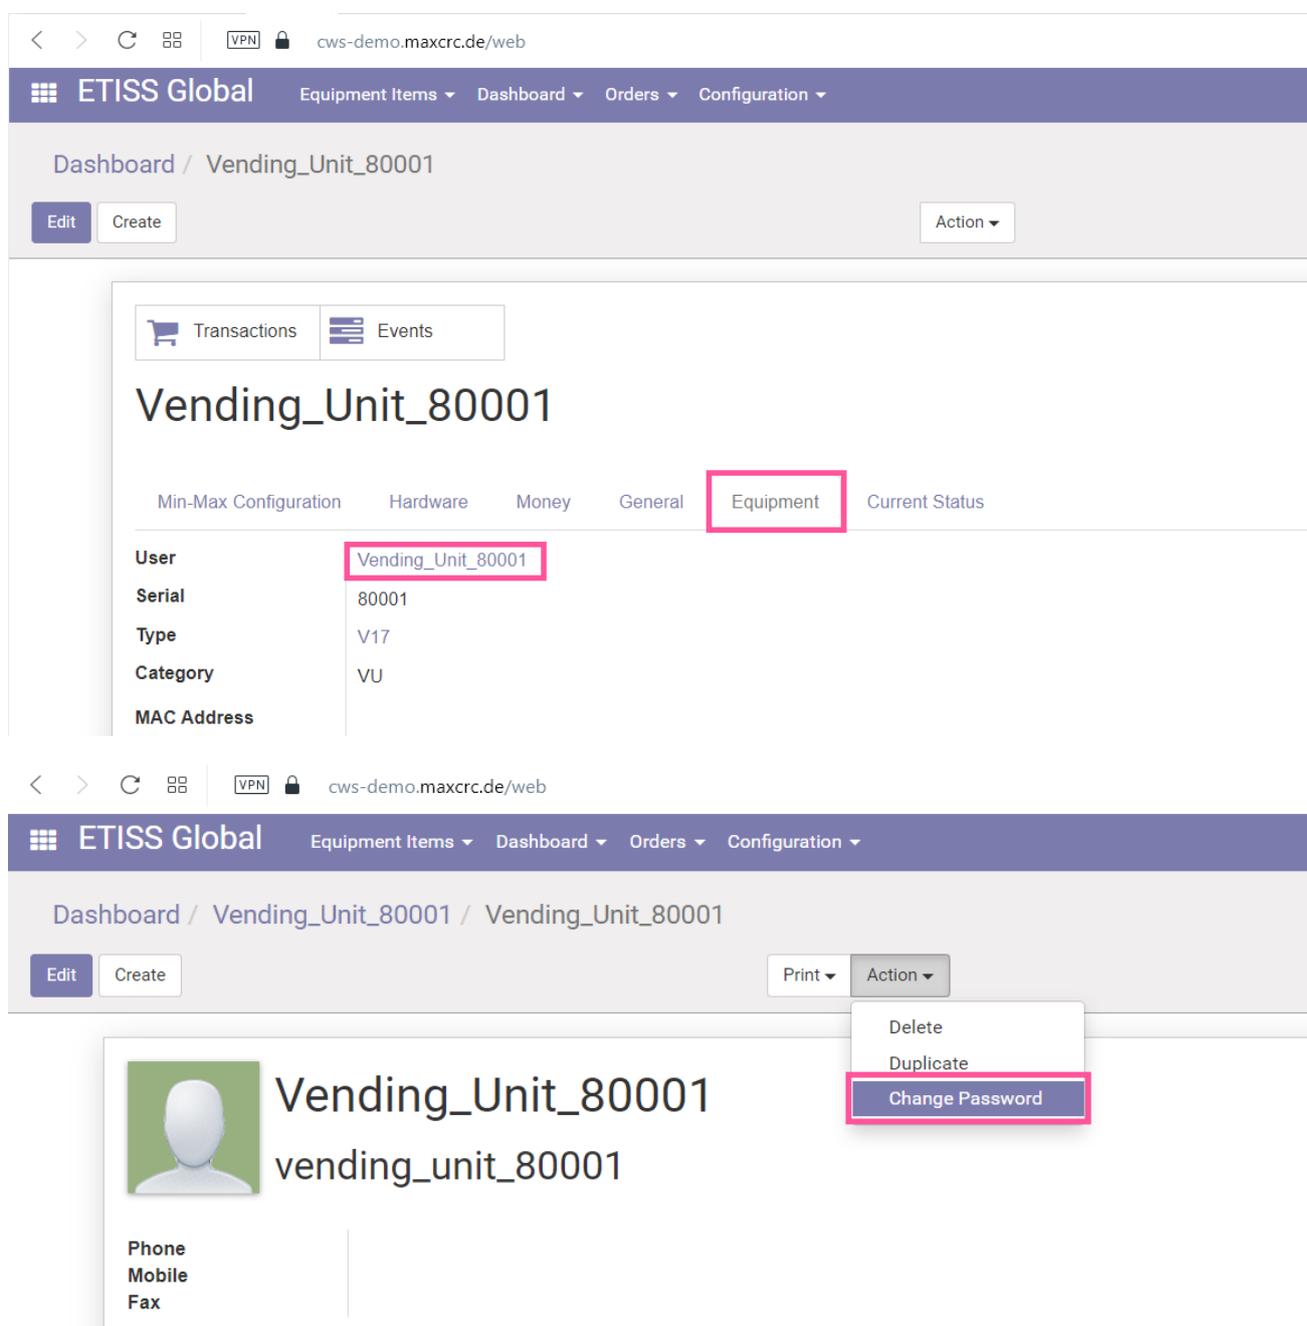

The screenshot shows two steps in the Odoo backend interface:


Step 1: Equipment Configuration
The browser address bar shows `cws-demo.maxcrc.de/web`. The breadcrumb is `Dashboard / Vending_Unit_80001`. The `Equipment` tab is selected. The configuration table is as follows:

User	Vending_Unit_80001
Serial	80001
Type	V17
Category	VU
MAC Address	

Step 2: User Profile
The breadcrumb is `Dashboard / Vending_Unit_80001 / Vending_Unit_80001`. The `Action` dropdown menu is open, showing `Delete`, `Duplicate`, and `Change Password` (highlighted with a red box). The user profile information is:

Vending_Unit_80001
vending_unit_80001

Phone
Mobile
Fax

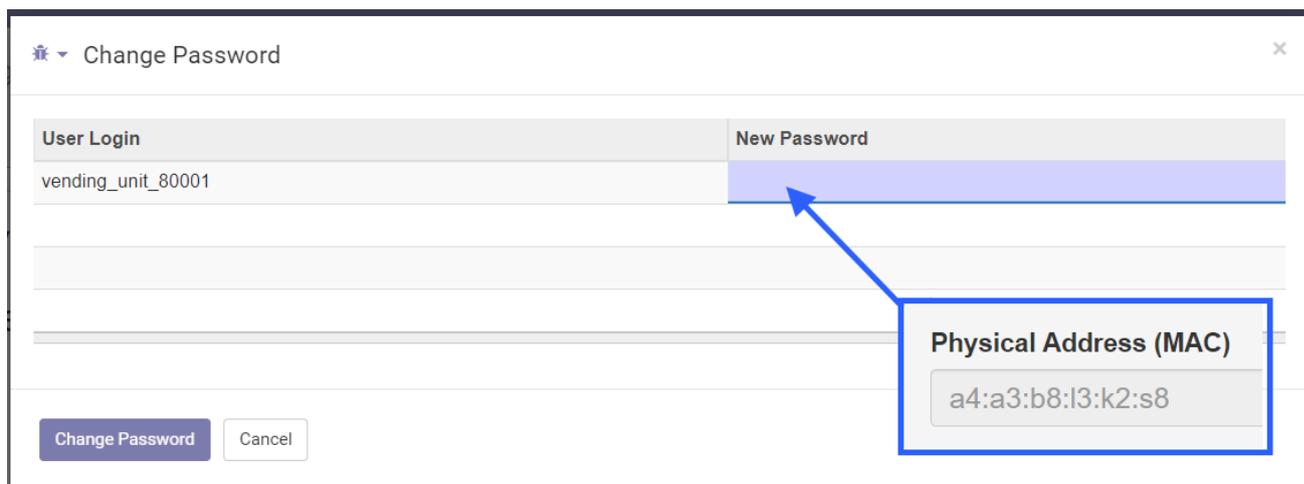


User Login	New Password
vending_unit_80001	

Physical Address (MAC)
a4:a3:b8:l3:k2:s8

Change Password Cancel

Testing server connection settings

When the password has been changed, go back to the VU's settings page and click "Test connection" button. The message "Connection successfully established" should appear.

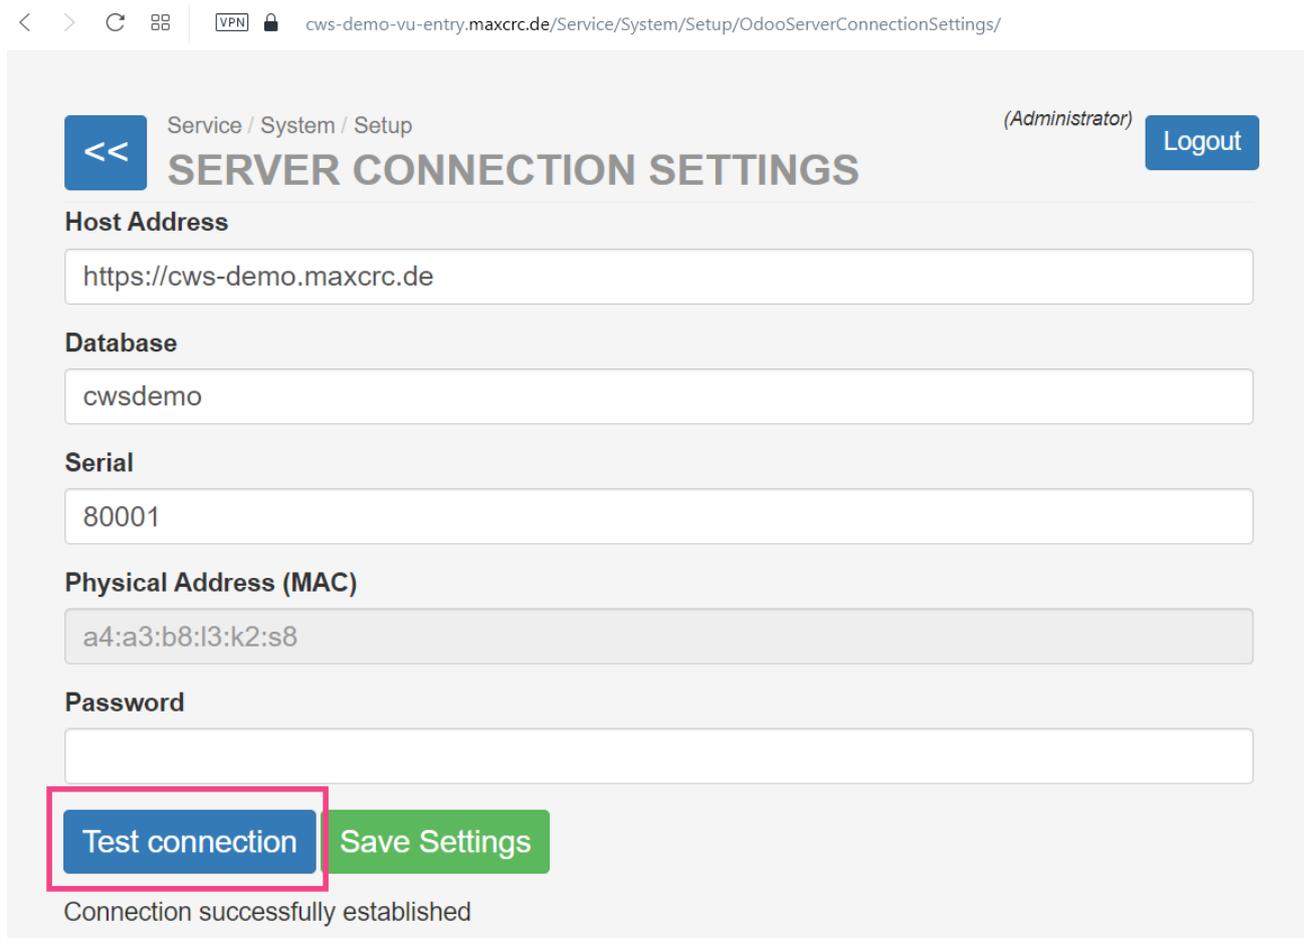

Service / System / Setup (Administrator) Logout

SERVER CONNECTION SETTINGS

Host Address
https://cws-demo.maxcrc.de

Database
cwsdemo

Serial
80001

Physical Address (MAC)
a4:a3:b8:l3:k2:s8


Password

Test connection **Save Settings**

Connection successfully established

Generating FMCU's

The process of generation FMCU's is basically the same as for VU's only you don't need to specify POS config in generator.

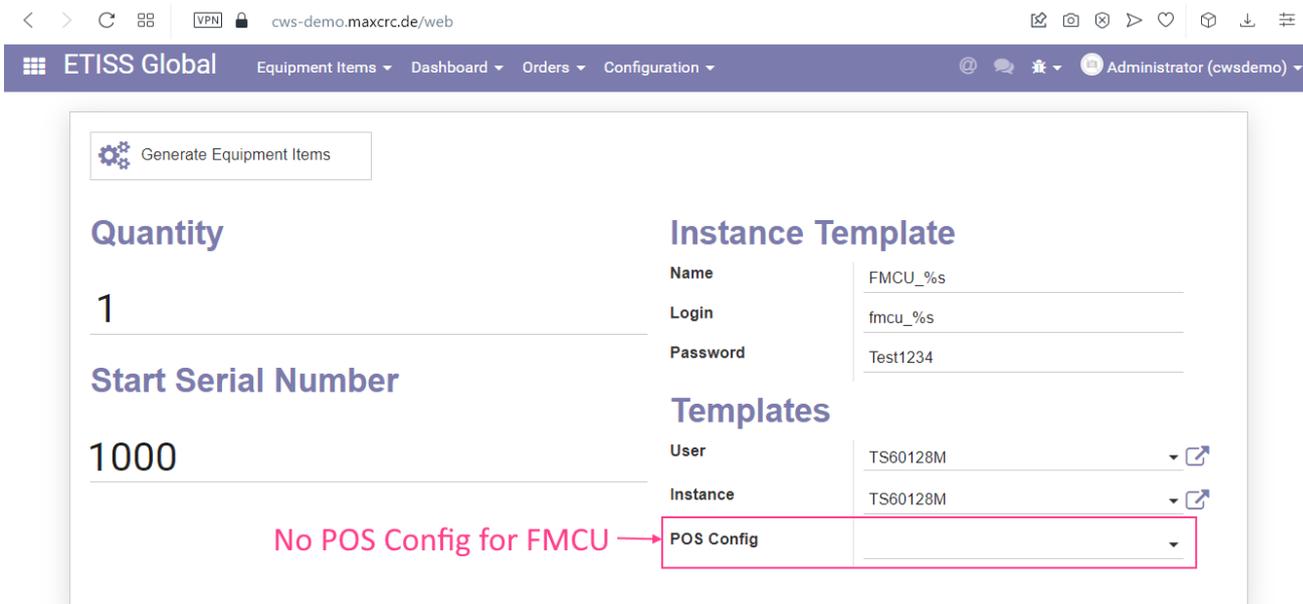

Generate Equipment Items

Quantity
1

Start Serial Number
1000

Instance Template


Name	FMCU_%s
Login	fmcu_%s
Password	Test1234

Templates

User	TS60128M
Instance	TS60128M
POS Config	

No POS Config for FMCU →

Once you've successfully generated FMCU, it'll look like this on the dashboard:

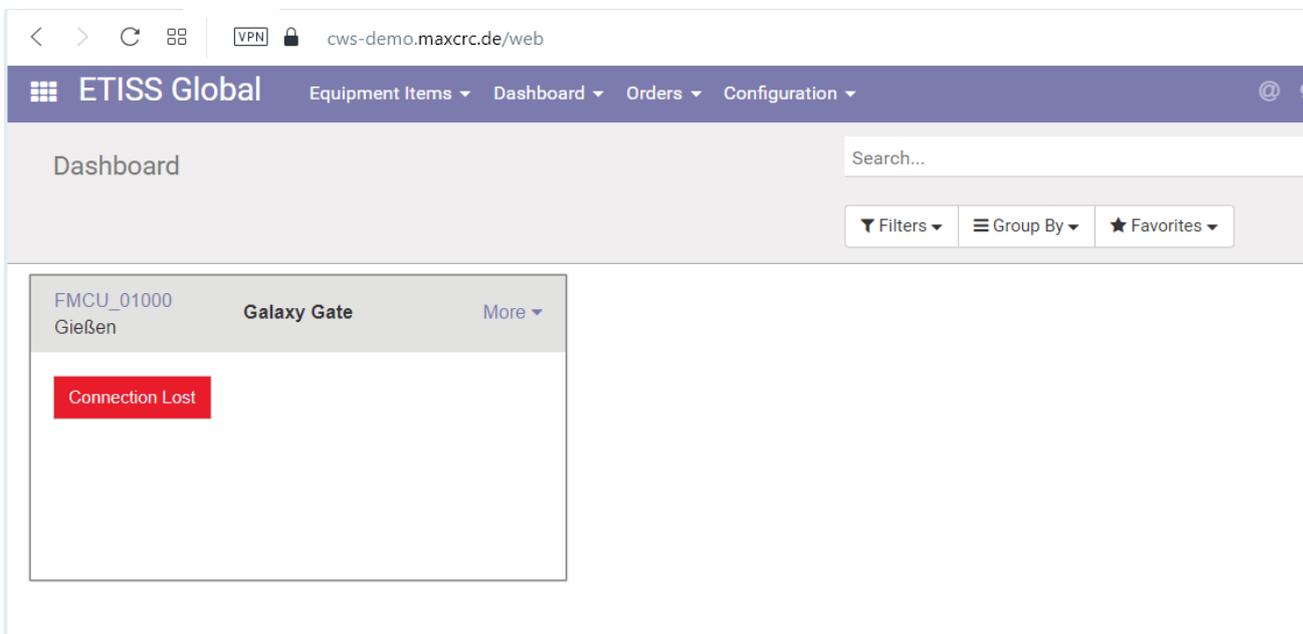

Dashboard


Search...

Filters Group By Favorites

FMCU_01000	Galaxy Gate	More
Gießen		
Connection Lost		


Creating a dispatcher

After that, login to the FMCU and create a new dispatcher to establish a connection between FMCU and the server.

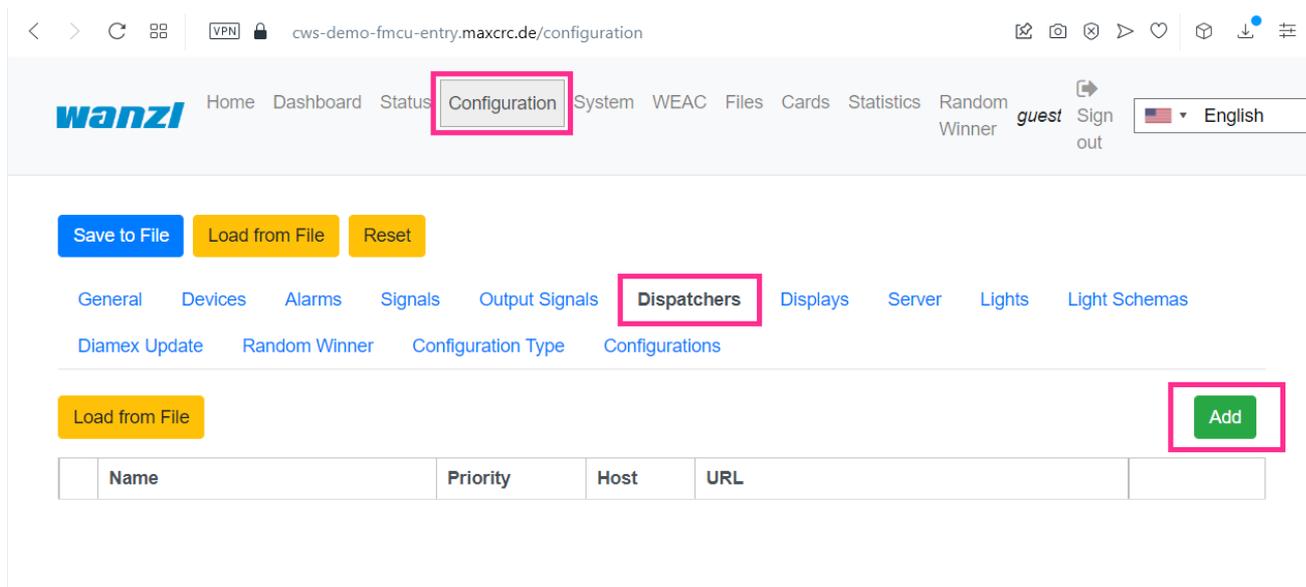

Enter the following parameters:

- **Dispatcher type:** ETISS CWS v1.

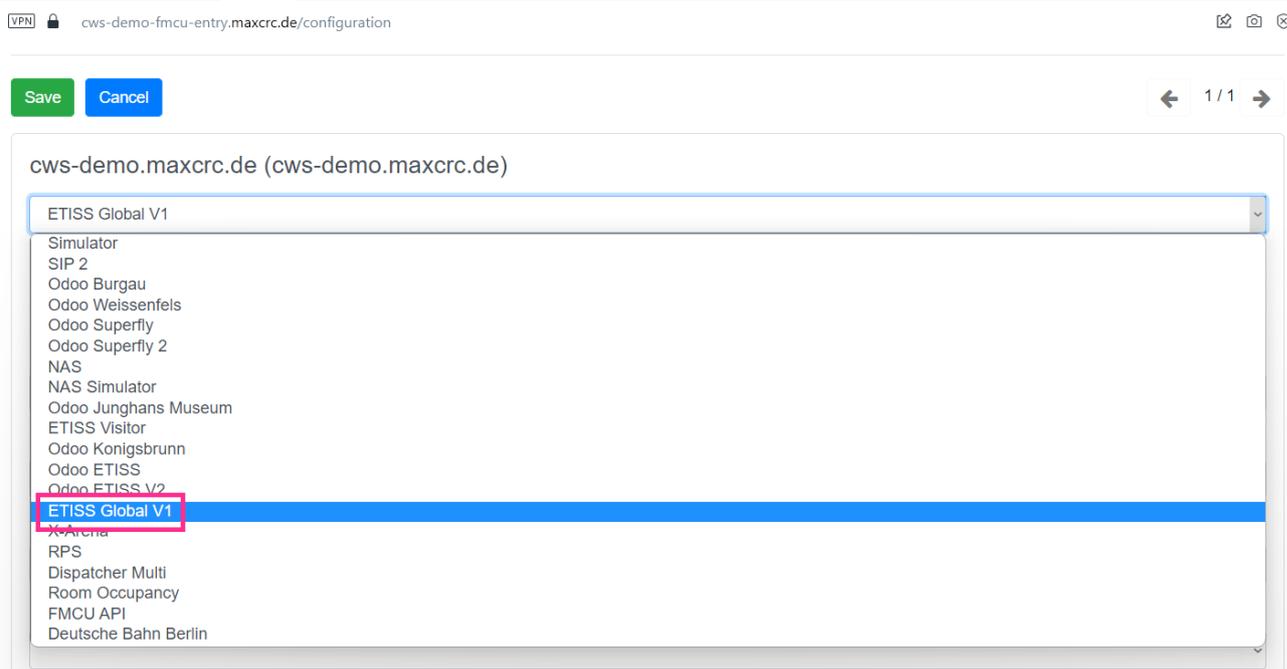

Set lock

URL *

https://cws-demo.maxcrc.de

Database *

cwsdemo

Serial *

33128

Physical Address (MAC)

b8:27:eb:e8:60:4e

Password

.....

- **Name:** The name of the dispatcher.
- **URL:** The URL of the server.
- **Database:** The database name.
- **Serial:** Serial number of the FMCU.
- **Password:** No need to fill in this field if you don't use "login/password" authorization. The FMCU's MAC address will be used as a password.

After filling in all these parameters click "Save" button at the top and save the dispatcher.

[General](#) [Devices](#) [Alarms](#) [Signals](#) [Output Signals](#) **[Dispatchers](#)** [Displays](#) [Server](#) [Ligt](#)

[Configuration Type](#) [Configurations](#)

cws-demo.maxcrc.de (cws-demo.maxcrc.de)


ETISS Global V1

Enabled

Poll interval, seconds *

Changing FMCU's user password

Next, open previously generated FMCU unit in the Odoo backend and change it's linked user password to FMCU's MAC address.

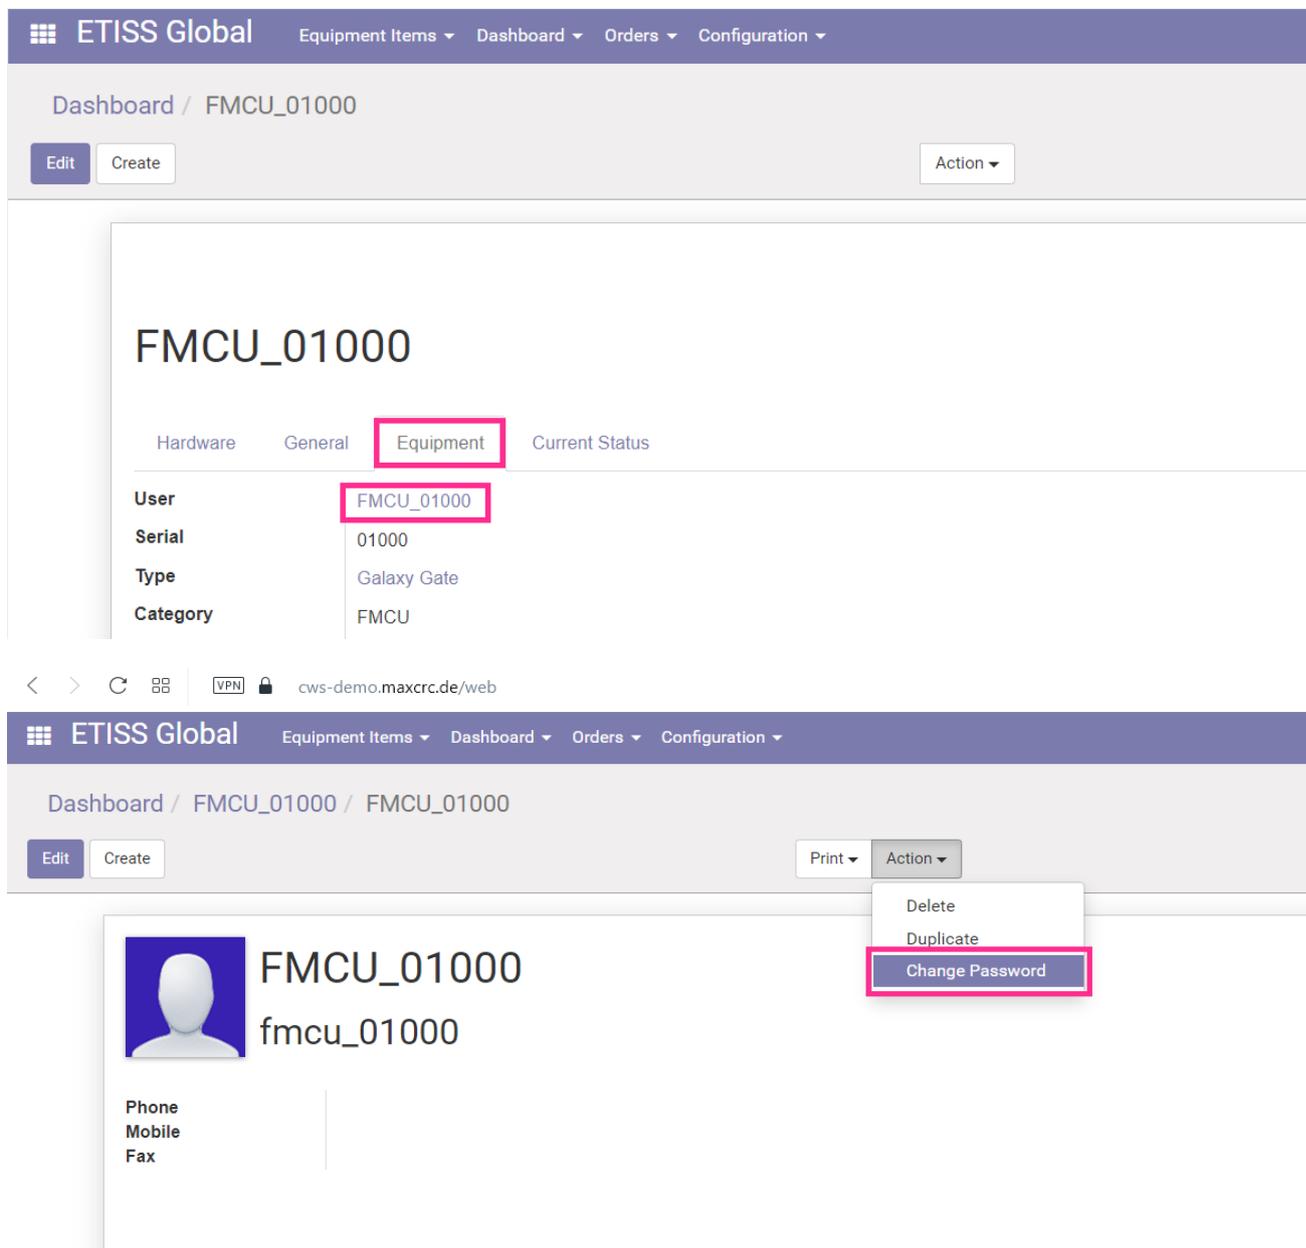

The image shows two screenshots from the Odoo backend interface. The top screenshot displays the configuration page for FMCU_01000, with the 'Equipment' tab selected and the 'User' field set to 'FMCU_01000'. The bottom screenshot shows the user management page for 'FMCU_01000', with the 'Change Password' option highlighted in the 'Action' dropdown menu.

ETISS Global Equipment Items ▾ Dashboard ▾ Orders ▾ Configuration ▾

Dashboard / FMCU_01000

Edit Create Action ▾

FMCU_01000

Hardware General **Equipment** Current Status

User	FMCU_01000
Serial	01000
Type	Galaxy Gate
Category	FMCU

< > ↻ 🗄️ VPN 🔒 cws-demo.maxcrc.de/web

ETISS Global Equipment Items ▾ Dashboard ▾ Orders ▾ Configuration ▾


Dashboard / FMCU_01000 / FMCU_01000

Edit Create Print ▾ Action ▾

- Delete
- Duplicate
- Change Password**

 **FMCU_01000**
fmcu_01000

Phone
Mobile
Fax

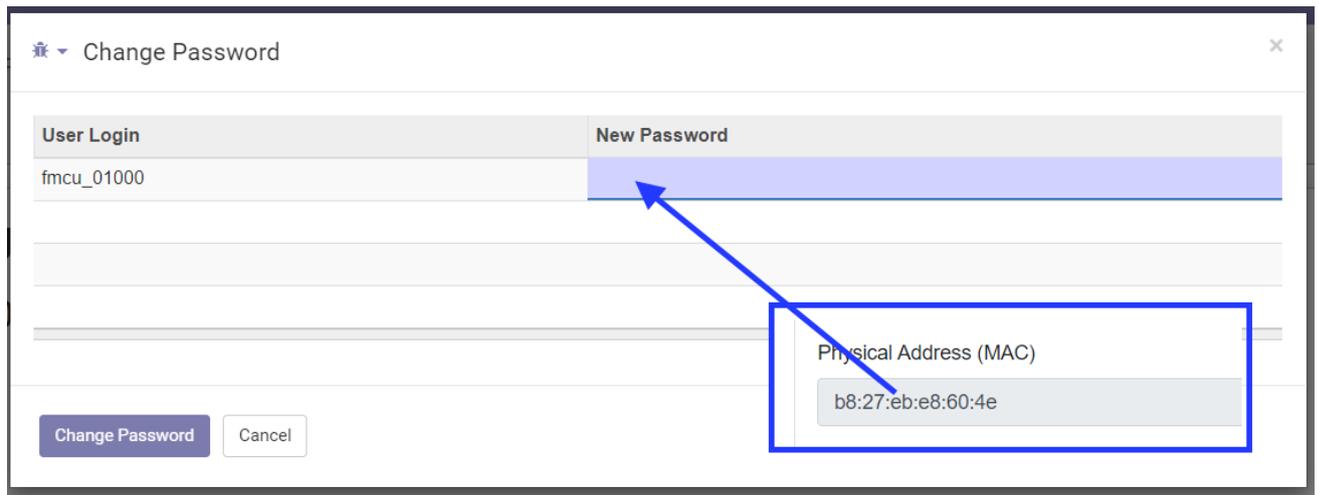

Change Password


User Login	New Password
fmcu_01000	

Physical Address (MAC)
b8:27:eb:e8:60:4e

Change Password Cancel

Testing dispatcher connection

After this, open "Dashboard" tab of the FMCU and check that dispatcher is connected correctly in the "Status" section.

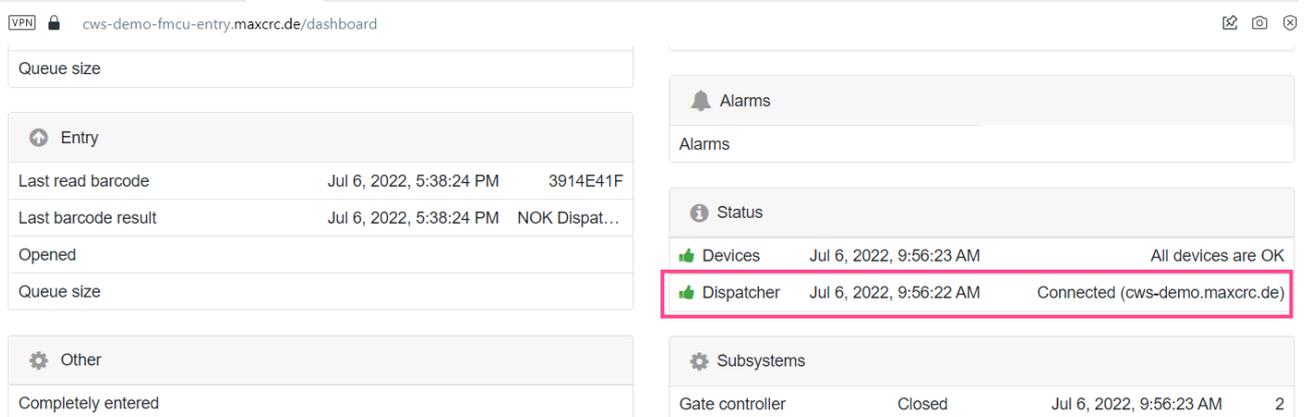

VPN cws-demo-fmcu-entry.maxcrc.de/dashboard

Queue size

Entry

Last read barcode	Jul 6, 2022, 5:38:24 PM	3914E41F
Last barcode result	Jul 6, 2022, 5:38:24 PM	NOK Dispat...
Opened		
Queue size		

Other

Completely entered

Alarms

Status

Devices	Jul 6, 2022, 9:56:23 AM	All devices are OK
Dispatcher	Jul 6, 2022, 9:56:22 AM	Connected (cws-demo.maxcrc.de)

Subsystems

Gate controller	Closed	Jul 6, 2022, 9:56:23 AM	2
-----------------	--------	-------------------------	---